



ISO Registered Company

MODELS C27 - C53

SPRING/DIAPHRAGM LINEAR PNEUMATIC ACTUATORS

SECTION I


I. DESCRIPTION AND SCOPE

Actuator models C27 and C53 are multi-spring, single acting, spring opposed, linear actuators used with Cashco sliding stem (linear), globe-style control valves. The “R” denotes “reverse” acting arrangement; the “D” denotes “direct” acting arrangement and are reversible in the field.

“D” = Direct action; on increasing air loading pressure, the actuator stem extends. Fail-safe position is with the stem retracted.

“R” = Reverse action; on increasing air loading pressure, the actuator stem retracts. Fail-safe position is with the stem extended.

When coupled with a globe-style control valve with pushdown to close action, a “D” - direct acting actuator will provide valve “fail open” action; “D” = ATC-FO. When coupled with an “R” - reverse acting actuator, will provide valve “fail closed” action; “R” = ATO-FC.

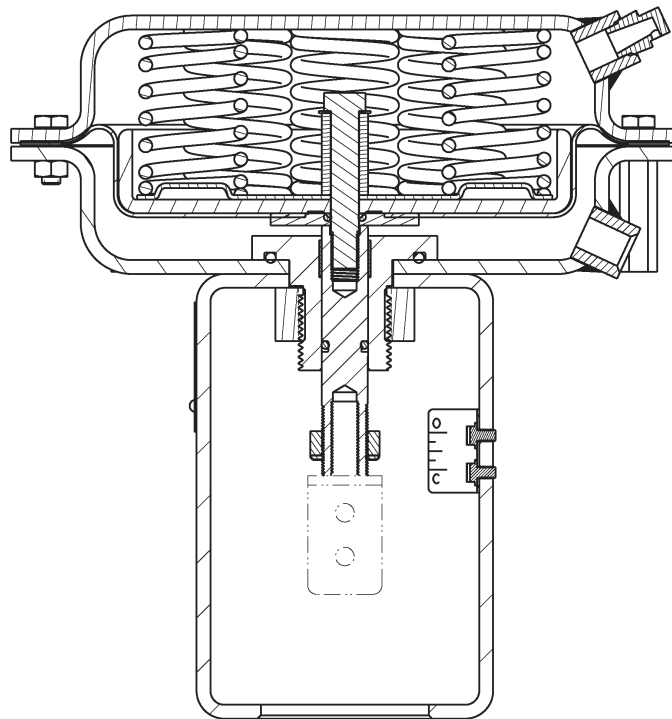

Shown w/ATO-FC Action

SECTION II

ABBREVIATIONS

II. REFERENCES

Refer to the Control Valve Technical Bulletin this actuator is unitized with for complete technical specifications.

Refer to following Installation, Operation & Maintenance Manuals (IOM's) for other devices that maybe mounted to C27-C53 actuators:

ATO-FC Air-to-Open, Fail Close
 ATC-FO Air-to-Close, Fail Open
 CCW Counter Clockwise
 CW Clockwise
 D or DIR Direct Acting
 R or REV .. Reverse Acting
 IAS Instrument Air Supply
 SIG Output Signal from Instrument
 LOAD Positioner Output Air Pressure
 V Vent

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

SECTION III

III. INSTALLATION

A. Orientation:

1. Recommended actuator major axis orientation with any model of Cashco control valve body, is upwards in a horizontal pipe.
2. Actuator axis may be horizontal when valve is in a vertical pipe.
3. Outdoors, all installations must be oriented any angle from horizontal-to-vertical.
4. Models C27 and C53 actuators are not recommended for installation oriented downwards in either "D" or "R" action.
5. In no case is additional weight to be applied to the actuator when installed in an orientation other than vertical; i.e. the valve is unsafe as a "step" to support personnel.

B. Air Supply:

1. Recommendation is that a desiccant dried, instrument quality air supply be used. Such a supply is recommended for outdoors installations, and is required in areas of freezing weather conditions.
2. If air supply contains moisture and/or lubricating oil, the air should be filtered with a coalescing type of filter prior to use in stroking the actuator.
3. Failure to remove moisture will cause corrosion to internals of casings (1,2).
4. Connections for the air supply are 1/4" female NPT. A suitable pipe thread sealant is recommended to be used when installing the pipe or tube fitting. Exhibit care to prevent the sealant from getting inside the tube/pipe.

SECTION IV

IV. MAINTENANCE

A. General:

1. Hereafter, all maintenance, disassembly, etc., is assumed to be done in an indoor shop.
2. An actuator assembly (AA) is unitized with a body assembly (BA). Reference should be made to the body IOM for instructions about the specified body assembly (BA) utilized with the actuator.
3. Where the body is not being removed from the actuator, special care **MUST** be exhibited to prevent valve stem rotation during any disassembly or reassemble for all valve models. Following this procedure will ensure not damaging seating surfaces.
4. Remove instrument tubing, airset, positioner, and any other accessory that maybe mounted on the control valve unit (AA, BA).
5. All indicated Item Numbers that are with respect to body (BA) IOM will be in parenthesis and underscored; i.e. (20); the same is true for positioner parts. All Item Numbers that are with respect to this manual are not underscored; i.e. (19).

B. Diaphragm Removal/Replacement:

NOTE: Actuator (AA) must be separated from the body (BA) in order to replace O-rings (15, 16 & 17) and diaphragm (7). Refer to specified body (BA) IOM for instructions to remove actuator (AA).

NOTE: If actuator (AA) has Handwheel refer to Step E and remove.

1. Secure the yoke (3) in a vise. Orient with the (AA) upwards.
2. All air pressure must be released from the actuator casings (1,2).
3. Take note of alignment of supply ports on top and bottom cases (1,2); used to assist with orientation when actuator is re-assembled.



WARNING

SPRINGS UNDER COMPRESSION! To relax spring compression remove case bolting equally in an alternating pattern. Ensure that all "short" bolting is removed first.

4. Loosen all flange bolting (18,19,20,21) two revolutions. Pry apart the casings (1,2) if “stuck” together.
5. In one revolution increments loosen all opposing nuts (20, 21) until the short bolting (18, 20) disengages and can be removed. Continue loosening long nuts (21) in the alternating, one revolution pattern ensuring that the casings (1,2) are being “pushed apart”, until the long bolting (19, 21) is disengaged and removed.

For Air-to-Close Construction:

6. Remove top case (1). Secure the flats on the lower end of the actuator stem (6) with a wrench. With a second wrench rotate the upstop flex nut (52) CCW and remove. **Note:** *Item (52) not used if actuator has handwheel.*
7. Re-secure the flats on stem and with a 9/16” socket wrench rotate bolt (12) CCW to remove.
8. Lift out lock washer (22), diaphragm washer (14) and O-ring (15). Remove diaphragm (7).

NOTE: *To replace stem bushing (39) and o-ring (17) refer to Step F.*

9. Install new diaphragm (7) over the diaphragm plate (8), convoluted side down. Align bolt holes in diaphragm with holes in lower case.
10. Install new o-ring (15) and reposition washers (14 & 22) on top of diaphragm.
11. Apply Loc-tite #242 or equal to stem bolt (12) threads, tighten stem bolt (12) to actuator stem (6) with 35 ft-lbs. torque.
12. Place upper case on lower case align top and bottom cases (1,2) per B.3 previous. Install long bolting (19) and nuts (21) equally spaced around the bolt circle - finger tighten.
13. Install remaining short bolts (18) and nuts (20). Torque all bolting to 75 in-lbs.
14. Thread upstop flex nut (52) [coupling assembly (33) for handwheel option] onto the actuator stem (6) and engage until just past stem flats. ***NOTE:*** *Upstop position cannot be set until actuator is mounted on the body and the bench range is set.*

For Air-to-Open Construction:

15. Remove top case (1). Place matchmarks on spring plate (9) to mark location of the springs (10). Remove springs (10).
16. Rotate upstop flex nut (52) CCW and remove. ***Note:*** *Item (52) not used if actuator has handwheel assembly.*
17. Secure the flats on stem (6) and with a 9/16” socket wrench rotate bolt (12) CCW to remove.
18. Remove lock washer (22) and spacer (5).
19. Remove spring plate (9) diaphragm plate (8), diaphragm (7), o-ring (15) and diaphragm washer (14).
20. Grasp stem (6) with hand and pull down thru the attachment hub (4). Remove o-ring (17) from stem (6). Lubricate new o-ring (17) with Lubri-plate or equivalent and install on stem (6).
21. From the top of the attachment hub (4) extract the stem bushing (39). Install new bushing.
22. Grasp stem (6) with hand and from below the lower case (2) push the stem up thru the attachment hub (4) until the bottom end of the stem aligns with the “C” close mark on the indicator plate (23).
23. Reposition diaphragm washer (14) “o-ring side up” and new o-ring (15) on top of attachment hub (4).
24. Place the diaphragm plate (8) inside the diaphragm (7) and carefully place both on the diaphragm washer (14). Align bolt holes in diaphragm with holes in lower case.
25. Align the spring plate (9) and stem spacer (5) over the center hole of the diaphragm plate (8).
26. Apply Loc-tite #242 to stem bolt (12) threads and insert down through stacked parts and rotate CW to engage threaded end of stem (6). Tighten stem bolt (12) to actuator stem (6) with 35 ft-lbs. torque.
27. Place springs (10) equally spaced around the spring plate (9). See Step 15 previous for matchmarks.

28. Refer to B.3 previous, align top and bottom cases (1,2). Install long bolting (19) and nuts (21) equally spaced around the bolt circle - finger tight.
29. Install remaining short bolts (18) and nuts (20). Torque all bolting to 75 in-lbs.
30. Thread upstop flex nut (52) [coupling assembly (33) for handwheel option] CW onto the actuator stem (6) and engage until just past stem flats. **NOTE:** *Upstop position cannot be set until actuator is mounted on the body and the bench range is set.*

C. Changing Action from Direct to Reverse; i.e. From ATC to ATO.

NOTE: *Not necessary to remove actuator assembly from body assembly, unless supplied with Handwheel Assembly.*

1. Follow steps from B.1 thru B.5 then continue as follows.

NOTE: DO NOT *rotate actuator stem (6) or body stem.*

2. Secure both stem jam nuts with wrenches and rotate the lower nut first down to thread base of the stem, followed by the upper nut.
3. Secure the flats on the lower end of the actuator stem (6) with a wrench. With a second wrench rotate the upstop flex nut (52) CCW 5 revolutions. (Required to help release spring preload when stem bolt (12) is removed.)
4. Remove top case (1). Re-secure the flats on stem and with a 9/16" socket wrench rotate bolt (12) CCW and remove.
5. Lift out lock washer (22), diaphragm washer (14) and O-ring (15). Remove diaphragm (7).
6. Remove diaphragm plate (8), spring plate (9), stem spacer (5) and springs (10).
7. With hand pressure - push stem (6) down to where bottom of stem (6) aligns with the "C" close mark on the indicator plate (23).

NOTE: DO NOT *rotate actuator stem (6) or body stem while plug is touching the seat surface.*

8. Re-assemble by placing diaphragm washer (14) "o-ring side up" and new o-ring (15) on attachment hub (4).

9. Place the diaphragm plate (8) inside the diaphragm (7) and carefully center both on the diaphragm washer (14). Align bolt holes in diaphragm with holes in lower case.
10. Align center holes in the spring plate (9) and stem spacer (5) with the center hole of the diaphragm plate (8).
11. Apply Loc-tite #242 to stem bolt (12) threads and insert down through stacked parts. Rotate CW to engage threaded end of stem (6). Secure the flats on the lower end of the actuator stem (6) with a wrench. Tighten stem bolt (12) to actuator stem (6) with 35 ft-lbs. torque.

NOTE: DO NOT *rotate actuator stem (6) or body stem while plug is touching the seat surface.*

12. Place springs (10) equally spaced around the spring plate (9).
13. Refer to B.3 previous, align top and bottom cases (1,2). Install long bolting (19) and nuts (21) equally spaced around the bolt circle - finger tight.
14. Install remaining short bolts (18) and nuts (20). Torque all bolting to 75 in-lbs.
15. Rotate upstop flex nut (52) CW up the actuator stem (6) until just past stem flats. **NOTE:** *Upstop position cannot be set until the bench range is set.*
16. Lift indicating washer up to bottom of stem (6) and thread both jam nuts up secure underneath the indicating washer.

D. Changing Action from Reverse to Direct; i.e. From ATO to ATC.

NOTE: *Not necessary to remove actuator assembly from body assembly, unless supplied with Handwheel Assembly.*

1. Follow steps from B.1 thru B.5, then continue as follows.
2. Remove top case (1) and springs (10).
3. Secure the flats on stem (6) and with a 9/16" socket wrench rotate bolt (12) CCW to remove.

NOTE: DO NOT *rotate actuator stem(6) or body stem while plug is touching the seat surface.*

4. Remove lock washer (22) and stem spacer (5).
5. Remove spring plate (9) diaphragm plate (8), diaphragm (7), o-ring (15) and diaphragm washer (14).
6. Grasp stem (6) with hand and push upwards to where indicating washer aligns with the "O" open mark on the indicator plate (23).
7. Place springs (10) equally spaced in bottom case (2) around the attachment hub (4).
8. Place stem spacer (5) on top of stem (6). Carefully position spring plate (9) over top the tops of the springs and spacer. Ensure the springs, spacer and spring plate are properly engaged.
9. Carefully set the diaphragm plate (8) on top of the spring plate (9).
10. Install diaphragm (7) over the diaphragm plate (8) and align with bolt holes in case (2). Insert new o-ring (15) into groove in the diaphragm washer (14).
11. Position diaphragm washer (14) "o-ring side down" and lock washer (22) on top of diaphragm (7).
12. Apply Loc-tite #242 to stem bolt (12) threads and insert down through stacked parts, rotate CW to engage threaded end of stem (6). Secure the flats on the lower end of the actuator stem (6) with a wrench. Tighten stem bolt (12) to actuator stem (6) with 35 ft-lbs. torque.

NOTE: DO NOT rotate actuator stem (6) or body stem while plug is touching the seat surface.

13. Refer to B.3 previous, align top and bottom cases (1,2). Install long bolting (19) and nuts (21) equally spaced around the bolt circle - finger tight.
14. Install remaining short bolts (18) and nuts (20). Torque all bolting to 75 in-lbs.
15. Rotate upstop flex nut (52) to align just past the flats on the stem (6). ***NOTE: Upstop position cannot be set until the bench range is set.***

E. To Remove Handwheel Assembly.

For Air to Close Construction:

1. Rotate locknut (36) CCW two revolutions. Rotate handwheel (31.2) CCW until it spins freely.
2. With hammer and pointed punch, tap the spring pin (35) out of the handwheel and remove handwheel.
3. Remove nuts (38) and lock washer (48) from cap screws (37). **DO NOT** let bracket assembly fall as cap screws are removed. Lift bracket assembly up such that the opening of the pivot brackets (26) slip over the posts on the coupling assembly (33). Set bracket assembly aside.
4. Provide a temporary air supply with an in-line adjustable airset regulator to the actuator connection.
5. Pressurize the actuator to a pressure level 2-3 psig (0.1-0.2 Barg) above the lower pressure level of the bench setting; i.e. for a 5-15 psig (.34 -1.0 Barg) range, set pressure at 7-8 psig (0.48-0.55 Barg).
6. Rotate the coupling assembly (33) CCW to remove and release all air pressure from actuator.

Return to Section IV. B. Step 1.

For Air to Open Construction:

1. Rotate locknut (36) CCW up to base of handwheel. Rotate handwheel (31.2) CW until it spins freely.
2. With hammer and pointed punch, tap the spring pin (35) out of the handwheel and remove handwheel.
3. Remove nuts (38) and lock washer (48) from cap screws (37). **DO NOT** let bracket assembly fall as cap screws are removed. Lift bracket assembly up such that the opening of the pivot brackets (26) slip over the posts on the coupling assembly (33). Set bracket assembly aside.
4. Rotate coupling assembly (33) CCW to remove.

Return to Section IV. B. Step 1.

**F. Bushing & O-ring Replacement ATC only.
(Extension of IV. B. Steps 1 - 8.)**

1. Remove diaphragm plate (8), spring plate (9) and stem spacer (5).
2. Place matchmarks on lower case (2) to mark location of the springs (10). Remove springs (10).
3. Grasp stem (6) with hand and pull down thru attachment hub (4). Remove o-ring (17) from stem (6). Lubricate new o-ring (17) with Lubri-plate or equivalent and install on stem (6).
4. From the top of the attachment hub (4) extract the stem bushing (39). Install new bushing.
5. Grasp stem (6) with hand and from below the lower case (2) push the stem back up thru the attachment hub (4) until the bottom end of the stem aligns with the "O" open mark on the indicator plate (23).
6. Reset springs (10) equally spaced around the lower case (2). See Step 2 previous for matchmarks.
7. Place stem spacer (5) on top of stem (6). Carefully position the spring plate (9) over the tops of the springs and spacer. Make sure the springs, spacer and spring plate are properly engaged.
8. Carefully set the diaphragm plate (8) on top of the spring plate (9).
9. Return to Section IV. B. Step 9.

SECTION V

V. TROUBLE SHOOTING GUIDE

NOTE: Cashco, Inc. recommends that if the casings are unbolted, the diaphragm, o-ring and TFE tape guide bushing should always be replaced.

1. Air Leakage; Reverse action units. Diaphragm removal/replacement per Section IV. MAINTENANCE in its entirety.

Symptom	Cause-Remedy
A. Leakage at diaphragm-to-lower casing flange or thru vent plug.	A1. Overpressure. Check source of air supply and determine if pressure is greater than indicated in Technical Bulletin; reset airset pressure as required. A2. Tighten flange bolting. A3. Faulty seal at stem-diaphragm-seal joint. Remove upper case - diaphragm. Install new o-ring (15).
B. Leakage from around stem and attachment hub.	B. Replace O-ring (17).

2. Air Leakage; Direct action units. Diaphragm removal/replacement per Section IV. MAINTENANCE in its entirety.

Symptom	Cause-Remedy
A. Leakage at diaphragm-to-upper casing joint or thru vent plug.	A1. Overpressure. Check source of air supply and determine if pressure is greater than indicated in Technical Bulletin; reset airset pressure as required. A2. Tighten flange bolting. A3. Faulty seal at stem-diaphragm-seal joint. Remove upper case - diaphragm washer. Install new o-ring (15).

3. Unstable stroking.

Symptom	Cause-Remedy
A. Intermittent screeching noise, jumpy motion; positioner/controller loading stable	A1. Excessive valve packing friction. Maintain valve packing per valve instructions. A2. Misalignment of valve stem-to-actuator stem; realign per valve instructions. A3. Excessive valve guide wear. Maintain valve per valve instructions. A4. Flow induced instability thru valve. Stabilize A5. Install high range spring in actuator; i.e. increase bench setting level.
B. Positioner output unstable; positioner input signal stable.	B1. Refer to the positioner IOM B2. Reduce positioner gain. B3. Re-calibrate positioner.
C. Controller output signal unstable.	C1. Stabilize controller by increasing proportional band, adding reset, adding rate, or combinations of all. C2. Unstable process. Snub process if able. Stabilize process.

4. Actuator can not deliver full stroke.

Symptom	Cause-Remedy
<p>A. Valve can not fully close for "Direct Action-ATC-FO" arrangement; or valve can not fully open for "Reverse Action-ATO-FC" arrangement.</p>	<p>A1. Insufficient air supply pressure. Check Technical Bulletin for proper air supply pressure. A2. Manual handwheel out of "neutral" position. A3. If equipped with a pneumatic positioner, positioner maybe in "bypass" mode. A4. Excessive pressure drop. Check technical bulletin of control valve for maximum allowable ΔP. A5. Bench range not properly calibrated. Check calibration or stem overall length and re-calibrate per valve instructions. Restriction in air supply line limiting volume available A6. Restriction in valve. Gain access to the valve's internals A7. for any debris.</p>
<p>B. Valve can not fully open for "Direct Action-ATC-FO" arrangement; or valve can not fully close for "Reverse Action-ATO-FC" arrangement.</p>	<p>B1. Insufficient air supply pressure. Check Technical Bulletin for proper air supply pressure. B2. Manual handwheel out of "neutral" position. B3. If equipped with a pneumatic positioner, positioner maybe in "bypass" mode. B4. Excessive pressure drop. Check technical bulletin of control valve for maximum allowable ΔP. B5. Bench range not properly calibrated. Check calibration or stem overall length and re-calibrate per valve instructions. Restriction in air supply line limiting volume available B6. Restriction in valve. Gain access to the valve's internals B7. for any debris.</p>

SECTION VI

VI. ORDERING INFORMATION NEW REPLACEMENT UNIT vs PARTS "KIT" FOR FIELD REPAIR

To obtain a quotation or place an order, please retrieve the Serial Number and Product Code that was stamped on the metal name plate and attached to the unit. This information can also be found on the Bill of Material ("BOM"), a parts list that was provided when unit was originally shipped. (Serial Number typically 6 digits). Product Code typical format as follows: (last digit is alpha character that reflects revision level for the product).

□□□□ - □□□□ 7 - □□□□□□□□□□

NEW REPLACEMENT UNIT:

Contact your local Cashco, Inc., Sales Representative with the Serial Number and Product code. With this information they can provide a quotation for a new unit including a complete description, price and availability.

PARTS "KIT" for FIELD REPAIR:

Contact your local Cashco, Inc., Sales Representative with the Serial Number and Product code. Identify the parts and the quantity required to repair the unit from the "BOM" sheet that was provided when unit was originally shipped.



CAUTION

Do not attempt to alter the original construction of any unit without assistance and approval from the factory. All purposed changes will require a new name plate with appropriate ratings and new product code to accommodate the recommended part(s) changes.


NOTE: *Those part numbers that have a quantity indicated under "Spare Parts" in column "A" reflect minimum parts required for inspection and rebuild, - "Soft Goods Kit". Those in column "B" include minimum trim replacement parts needed plus those "Soft Goods" parts from column "A".*

If the "BOM" is not available, refer to the cross-sectional drawings included in this manual for part identification and selection.

A Local Sales Representative will provide quotation for appropriate Kit Number, Price and Availability.


The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such product at any time without notice. Cashco, Inc. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Cashco, Inc. product remains solely with the purchaser.

C27 Actuator ATC - FO Action

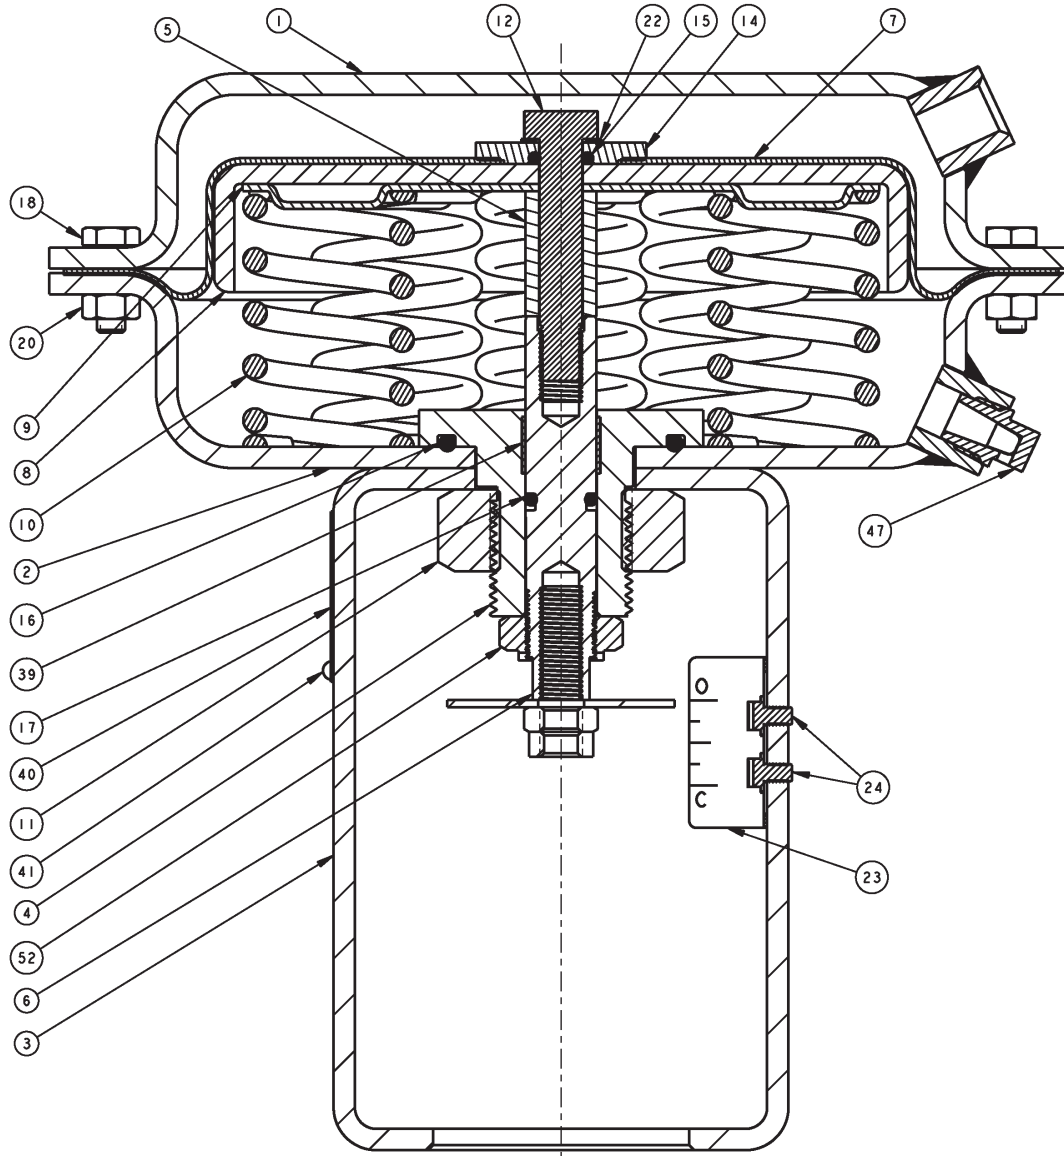


<u>Item No.</u>	<u>Description</u>	
1	Case - Top	
2	Case - Bottom	
3	Yoke	
4	Attachment Hub	
5	Stem Spacer	
6	Stem	
7	Diaphragm	‡
8	Diaphragm Plate	
9	Spring Plate	
10	Spring	
11	Hub Nut	
12	Stem Bolt	
14	Diaphragm Washer	
15	Diaphragm Washer O-ring	‡
16	Attachment Hub O-ring	‡
17	Stem O-ring	‡
18	Case Bolts - Short	
20	Case Nut - Short	
22	Stem Lock Washer	
23	Indicator Plate	
24	Indicator Plate Screw	
39	Stem Teflon Bushing	‡
40	Name Plate	
41	Drive Screw	
47	Vent Plug	
52	Stem Stop Nut	
Not Shown		
19	Case Bolts - Long	
21	Case Nuts - Long	
49	Warning Plate	
	(Item number for Indicating Washer is unique to Model)	
‡	Recommended replacement parts.	

C27 Actuator ATO - FC Action

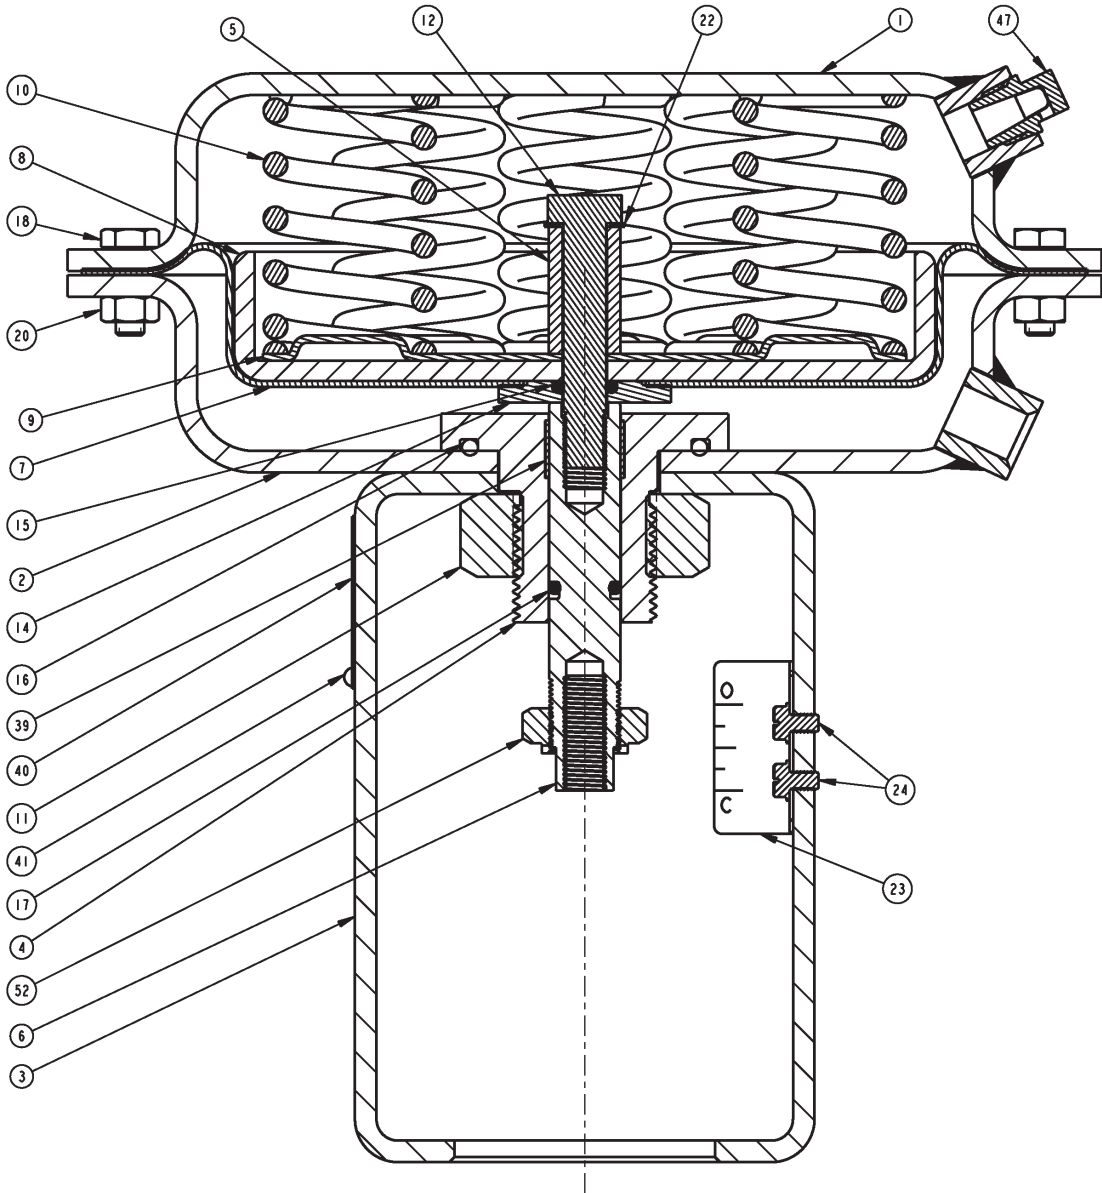


<u>Item No.</u>	<u>Description</u>		<u>Item No.</u>	<u>Description</u>	
1	Case - Top		18	Case Bolts - Short	
2	Case - Bottom		20	Case Nut - Short	
3	Yoke		22	Stem Lock Washer	
4	Attachment Hub		23	Indicator Plate	
5	Stem Spacer		24	Indicator Plate Screw	
6	Stem		39	Stem Teflon Bushing	‡
7	Diaphragm	‡	40	Name Plate	
8	Diaphragm Plate		41	Drive Screw	
9	Spring Plate		47	Vent Plug	
10	Spring		52	Stem Stop Nut	
11	Hub Nut		Not Shown		
12	Stem Bolt		19	Case Bolts - Long	
14	Diaphragm Washer		21	Case Nuts - Long	
15	Diaphragm Washer O-ring	‡	49	Warning Plate	
16	Attachment Hub O-ring	‡	‡	Recommended replacement parts.	
17	Stem O-ring	‡			

C53 Actuator ATC - FO Action

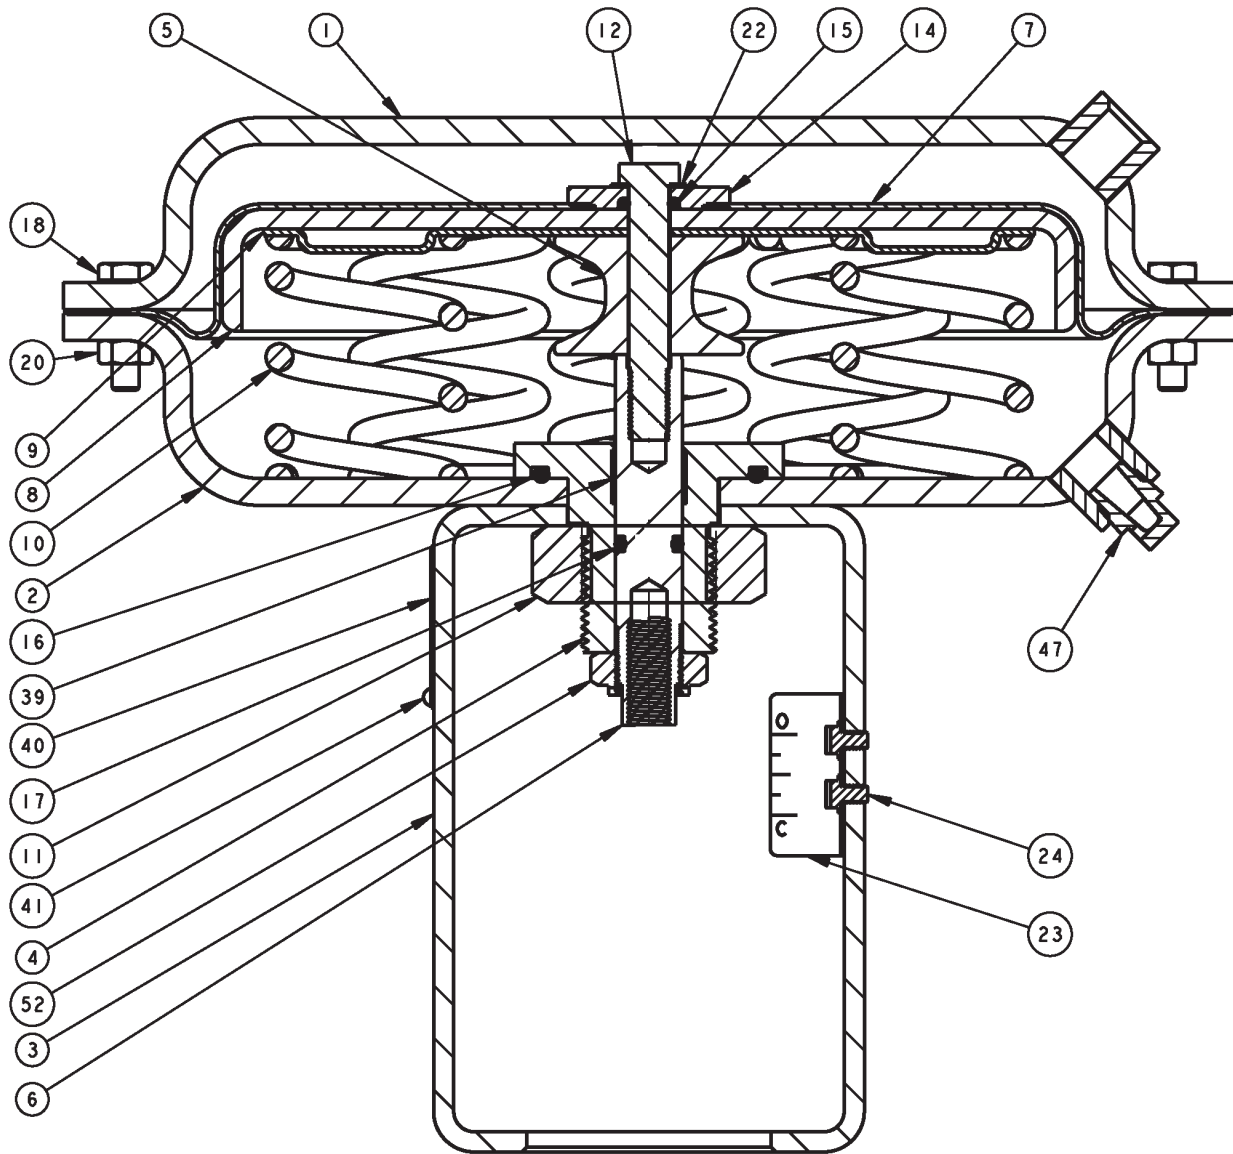


<u>Item No.</u>	<u>Description</u>	
1	Case - Top	
2	Case - Bottom	
3	Yoke	
4	Attachment Hub	
5	Stem Spacer	
6	Stem	
7	Diaphragm	‡
8	Diaphragm Plate	‡
9	Spring Plate	
10	Spring	
11	Hub Nut	
12	Stem Bolt	
14	Diaphragm Washer	
15	Diaphragm Washer O-ring	‡
16	Attachment Hub O-ring	‡
17	Stem O-ring	‡
18	Case Bolts - Short	
20	Case Nut - Short	
22	Stem Lock Washer	
23	Indicator Plate	
24	Indicator Plate Screw	
39	Stem Teflon Bushing	‡
40	Name Plate	
41	Drive Screw	
47	Vent Plug	
52	Stem Stop Nut	
Not shown		
19	Case Bolts - Long	
21	Case Nuts - Long	
49	Warning Plate	
‡	Recommended replacement parts.	

C53 Actuator ATO - FC Action

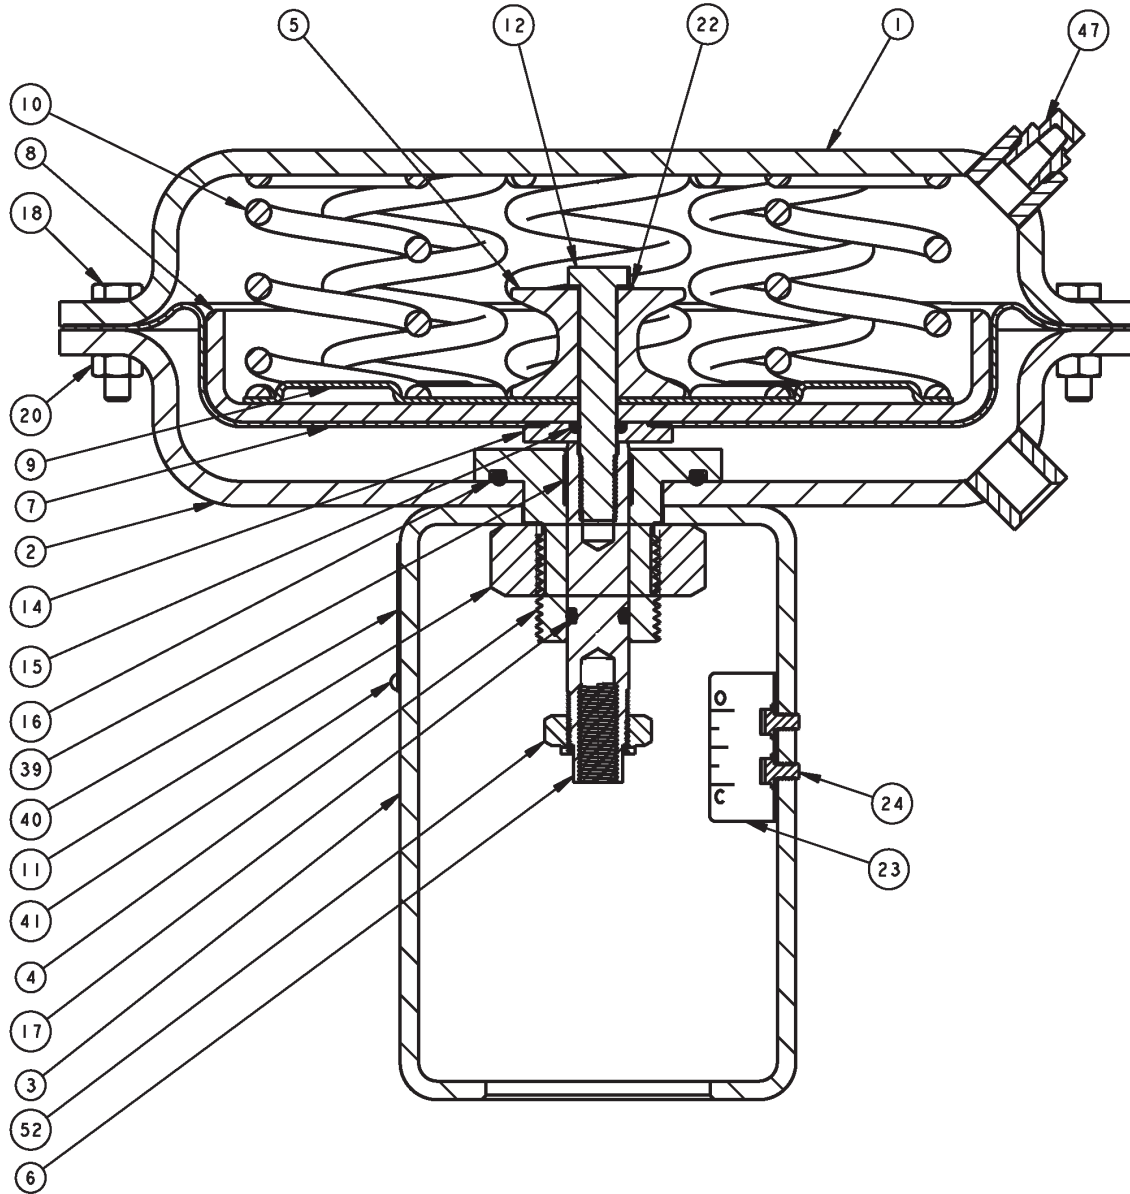

<u>Item No.</u>	<u>Description</u>		<u>Item No.</u>	<u>Description</u>	
1	Case - Top		18	Case Bolts - Short	
2	Case - Bottom		20	Case Nut - Short	
3	Yoke		22	Stem Lock Washer	
4	Attachment Hub		23	Indicator Plate	
5	Stem Spacer		24	Indicator Plate Screw	
6	Stem		39	Stem Teflon Bushing	‡
7	Diaphragm	‡	40	Name Plate	
8	Diaphragm Plate		41	Drive Screw	
9	Spring Plate		47	Vent Plug	
10	Spring		52	Stem Stop Nut	
11	Hub Nut		Not shown		
12	Stem Bolt		19	Case Bolts - Long	
14	Diaphragm Washer		21	Case Nuts - Long	
15	Diaphragm Washer O-ring	‡	49	Warning Plate	
16	Attachment Hub O-ring	‡	‡	Recommended replacement parts.	
17	Stem O-ring	‡			

Handwheel Assembly

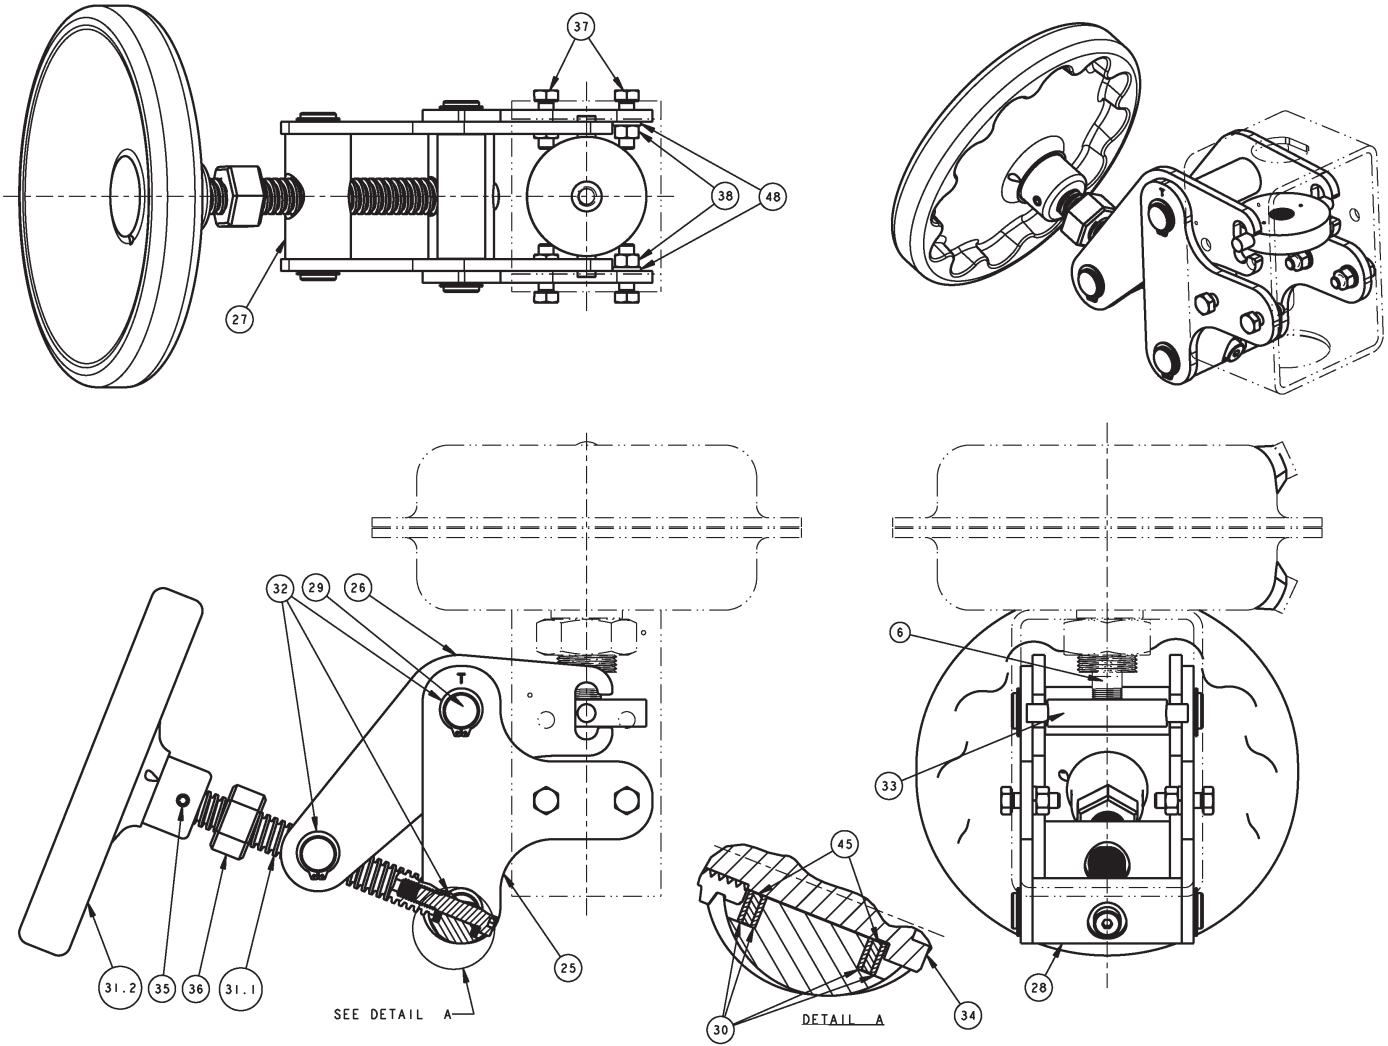

<u>Item No.</u>	<u>Description</u>
25	Fixed Bracket
26	Pivot Bracket
27	Threaded Pin
28	Thrust Pin
29	Rocker Pin
30	Thrust Washer
31	Handwheel Assy
32	Retaining Ring
33	Coupling Assy

<u>Item No.</u>	<u>Description</u>
34	Shoulder Bolt
35	Pin (Spring)
36	Lock Nut
37	Cap Screw
38	Nut
45	Handwheel Washer
48	Lock Washer

MODEL 48

SPRING/DIAPHRAGM ROTARY ACTUATORS

SECTION I

I. DESCRIPTION AND SCOPE

Models 48D and 48R are multi-spring, single acting, spring opposed, rotary actuators used with Cashco rotary control valves. Regardless of final installed failure action, the actuator is always pressurized on "top" of the traveling diaphragm plate.

Cashco has adopted a convention as follows in identifying its rotary actuators:

- "D" = Direct Action = ATC-FO Action
- "R" = Reverse Action = ATO-FC Action

The Model 48 actuator is field reversible by arrangement of actuator with respect to valve stem and valve plug/disc orientation. Some disassembly is required, but no new parts are required.

Reference the technical bulletin of the valve body these actuators are unitized with for operating/installation/selection specifications; i.e. available bench settings, strokes, etc.

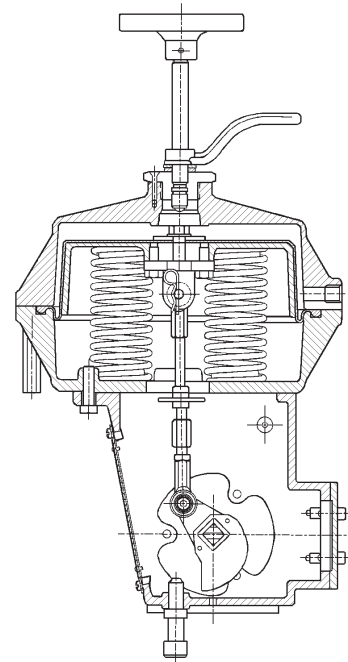



Figure 1
Model 48 Actuator

II. MODEL NUMBERING

SECTION II

The basic Model Number identifies the actuator size and action. To identify a unique Model Number, another series of 2-character modifiers is added to the basic number. This number will identify which basic valve body the actuator may be used on. See Table 1.

TABLE 1

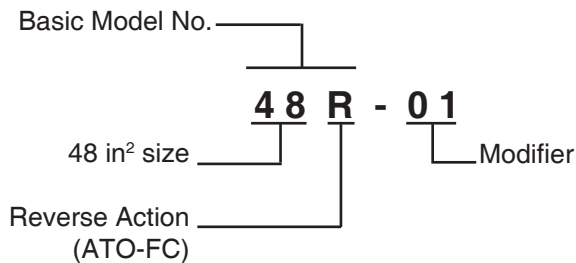

<u>Valve Product</u>	<u>Modifier Series No.</u>
Ranger QCT	-00 through -09
Premier EZO	-00 through -09
Premier Unlined	-00 through -09

ACTUATOR MODEL NO. vs. VALVE BODY MODEL
(Model 148 included for clarity)

Full Actuator Model No.		Available Bench Settings		Air Supply Pressure		Unitized Products *
Basic Actuator Model No.	Modifier Number	psig	(Barg)	psig	(Barg)	
48R or 48D	-01	5-15	(.34-1.03)	20	(1.4)	1"-2" (DN25-50) Ranger QCT 3"-4" (DN80-100) Premier EZO or Premier Unlined
148R or 148D	-01	5-13	(.34-0.90)	20	(1.4)	3"-4" (DN80-100) Ranger QCT 6" (DN150) Premier EZO or Premier Unlined
148R or 148D	-02	10-26	(.69-1.79)	36	(2.5)	4"-8" (DN100-200) Ranger QCT, 10" (DN250) Premier EZO
148R or 148D	-03	7.5-19.5	(.52-1.34)	27	(1.9)	8" (DN200) Premier EZO, 8"-10" (DN200-250) Premier Unlined

* Metric body size in parenthesis.

SECTION III

III. INSTALLATION

A. Orientation:

1. Recommended actuator major axis orientation with any model of Cashco rotary control valve is upwards with the valve in a horizontal pipe and the valve stem also horizontal; i.e. position "A" for ATO-FC, or position "B" for ATC-FO.
2. Both Ranger QCT and Premier EZO/Unlined control valve products incorporate an extended

valve body bonnet and a mounting yoke to allow the actuator to be far enough away from the valve body or mounting flanges to incorporate a minimum of 2" (50 mm) thickness of insulation. It should not be necessary to install thermal insulation to any portion of Model 48 actuator. The maximum ambient temperature for installation is 180°F (83°C); the minimum ambient temperature is -20°F (-29°C).

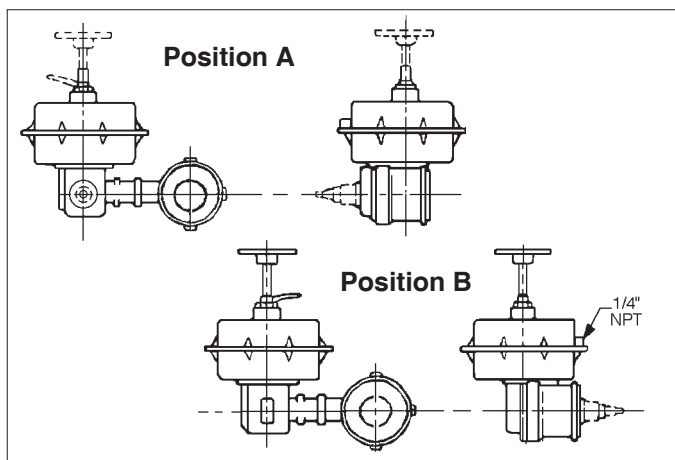


FIGURE 2: Mounting position of Ranger QCT to Model 48 Actuator with Model 73N-B P/P Positioner.

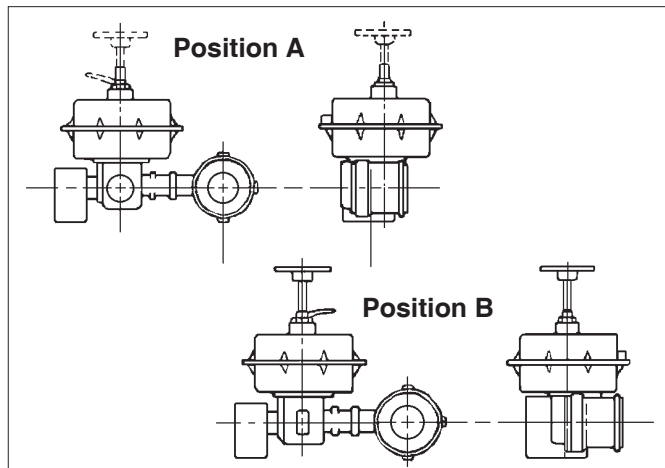


FIGURE 3: Mounting position of Ranger QCT to Model 48 Actuator w/Model 9540R or Smart Positioners.

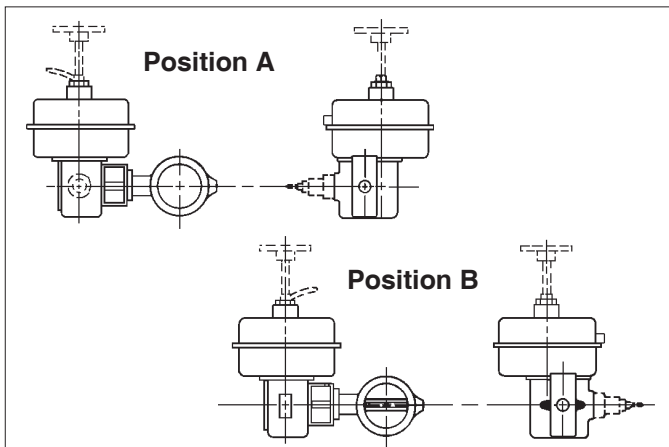


FIGURE 4: Mounting position of Premier EZO or Premier Unlined to Model 48 Actuator with Model 73N-B P/P Positioner

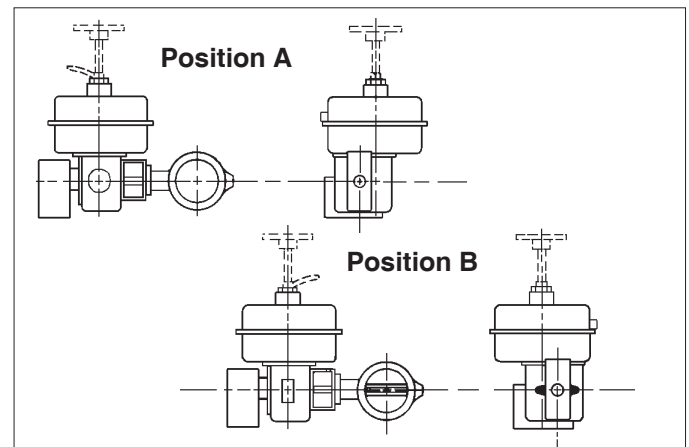


FIGURE 5: Mounting position of Premier EZO or Premier Unlined to Model 48 Actuator with Models 9540R or Smart Positioners

3. A 1/4"–NPT female connection for pneumatic LOAD is located on the side of the actuator's upper diaphragm casing near the casing flange joint. Reference specific Ranger-TB or Premier-TB for location of the connection.
4. Reference the valve body instructions — IOM-Ranger, IOM-Premier EZO or IOM-Premier Unlined — for additional instructions on installing unit in the process piping.

B. Air Supply:

1. Recommendation is that a desiccant dried, instrument quality air supply be used. Such a supply is recommended for outdoor installations, and is required in areas of freezing weather conditions.

2. If air supply contains moisture and/or lubricating oil, the air should be filtered with a coalescing type of filter prior to use in stroking the actuator.
3. Connection for the air loading pressure is 1/4" female NPT. A suitable pipe thread sealant is recommended to be used when installing the pipe or tube fitting. Exhibit care to prevent the sealant from getting inside the tube/pipe.
4. If an alternate gaseous fluid is used as a source of loading pressure (i.e. natural gas, nitrogen, etc.), this gas MUST NOT BE CORROSIVE to the aluminum casing material.

SECTION IV

IV. OPERATION

A. General:

1. Actuators supplied with 5-13 psig (0.34-0.90 Barg) benchset range are designed to operate with or without a positioner. A 3-15 psig (0.21-1.03 Barg) instrument output signal would be required to operate without a positioner.
2. On larger valve body sizes the benchset range is essentially 1.5–2.3 times that of the 5-13 psig (0.34-0.90 Barg); i.e. 7.5-19.5 psig (0.52-1.34 Barg) or 10-26 psig (0.69-1.79 Barg) for Model 148's. Either a signal booster or a positioner will be required for full rotation (0°–90°) by the actuator.
3. If an "installed characteristic" other than the "inherent characteristic" is desired, a positioner plus a "characterization cam" is required. The inherent characteristic of Ranger QCT control valves is linear; for Premiers the inherent characteristic is equal percent.
4. See Tables 2 through 4 for available actuator models with benchset ranges per valve type and body size. (**Note: Model 148 actuators included for clarity.**) Proper **MAXIMUM** air supply pressures are also indicated.

**TABLE 2
RANGER QCT
ACTUATOR BENCHSET RANGES**

Valve Body Size In. (DN)	Actuator Model *	Failure Action	Benchset Range psig (Barg)	Supply Pressure psig (Barg)	Qty of Range Springs
1", 1-1/2" & 2" (25, 40 & 50)	48R-01	ATO-FC	5-15	20	6
	48D-01	ATC-FO	(.34-1.03)	(1.4)	
3" & 4" (80 & 100)	148R-01	ATO-FC	5-13	20	4
	148D-01	ATC-FO	(.34-.90)	(1.4)	
4", 6" & 8" (100,150, & 200)	148R-02	ATO-FC	10-26	36	8
	148D-02	ATC-FO	(.69-1.79)	(2.5)	

**TABLE 3
PREMIER EZO
ACTUATOR BENCHSET RANGES**

Valve Body Size In. (DN)	Actuator Model *	Failure Action	Benchset Range psig (Barg)	Supply Pressure psig (Barg)	Qty of Range Springs
3" & 4" (80 & 100)	48R-01	ATO-FC	5-15	20	6
	48D-01	ATC-FO	(.34-1.03)	(1.4)	
6" (150)	148R-01	ATO-FC	5-13	20	4
	148D-01	ATC-FO	(.34-.90)	(1.4)	
8" (200)	148R-03	ATO-FC	7.5-19.5	27	6
	148D-03	ATC-FO	(.52-1.34)	(1.9)	
10" (250)	148R-02	ATO-FC	10-26	30	8
	148D-02	ATC-FO	(.69-1.79)	(2.1)	

**TABLE 4
PREMIER UNLINED
ACTUATOR BENCHSET RANGES**

Valve Body Size In. (DN)	Actuator Model *	Failure Action	Benchset Range psig (Barg)	Supply Pressure psig (Barg)	Qty of Range Springs
3" & 4" (80 & 100)	48R-01	ATO-FC	5-15	20	6
	48D-01	ATC-FO	(.34-1.03)	(1.4)	
6" (150)	148R-01	ATO-FC	5-13	20	4
	148D-01	ATC-FO	(.34-.90)	(1.4)	
8", 10" (200, 250)	148R-03	ATO-FC	7.5-19.5	27	6
	148D-03	ATC-FO	(.52-1.34)	(1.9)	

* Model 148 included for clarity.

SECTION V

V. MAINTENANCE

A. General:

1. Hereafter, all maintenance, disassembly, etc., is assumed to be done in an indoor shop.
2. Most actuators are a sub-assembly that is unitized with a body sub-assembly. Reference should be made to the IOM for the correct body utilized.
3. Where the body is not being disassembled, special care **MUST** be exhibited to prevent valve stem rotation during any disassembly or reassembly for all types of valves. Following this procedure will ensure not damaging seating surfaces.
4. Remove all instrument tubing and interconnected electrical wiring. Label "ends" to ensure proper reconnection.
5. All indicated Item Numbers that are with respect to IOM-Ranger, IOM-Premier EZO or IOM-Premier Unlined will be in parenthesis and underscored; i.e. (20); the same is true for Model 73N-B P/P positioner parts.
6. All Item Numbers that are with respect to this IOM-48 are not underscored; i.e. (19).
7. Item Numbers that relate to the Model 9540 or Smart positioners (PA) are in a double set of parenthesis and are underscored; i.e. (3).

B. Separation of Body Assembly (BA) from Actuator Assembly (AA):

1. Place completely joined valve assembly (AA) (BA) upon a flat work surface with sufficient room to move the individual sub-assemblies (AA) (BA) around. Place matchmarks on valve yoke (12), arm housing (4) and actuator lower casing (2) to use as references.
2. Remove cover plate (20) away from arm housing (4) by removing four machine screws (36).

3A. Units with Model 73N-B P/P Positioner or No Positioner, and No Travel Limit Switch:

- a. Using a 3/16" allen key wrench, remove the three cap screws (31) securing the dial lens (14), travel indicator dial (15) and coverplate (13).
- b. Remove cap screw (32) and lock tooth

washer (55) securing the bright orange-colored travel indicator (16) to the upper end of valve stem (Ranger (7), (Premier (3.2)) using a 7/32" allen key wrench. Remove travel indicator (16) off of protruding locator pin (51).

- c. If equipped with a Model 73N-B P/P positioner, remove the four cap screws (33) that secure the positioner assembly (PA) to the arm housing (4) using a 3/16" allen key wrench. Remove positioner assembly (PA) and feedback range spring (102). Loop a 6" piece of fine wire around the feedback linkage subassembly (72). Place one screw (33) back into a tapped opening. Pull wire taut and wrap around protruding screw (33) to keep the linkage (72) from interfering with further disassembly.

3B. Units with End-of-Shaft Model 9540R Positioners:

- a. Remove clear indicator cover (22) by removing two cap screws (A3).
- b. Remove red plastic pointer (34) by pulling outwards from hub of post-end screw (23).
- c. Make a matchmark on the characterization cam (24) at the point where the cam follower (31) touches. Using a wrench remove post-end screw (23) that secures characterization cam (24). Pull feedback lever (13) downwards; remove cam (24) and adhered to lock toothed washer (28) and shouldered washer (27).
- d. Remove the positioner unit (I/P) (P/P) from the baseplate (26) by removing cap screws (11) with lock washers (12) from side and back of baseplate (26).
- e. Remove the four cap screws (78) securing the bracket (76), baseplate (26) assembly and coverplate (13) to the arm housing (4).

3C. Units with End-of-Shaft Model 991 or PS2 I/P Positioners:

- a. Remove cap screws (31) securing the positioner mounting bracket (9) to coverplate (13).
- b. Set positioner/bracket assembly to the side.
- c. Remove set screw (16), washer (17) from end of valve stem (Ranger (7), (Premier (3.2)) securing carrier linkage (3) to stem.
- d. Remove linkage (3) from end of stem.

4. For ATO-FC valve action, it is necessary to remove the “stem windup”.
 - a. Rotate manual handwheel operator (MHWO) handwheel (58.1) approximately 1-3 revolutions CW (viewed from above handwheel) until interconnecting arm and stem linkage (5, 10) of actuator “relax”.
 - b. Pressurize actuator casing (1) only until the interconnecting arm and stem linkage (5,10) “relax”. **DO NOT OVER-PRESSURIZE.**

NOTE: Do not remove the drive coupling ((32)) unless required.

5. Remove ball bearing (18), both bearing flanges (19) and indicator spacer (17) over shaft-end (Ranger (7)), (Premier (3.2)).
6. For actuator with a handwheel (58), rotate handwheel CW (viewed from above), driving the arms (5) down until the shoulder bolt (40) clears the ears on the arm housing (4). If actuator does not include a handwheel (58), loosen jam nut (44) and, using a 9/16" open end wrench, rotate the hex portion of the push rod (10) until the shoulder bolt (40) clears the ears on the arm housing (4).
7. Remove lock nut (46) that secures shoulder bolt pin (40) through lever arms (5). Remove shoulder bolt pin (40).
8. Grasp lever arms and rotate stem (Ranger (7)), (Premier (3.2)) as required to pull down and away from the lower rod end-L.H. (9) to allow clearance to remove arms (5). Slide subassembly consisting of both arms (5), spacer (12) or characterization cam (Model 73N-B (12)), and two spring pins (50) outwards and away from the arm housing (4) and over shaft-end (Ranger (7)), (Premier (3.2)).
9. While securely holding the actuator assembly (AA) with an overhead sling support, and the body assembly (BA) to prevent movement, remove the four bolts (24) that secure the body yoke (12) to the actuator arm housing (4). Slide the actuator assembly (AA) over the stem-end (Ranger (7)), (Premier (3.2)). Lay body assembly (BA) aside.

C. Changing Actuator Mounting Position (With No Change in Failsafe Action).

1. Determine the desired mounting position of actuator assembly (AA) with respect to


valve body assembly (BA) from Figures 6-9, following pages.

2. The valve body/bonnet (1) to valve body yoke (12) can be rotated in four 90° increments around the centerline of the valve shaft (Ranger (7)) (Premier (3.2)).
3. Separate the actuator assembly (AA) from the body assembly (BA) as described in this Section, V.B.1. through V.B.9.
4. Determine if it is necessary to interchange packing studs (21) on Ranger or Premier Unlined, and yoke (12) attachment hex head cap screws (19) on Ranger or Premier Unlined per following:

Rotary Valve	Degrees Rotation Position Change	Packing Studs Yoke Attach Studs Switch of Position
Ranger, Premier Unlined	90°, 270°	Required
Premier EZO	180°	Not Required
	90°, 180°, 270°	Not Required


5. If required, remove both packing flange stud nuts (22) on Ranger or Premier Unlined, and any external live-loaded packing components (Ranger (27) (28) (29)), and set both aside carefully to prevent an “inadvertent mixing” of the component’s “stack-up”.
6. Place matchmarks between yoke (12) and valve bonnet/body (1). While holding yoke (12) with hand, remove two cap screws (19) and pull yoke (12) over end of stem (Ranger (7)) (Premier (3.2)) and set aside.
7. If necessary, remove studs (21) from Ranger or Premier Unlined body assembly (BA) and relocate/interchange as required.
8. Reposition yoke (12) back onto body bonnet (1), shifted/rotated the number of degrees required (i.e. 90°, 180° or 270°), using the matchmarks to guide to correct position. Secure yoke (12) to body bonnet (1) by engaging two cap screws (19). Torque per following:
 - 1" & 2" Rangers — 35-40 ft-lbs (47-54 N-m)
 - 3" & 4" Premiers, lined & unlined — 75-80 ft-lbs (101-108 N-m).
9. Reposition packing flange (Ranger (14)) (Premier Unlined (5)) over packing studs (21)

**FIGURE 6:
ORIENTATION – RANGER QCT ACTUATOR MOUNTING POSITIONS
WITH MODEL 73 P/P POSITIONER**

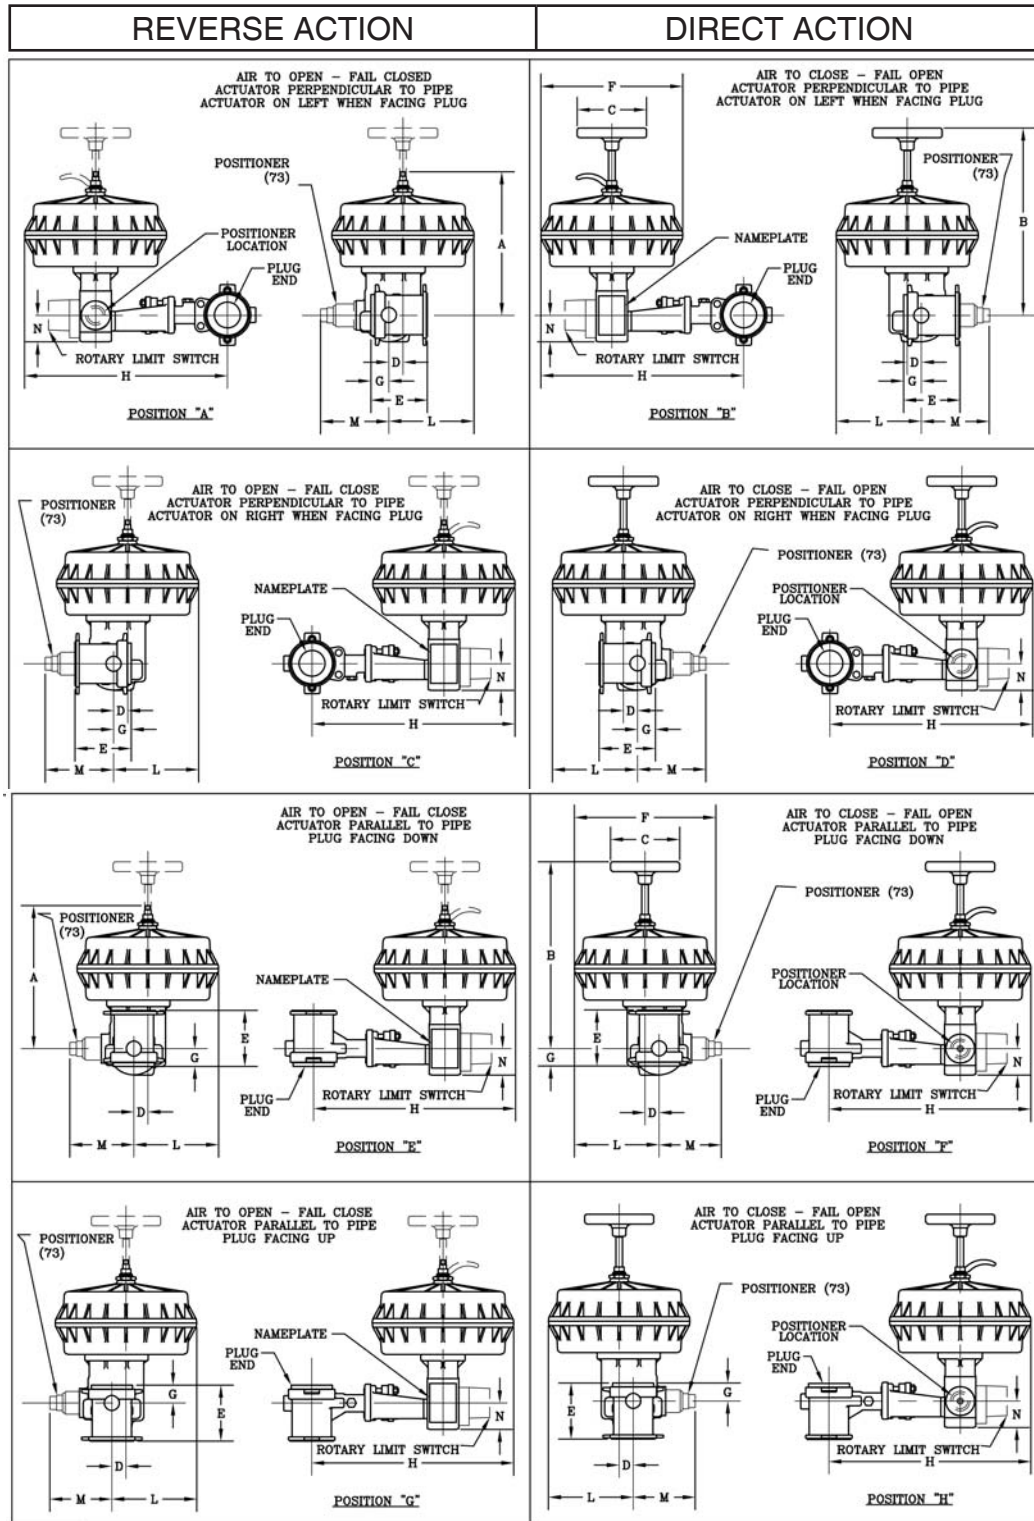

NOTES: 1. Flangeless valve design indicated; integral flanged units follow same orientation.
2. Dimension tables are included in the Ranger-TB.


**FIGURE 7:
ORIENTATION – RANGER QCT ACTUATOR MOUNTING POSITIONS
WITH MODELS 9540R P/P or 991 or PS2 I/P POSITIONERS**

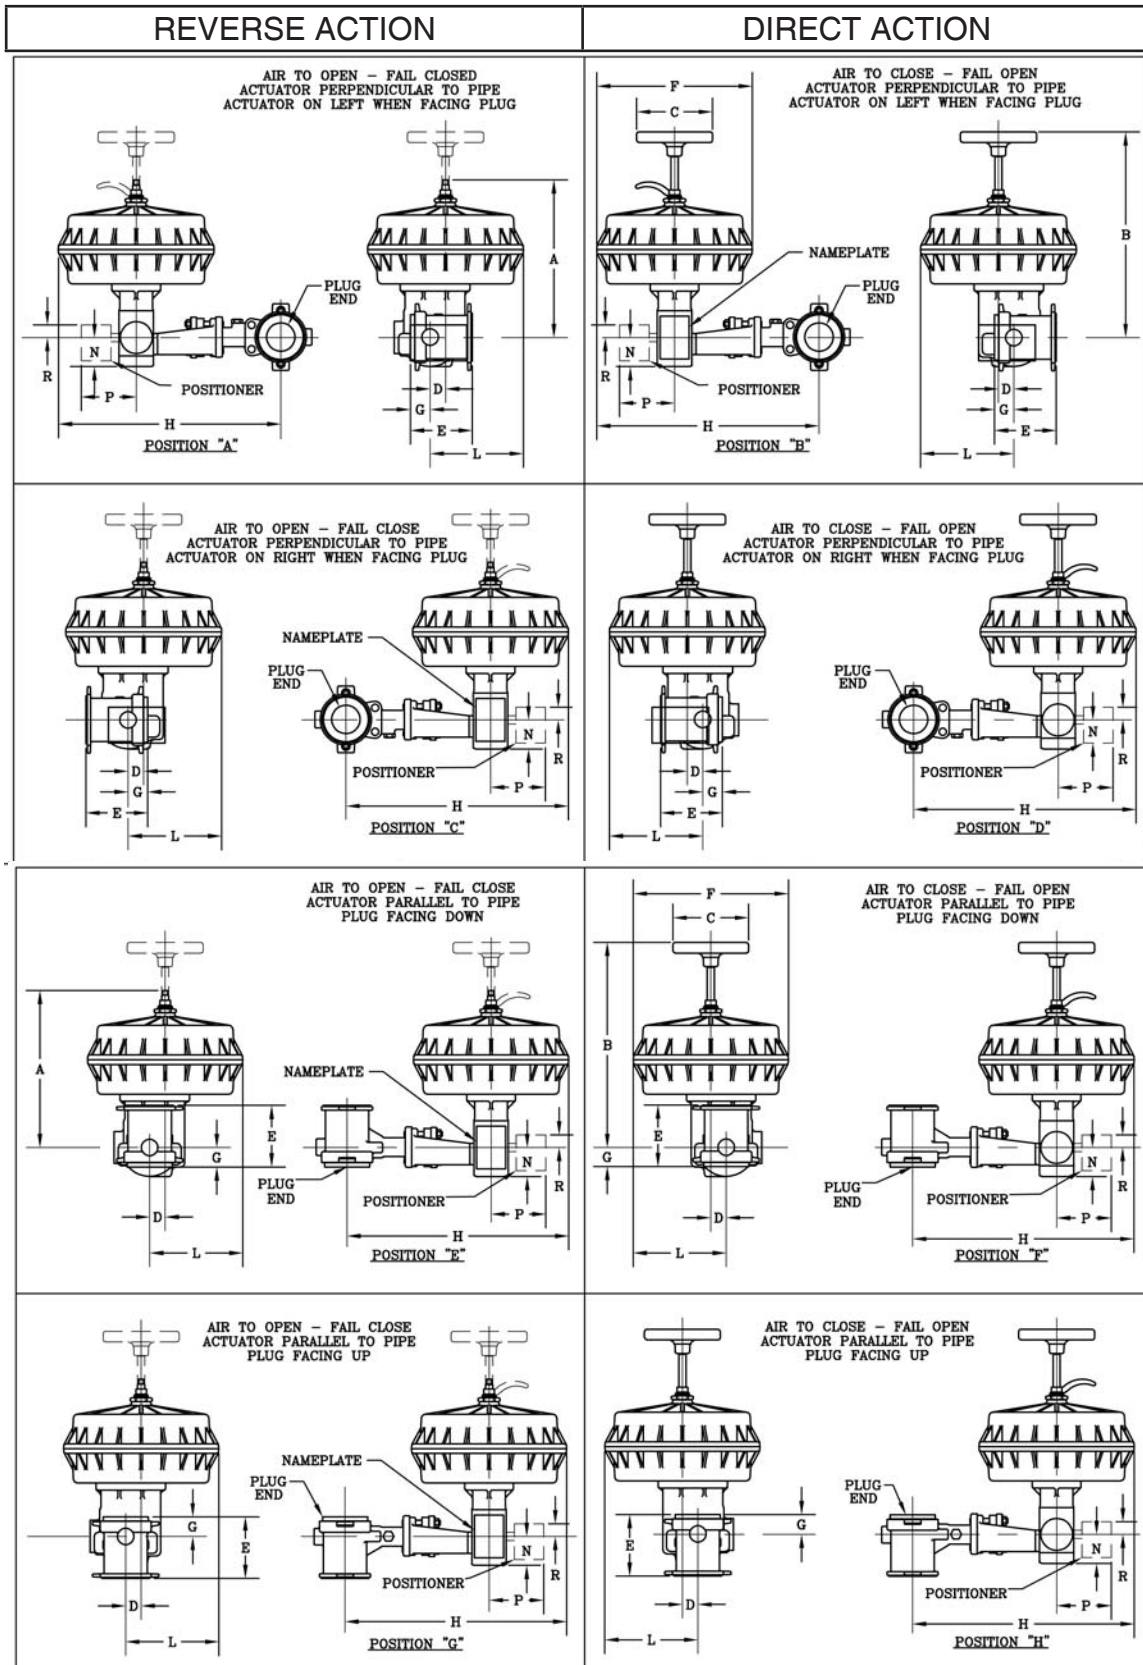

NOTES: 1. Flangeless valve design indicated; integral flanged units follow same orientation.
2. Dimension tables are printed in the Ranger-TB.


**FIGURE 8
PREMIER ACTUATOR MOUNTING POSITIONS – 73**

Position "A" is standard for fail closed action. Position "B" is standard for fail open action.
Position "C" and "D" covers vertical piping.

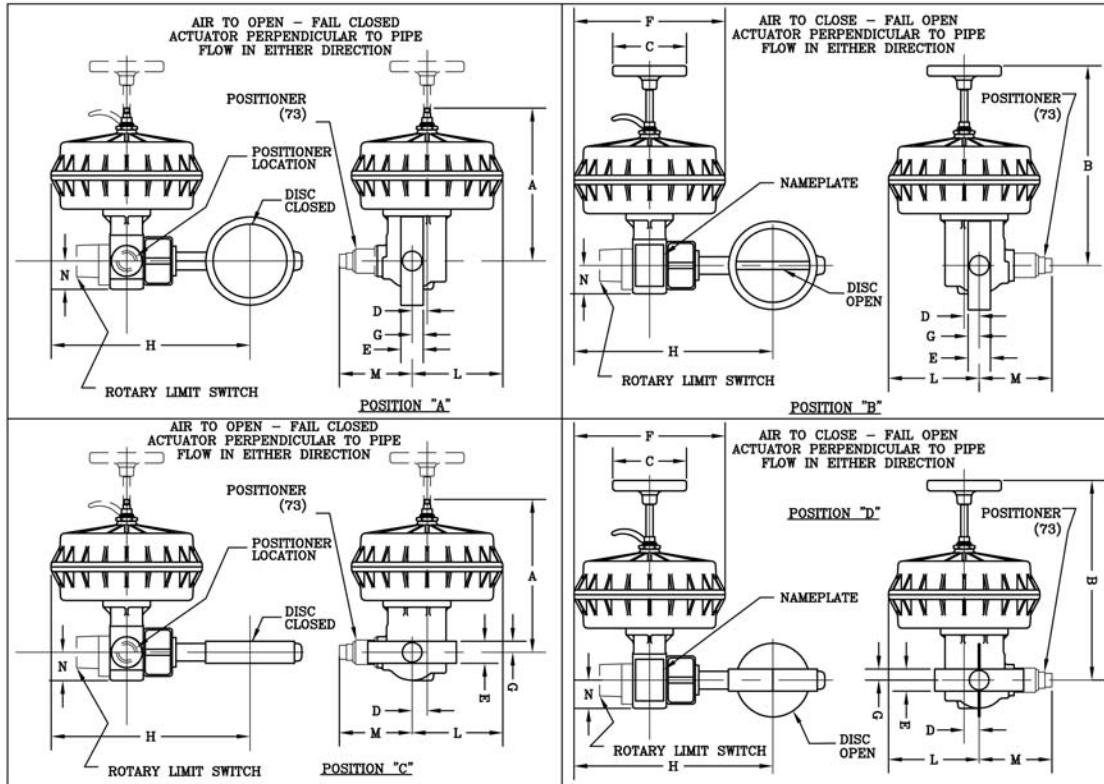

**FIGURE 9
PREMIER ACTUATOR MOUNTING POSITIONS – 9540R/991/PS2**

Position "A" is standard for fail closed action. Position "B" is standard for fail open action.
Position "C" and "D" covers vertical piping.

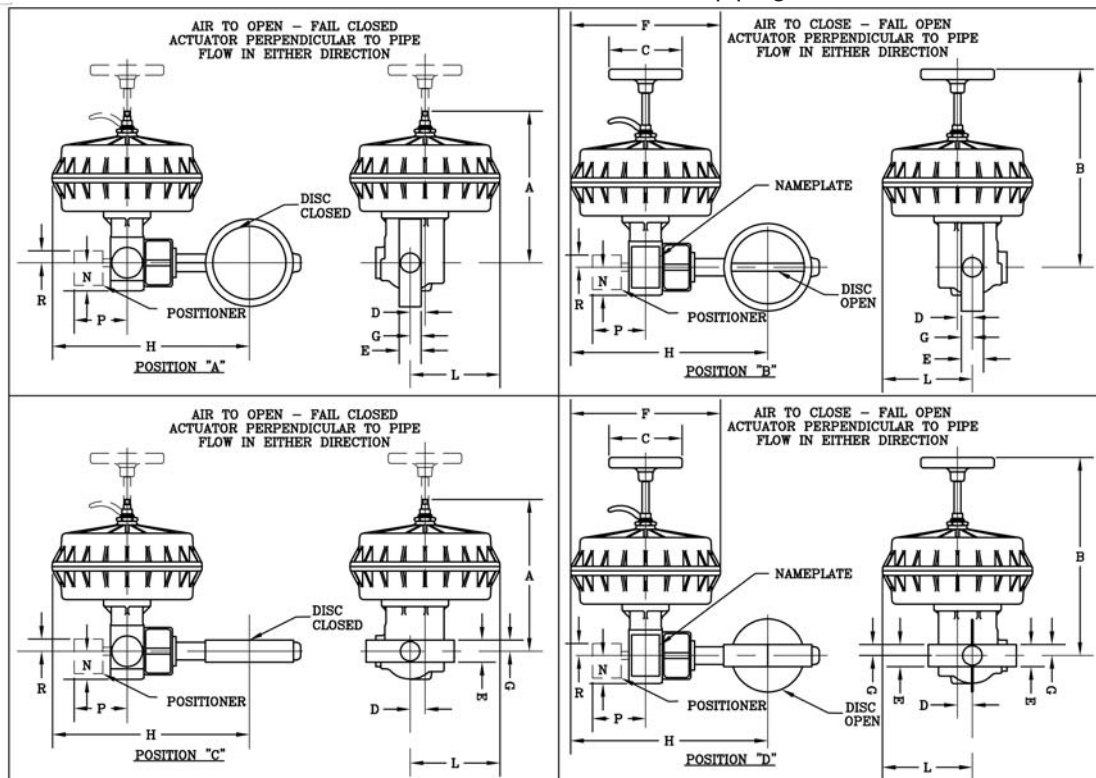

Note: All basic valve dimensions are printed in the Premier-TB

for Ranger and Premier Unlined. Reinstall live-loaded packing components (Ranger (27) (28) (29) 2 sets). Reengage both packing stud nuts (22) for Ranger and Premier Unlined. Set torque level on packing stud nuts as indicated in IOM-Ranger QCT, IOM-Premier EZO, or IOM-Premier Unlined body assembly (BA) instructions.

10. Reorient body assembly (BA) with respect to the actuator assembly (AA). Rejoin the body assembly (BA) to the actuator assembly (AA) as described in this section, V.I. Ensure proper plug (Ranger (6)) or disc (Premier (3.1)) position prior to reinstalling lever arms (5). Ensure that the lever arms (5) are “centered” within the arm housing (4), and with respect to the actuator stem linkage (8) (9) (10) (43) (44).
11. Recalibrate the unit (AA) (BA) and its positioner ((PA)).

D. Changing Failsafe Action:

1. The Model 48 actuator (AA) is field-reversible for failsafe action with no additional parts required.
2. It is possible that both of the following can occur together for the degree of disassembly undertaken:
 - a. Failsafe action reversed.
 - b. Change in actuator mounting position.

NOTE: This section will be limited to the procedures for 2.a. above. If 2.b. is also desired, then it will be necessary to reference Subsection C. herein for the added procedural steps as required.

This subsection will thus be limited as indicated as follows (reference Figures 6 – 9 herein for beginning and end graphic orientations).

3. To reverse actuator (AA) failsafe action

Product	Begin		End	
	Position	Action	Position	Action
Ranger QCT	“A”	ATO-FC	“B”	ATC-FO
	“C”	ATO-FC	“D”	ATC-FO
	“E”	ATO-FC	“F”	ATC-FO
	“G”	ATO-FC	“H”	ATC-FO
	“B”	ATC-FO	“A”	ATO-FC
	“D”	ATC-FO	“C”	ATO-FC
	“F”	ATC-FO	“E”	ATO-FC
	“H”	ATC-FO	“G”	ATO-FC
Premier EZO or Premier Unlined	“A”	ATO-FC	“B”	ATC-FO
	“C”	ATO-FC	“D”	ATC-FO
	“B”	ATC-FO	“A”	ATO-FC
	“D”	ATC-FO	“C”	ATO-FC

basically requires:

- a. Moving lever arms (5) from left side of valve’s stem (Ranger (7)) (Premier (3.2)) to right side, or vice versa. This is accomplished by removing actuator assembly (AA) from body assembly (BA) and rotating actuator (AA) 180° about the actuator’s stem linkage (8) (9) (10) (43) (44). See Figure 10 and Figure 11.
- b. Rotating plug (Ranger (6)) or disc (Premier (3.1)) by 90°; ie. from “closed” position to “open” position, or vice versa.
- c. Reconnecting actuator (AA) to body (BA) with lever arms (5) also rotated 180°.

NOTE: Valve stem always goes CW to “close”, viewed from stem-end.

4. Separate the actuator assembly (AA) from the body assembly (BA) as described in this Section, V.B.1. through V.B.9.
5. Rotate plug (Ranger (6)) or disc (Premier (3.1)) position 90° to new failsafe position.
6. Slide actuator assembly (AA) that has been rotated 180° back over the stem-end (Ranger (7)) (Premier (3.2)). Align bolt holes between arm housing (4) and valve yoke (12).
7. Reengage bolting (24) securing arm housing (4) to yoke (12). Torque bolting (24) to 17-20 ft-lbs (23-27 N-m).
8. Ensure that the reinstalled lever arms (5) are also rotated 180° in the same reference as the actuator assembly (AA) was rotated. (**NOTE:** The repositioned arms (5) will appear to have only changed relative position by 90° in another plane.) Ensure the lever arms assembly (5) is “centered” within the arm housing (4), and with respect to the actuator stem (8) (9) (10) (43) (44).
9. Rejoin the body assembly (BA) to the actuator assembly (AA) as described in this Section, V.I.

E. Diaphragm Replacement:

1. Place unit assembly (AA) (BA) onto a flat work bench with actuator upper casing (1) on top side; i.e. handwheel (58), if supplied, on top side.
2. Ensure that all air pressure is released from actuator assembly (AA) casing (1).

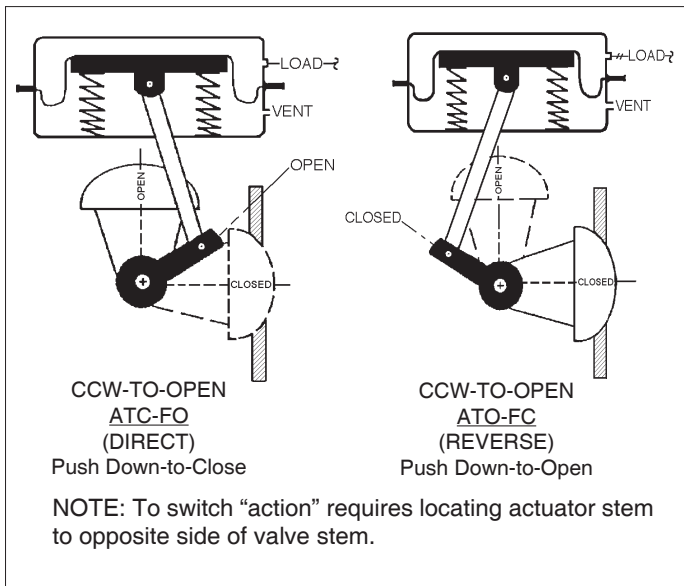


Figure 10

Ranger Plug vs. Lever Arm vs. Actuator Orientation

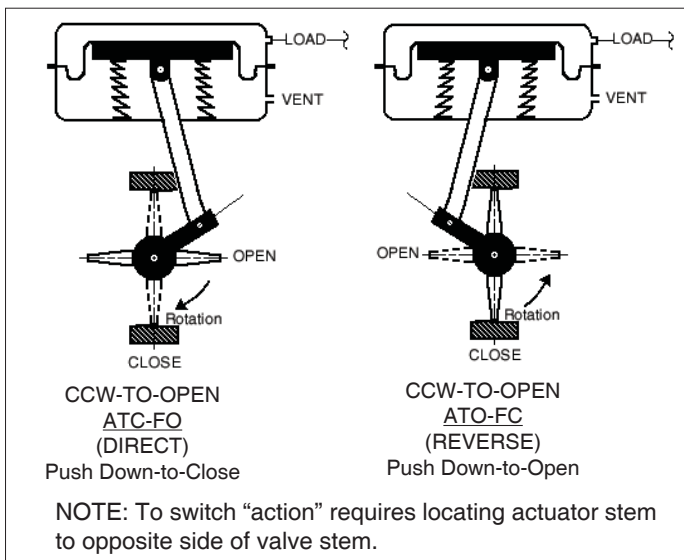


Figure 11

Premier Plug vs. Lever Arm vs. Actuator Orientation

3. Ensure that manual handwheel (58) operator is fully rotated upwards by loosening locking lever (59) and rotating CCW (viewed from top side) as far as possible.
4. Place a matchmark between actuator casings (1) (2).

⚠ WARNING

SPRING UNDER COMPRESSION. Prior to removing flange bolting (27, 28, 41, 42) relieve range spring (11) compression by rotating the handwheel or adjusting screw assembly (58) CCW (viewed from above handwheel (58)) until all spring compression is relieved. Failure to do so may result in flying parts that could cause personal injury.

5. Loosen all casing (1,2) flange bolting (27, 28, 41, 42) two revolutions. Pry apart the casings (1,2) if "stuck" together.
6. In one revolution increments loosen all opposing nuts (41, 42) until the short bolting (27, 41) disengages and can be removed. Continue loosening extension nuts (42) in the alternating, one revolution pattern ensuring that the casings (1, 2) are being "pushed apart", until the extension bolting (28, 42) is disengaged and removed.
7. Lift the upper casing (1) upwards and away from the lower casing (2). Set upper casing (1) aside.
8. Remove pivot screw (25) by rotating CCW (viewed from above), and seal (56).
9. Pry diaphragm washer (52) loose. Clean washer (52) of any rubberized sealant.
10. Prior to diaphragm (6) removal, inspect to see where a diaphragm (6) leak may have been caused by wearing against the upper case (1) at any point. Inspect the upper case (1). **NOTE: The diaphragm (6) is a rolling diaphragm and should NOT touch the upper case (1) at any point of the piston's (3) upwards/downwards travel. If there is side movement of the piston (3), further disassembly for inspection of range springs (11) is mandatory. If there is topside wear, uptravel stop washer (54) is not properly adjusted.**
11. Remove diaphragm (6) and discard.
12. Clean surface of piston (3) of any foreign material that could cause a premature failure of diaphragm (6) if covered. Turn diaphragm (6) "inside-out". Place diaphragm (6) onto piston (3) centered over the center bolt hole in piston (3); ensure that the smooth black surface of diaphragm (6) is on the "pressurized air-side".
13. Place silicone sealant, Dow-Corning "Silastic" #732 RTV or equal, around the diaphragm's (6) center bolt hole opening. Lay diaphragm washer (52) onto sealant and centered over bolt hole. Replace seal (56) on top of washer (52).
14. Place a tool around the skirt circumference of the piston (3) to secure during tightening; use tape or similar material to prevent this tool from leaving sharp edges that could damage the new diaphragm (6). Place Loctite #242, or equal, thread sealant onto the threads of

pivot screw (25); engage and tighten screw (25) to 15-20 ft-lbs (21-27 N-m) torque. **NOTE:** *Piston (3) must be held from rotating to prevent the multiple nested range springs (11) from tilting away from a common vertical centerline between hubs of lower case (2), piston (3) and range spring (11).*

15. Fold the diaphragm (6) skirt from its inside-out orientation, down and around the piston's (3) skirt. Using a rounded-end tool, push the diaphragm (6) down between the lower casing (2) sidewall and the piston's (3) skirt, forming a "valley". Work diaphragm (6) to ensure that all folds or "puckers" are taken away. Press the diaphragm's (6) lower/outer beaded edge into the groove. Again, smooth out all folds or puckers in diaphragm (6).
16. Place a light coating of graphite powder lubricant, (dry molybdenum disulfide) on the skirted areas of diaphragm (6), and into the "valley". This lubricant will prevent the diaphragm (6) from "sticking together" or abrading itself during piston (3) travel.
17. If actuator (AA) is supplied with a manual handwheel operator (MHWO), place a heavy-duty wheel bearing grease, Lubriplate No. 130-AA, or equal, into the v-notch in the head of the pivot screw (25).
18. Inspect working of manual handwheel operator (MHWO) located within the upper casing (1) for signs of wear. Go to Subsection F. for maintenance of manual handwheel operator (MHWO).
19. Place properly oriented upper casing (1) down onto the lower casing (2) with matchmarks aligned and all casing flange bolt holes centered. **NOTE:** *The casing flanges (1) (2) will not touch together.*
20. Insert both extension bolts (28) through two upper casing (1) bolt holes that are located 180° across from each other; these bolts should extend through the lower casing (2) flange enough to engage its companion extension nut (42). Place a friction-reducing thread lubricant on the lower exposed threads of the extension bolts (28).
21. Place the same friction-reducing thread lubricant into the threaded portion of both



WARNING

1. **Elongated extension bolting (28) (42) is a safety feature to allow relaxation of range springs (11) to the piston's (3) mechanical uptravel stop at disassembly.**
2. **Extension bolting (28) (42) should ONLY be replaced with factory replacements; do NOT substitute conventional bolting.**
3. **Extension bolting (28) (42) MUST be located 180° opposite of each other in the flange bolting array. Failure to heed could cause personal injury at a later disassembly.**

extension nuts (42). **NOTE:** *Only one end of extension nut (42) is threaded. It is not possible to engage the extension bolting (28) (42) with the extension nut (42) upside down; the threads of the nut (42) will not engage.)* Engage both extension nuts (42) until they draw tight to the lower casing (2) flange's underneath side. Place one short bolt (27) through a bolt hole of upper flange (1) to serve as an indicator. In one-revolution increments and an alternating cross-pattern, draw the casing (1) (2) flanges towards each other. When there is at least one-half of the indicator short bolt (27) threads exposed through the lower casing (2) flange, engage nut (41) until the short bolting (27) (41) is finger-tight.

22. Place all short bolts (27) through the remaining upper casing (1) flange bolt holes, and engage each ones nut (41) until the short bolting (27) (41) is finger-tight.
23. In an alternating cross-pattern, tighten all flange bolting (27) (28) (41) (42) in one-revolution increments. When all bolting (27) (28) (41) (42) is hand-wrench tight, torque to levels indicated below:

Item Nos.	Description	Torque Req'd	
		ft-lbs	N-m
27, 41	Short Bolting	15-18	20-24
28, 42	Extension Bolting	8-12	11-16

24. Connect a temporary instrument air source directly to the 1/4" FPT connection in the upper casing (1). Pressurize to the "Air Supply Pressure" level as indicated in Table 2-4 of Section IV.A.4. for the corresponding actual benchset range of the actuator being serviced,

and test for leakage at upper casing (1) to lower casing (2) joint. Also test for leakage at manual handwheel operator (MHWO), rotating handwheel (58) in and out several times during the test.

25. Release all air pressure into actuator upper casing (1); remove air source from 1/4" FPT connection.

F. Manual Handwheel Operator:

1. Reference Item Number drawing at end of IOM for details of the manual handwheel operator (MHWO) sub-assembly.
2. Place unit (AA) (BA) on a flat work surface with the handwheel (58) on top side.
3. Ensure all air pressure has been released from actuator casing (1). Ensure handwheel (58) is fully "backed-out" by rotating CCW (viewed from above); i.e. is as "high" as possible.
4. Remove slotted-head screw (65) securing handwheel gland (67) to upper casing (1).
5. Place a smooth-jawed wrench onto handwheel gland (67) and rotate CCW (viewed from above) to removal of the manual handwheel operator sub-assembly (MHWO).
6. Place the sub-assembly (MHWO) into a vise, grasping with leaded jaws on the coarse-screwed handwheel stem (58.2) near the base of the handwheel (58.1), oriented to allow driving-out the rolled pin (66) securing the handwheel (58.1) to the handwheel stem (58.2).
7. Drive pin (66) out using a suitable punch and locking pliers. Set pin (66) aside for reuse. Remove handwheel (58.1) from stem (58.2).
8. Rotate locking lever (59) CCW (viewed from handwheel-end) to removal.
9. Slide washer (60) and threadseal washer (61) off handwheel stem-end (58.2). Discard threadseal washer (61).
10. Remove remaining engaged parts (67) (58.2) from vise. Reorient horizontally in vise along flats of handwheel gland (67).
11. Place stick punch in drive-pin hole and rotate handwheel stem (58.2) CW (viewed from handwheel (58.1) end) back into the handwheel gland (67). When stem (58.2)

protrudes far enough through gland (67), relocate locking pliers to opposite end and rotate stem (58.2) until stem (58.2) fully disengages.

12. Remove O-ring (62) from handwheel gland (67).
13. Remove O-ring (63) from handwheel stem (58.2).
14. Place parts (58.2) (59) (60) (64) (67) into a suitable solvent and clean as much as possible, remove parts and allow to dry.
15. Inspect handwheel stem (58.2) with embedded ball (64) for wear on ball (64). If ball (64) is worn, or threads of stem (58.2) are damaged, replace handwheel sub-assembly (58); i.e. parts (58.1) (58.2) and (64).
16. If handwheel gland (67) shows signs of wear in female threads (i.e. loose gauging), replace handwheel gland (67) and self-tapping slotted-head screw (65). NOTE: A replacement handwheel gland (67) will require drilling a new 5/32" x 1-1/16" (4mm x 25.5mm) deep hole into the lip of the upper casing (1).
17. Install new O-ring (63) onto handwheel stem (58.2).
18. Install new O-ring (62) onto handwheel gland (67).
19. Place a thin coat of lithium grease on the handwheel stem O-ring (63) and the immediate surrounding area of the handwheel stem (58.2).
20. Engage the handwheel stem (58.2) into the gland's (67) underneath side. When the handwheel (58.1) end of the stem (58.2) protrudes through the gland's (67) upper side, place a new threadseal washer (61) over the stem's (58.2) upper end. Continue engaging stem (58.2) until the O-ring (63) is pulled into the gland (67).
21. Install washer (60) and locking lever (59) onto stem (58.2).
22. Place handwheel stem (58.2) into a soft-jawed vise. Position handwheel (58.1) onto stem (58.2) with holes for pin (66) aligned. Insert pin (66) and drive through stem (58.2) and handwheel (58.1) far side. Remove handwheel assembly (MHWO) from vise.

23. Place heavy duty wheel bearing grease as specified previously onto the stem-end ball (64). Engage the gland (67) into the upper casing (1) female opening. Align tapped opening for self-tapping slotted-head screw (65).
24. Install slotted-head screw (65) fully.

G. Adjusting Screw Assembly and Actuator Plug Maintenance:

1. Reference Item Number drawing at end of the IOM.
2. Determine the portion of the text of Subsection F. above that would apply to the adjusting screw assembly (ASA) counterpart of the manual handwheel operator (MHWO) assembly, and complete maintenance in a similar procedure. **NOTE:** *Adjusting screw assembly (ASA) is ONLY applied to reverse-action, ATO-FC Ranger QCT units (AA) (BA).*
3. Determine the portions of the text of Subsection F. previous that would apply to the actuator plug (67) counterpart of the manual handwheel operator (MHWO) assembly, and complete maintenance in a similar procedure. **NOTE:** *Actuator plug (67) may be applied on all Premier units (AA) (BA) and ONLY direct-action, ATC-FO Ranger QCT units (AA) (BA).*

H. Replacement of Range Springs:

1. Replacement of actuator assembly (AA) range springs (11) requires what is essentially a complete actuator (AA) disassembly. It is recommended that the range spring (11) replacement should include:
 - a. diaphragm (6) replacement
 - b. O-ring(s) (62) (63) replacement
 - c. threadseal (61) replacement.
2. Separate the actuator assembly (AA) from the body assembly (BA) as described in this Section, V.B.1 through V.B.9.
3. Push piston (3) downwards by:
 - a. manual handwheel operator (MHWO) being rotated CW (viewed from above handwheel (58.1)) approximately one-half of full travel.
 - b. pressurize actuator to approximately one-half of the stated benchset range; i.e. for 5-15 psig (.34-1.03 Barg) pressurize to approximately 10 psig (.69 Barg).



WARNING

Do NOT stick hand or fingers into the arm housing (4) when the actuator is pressurized. ONLY USE TOOLS WITHIN ARM HOUSING (4).

4. Place a wrench on the hex surface of the actuator's stem/pushrod (10). Rotate the push rod (10) CCW (viewed from lower L.H. rod end (9)); keep track of number of revolutions to disengage from upper R.H. rod end (8) in box below.

Number of revolutions of push rod (10) required to disengage from upper R.H. rod end (8). _____

5. Allow piston (3) to travel upwards by:
 - a. manual handwheel operator (MHWO) being rotated CCW (viewed from above handwheel (58.1)) fully out/up.
 - b. releasing air pressure as applied per 3.b. above; remove the air supply from actuator upper casing (1).
6. Orient actuator assembly (AA) with upper casing (1) on top side. Disassemble the actuator assembly (AA) to the point of diaphragm (6) replacement as described in this Section V.E.1 through V.E.11.
7. Place a matchmark at flange of lower casing (2) and correspondingly at piston (3). Lift off piston (3) in a vertical direction to prevent tipping range springs (11) over. Set piston (3) on work surface upside down.
8. Remove all range springs (11) and set in a row side-by-side. Inspect for any difference in the spring (11) height or verticality. Replace any abnormal spring(s) (11). Replace any springs (11) that show cracks, nicks, damaged epoxy coating, corrosion, etc. Inspect springs (11) using data in table below as the "normal":

Part Number	Benchset Range psig (Barg)	Qty. of Springs	Free Height * in (cm)	Coating Color
830-H2-5-R9069-95	5-15 (0.34-1.03)	6	5.60 (14.23)	Grey

* Acceptable $\pm 1/8"$ (± 3 mm)

- Inspect clevis (7), upper R.H. rod end (8), clevis pin (48), washers (53) and hairpin (49) for signs of looseness and/or wear; replace any worn parts. Check bolting (26) for looseness; tighten as necessary to 15-18 ft-lbs (20-23 N-m).

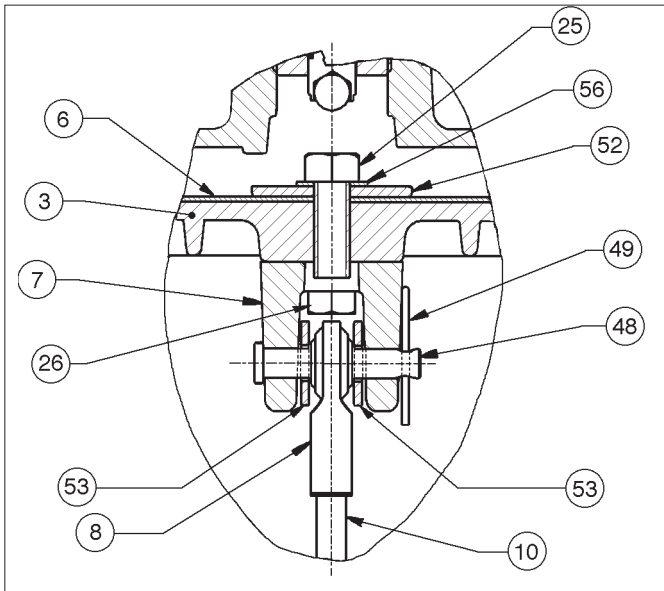


Figure 12
Piston & Clevis Close-up

- Place range springs (11) back onto hubs of lower casing (2) per following table:

NOTE: Every spring (11) has another spring (11) 180° across/opposite.

Benchset Range		Quantity of Springs	Array
psig	(Barg)		
5-15	(0.34-1.03)	6	

- Aligning matchmarks of Article 7. above, reposition piston (3) back onto top side of range spring (11) array. Using a mirror tool and flashlight, look through the rectangular opening in the lower casing (2) from within the arm housing (4) to ensure that the piston (3) hubs are centered within the ID of the range spring (11) coil. It may be necessary to use a tool to move the upper end of the range spring (11) as necessary to be “captured” by a piston (3) hub. Each spring (11) **MUST** be captured by a hub on top and bottom ends.

- Reinstall a new diaphragm (6) and reassemble the upper casing (1) as described in this Section, V.E.12 through V.E.24.
- Using air pressure of V.E.24., pressurize the actuator upper casing (1) to the upper value of the stated benchset range plus 2 psi (0.14 Bar); i.e. for 5-15 psig (0.34-1.03 Barg) benchset range, pressurize to $15+2 = 17$ psig ($1.03+0.14 = 1.17$ Barg). This pressure level should cause the piston’s (3) lower skirt-edge to bottom out on the lower casing (2).
- Using only tools (i.e. no fingers within arm housing (4)) to grasp the actuator stem/push rod (10), insert push rod (10) with interconnected parts (9) (43) (43) (44) (54) into arm housing (4) and engage into dangling upper R.H. rod end (8) by rotating CW (viewed from lower L.H. rod end (9)). Count number of revolutions of push rod (10) engagement to match those recorded in Article 4., previous, at removal.
- Release all air pressure into actuator upper casing (1); remove air source from 1/4" FPT connection.
- Join the actuator assembly (AA) to the body assembly (BA) as described in this Section, V.I.

I. Joining of Body Assembly (BA) to Actuator Assembly (AA):

- Determine proper orientation of actuator (AA)-to-body (BA) for the following considerations:
 - failsafe action
 - installed piping orientation.

Reference Sub-sections V.C. and V.D. to see schematics of orientations available.

- Position body assembly (BA) on a flat work surface. Orient such that the actuator assembly (AA) can be oriented with the top of the actuator upper casing (1) on topside; i.e. manual handwheel operator sub-assembly (MHWO) stem (58.2) vertically oriented, if supplied.
- Using an overhead hoist, lift the actuator assembly (AA) (with position indicator apparatus (13,14,15,16,17,31,31,34), lever arm apparatus (5,5,12,40,46,50,50), end-of-shaft bearing (18), bearing flanges (19) and

- cover plate (20) removed) properly oriented and shift laterally over the protruding stem (Ranger (7), Premier (3.2)). Bring the round opening of the arm housing (4) into position against the mounting yoke (12). Raise/lower/tip/rotate the actuator assembly (AA) to align at least one bolt hole of the yoke (12) with one bolt hole in the arm housing (4). Insert one cap screw (24) from behind the yoke's (12) bolt hole and engage with the tapped opening in the arm housing (4); finger tighten cap screw (24).
4. Reposition actuator assembly (AA) as required to align the remaining bolt holes securing yoke (12) with arm housing (4). Insert the cap screws (24) and finger-tighten.
 5. (Wrench-tighten in one-half revolution increments and in an alternating cross-pattern the three cap screws (24) securing actuator assembly (AA) to body assembly (BA). Final tightening should be by torque wrench to 17-20 ft-lbs (23-27 N-m)
 - 6A. For units (AA, BA) with Model 73N-B P/P positioner:
 - a. Secure characterization cam (12) properly oriented over the two rolled spring pins (50) stuck into the inner lever arm (5).
 - b. Place the outer lever arm (5) over the two spring pins (50) with the bolt holes aligning. Press the apparatus (5,50,50,5) together.
 - 6B. For Units (AA, BA) with no positioner, Model 9540R P/P positioner or 991 or PS2 I/P:
 - a. Similar to 6A. above, except a spacer washer (12) replaces the cam (12) of a Model 73N-B P/P positioner.
 7. Position valve plug (Ranger (6))/disc (Premier (3.1) in the proper "Full Closed" or "Full Open" position. **NOT FOLLOWING THIS ARTICLE WILL CAUSE MECHANICAL DAMAGE TO THE UNIT'S (AA, BA) LINKAGE MECHANISM!**
 8. Place properly oriented lever arm apparatus (5,50,12,50,5) over shaft's (Ranger (7), Premier (3.2)) square end and push into place while holding lower L.H. rod end (9) "swung" aside so as to not interfere. **NOTE: For units (AA, BA) with 73N-B P/P positioner, it will be necessary to "swing" the feedback linkage subassembly ((72)) out of the way as the lever arm apparatus (5,50,12,50,5) is pushed into place.** Center-align lever arm apparatus (5,50,12,50,5) transversely within the arm housing (4), directly over stop screw (35).
 - 9A. For units (AA, BA) with Model 73N-B P/P positioner: Place indicator spacer (17) over end of shaft (Ranger (7), Premier (3.2)) properly oriented for travel indicator (16) to be "located" by spring pin (51).
 - 9B. For units (AA, BA) with Model 9540R P/P positioner or 991 or PS2 I/P positioner: Reference the IOM-9540R or 991/PS2 IOM for proper instructions on reinstallation of indicator spacer (17) and drive coupling ((32)).
 10. Align the bolt holes in lever arms (5) and lower L.H. rod end (9). **NOTE: For units (AA, BA) with ATO-FC action it will be necessary to offset "stem windup" by –**
 - a. Rotating manual handwheel operator (MHWO) handwheel (58.1) approximately 1-3 revolutions CW (viewed from above handwheel) until the bolt holes of lever arms (5) and lower L.H. rod end (9) are aligned.
 - b. Pressurize actuator casing (1) only until the bolt holes of the lever arms (5) and the lower L.H. rod end (9) align.
 11. Insert shoulder bolt (40) through the round opening of the arm housing (4) and into the bolt holes of lever arms (5) and lower L.H. rod end (9).
 12. Ensure that lever arm apparatus (5,50,12,50,5) is transversely centered within the arm housing (4). Engage lock nut (46) together with shoulder bolt. Wrench-tighten to a torque of 15-20 ft-lbs (20-27 N-m).
 13. Position bearing flanges (19) with retainer ball bearing (18) over the spacer (17). Align the bearing flanges' (19) bolt holes with the arm housing (4) bolt holes.
 - 14A. Units (AA, BA) with Model 73N-B or without positioner:
 - a. Insert rolled spring pin (51) into indicator spacer (17). Pin (51) will protrude approximately 1/16" (1.5 mm).
 - b. Position travel indicator (16) onto end of shaft (Ranger (7), Premier (3.2)) impaling over protruding spring pin (51) and aligning with shaft-end tapped opening with hole in travel indicator (16). Align lock-tooth washer (55) on spacer (17) and secure

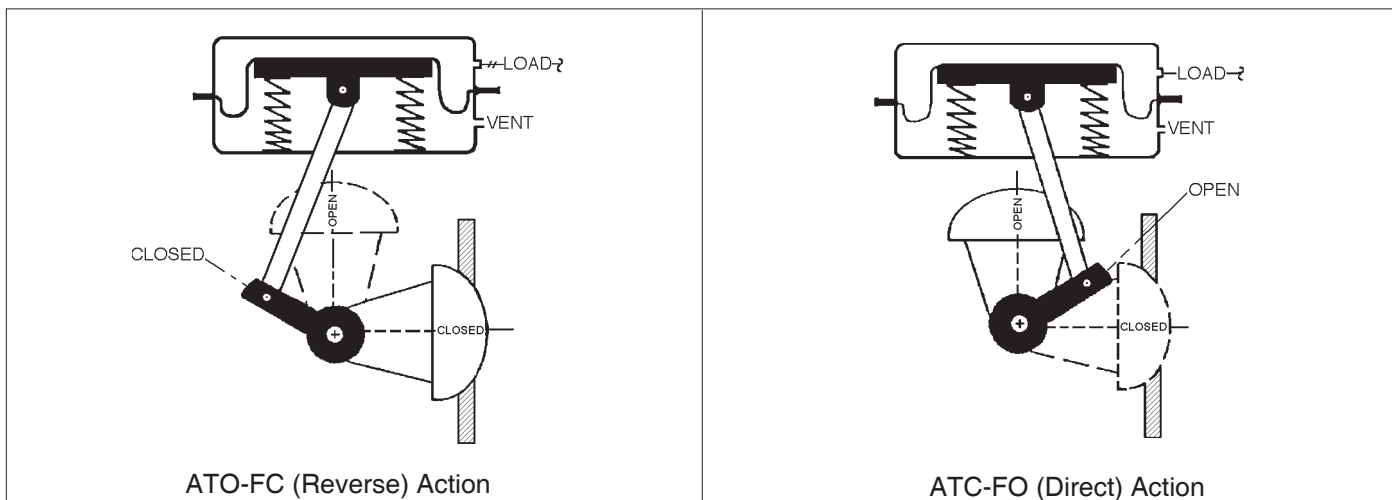


Figure 13:

- travel indicator (16) to shaft (Ranger (7), Premier (3.2)) with cap screw (32) using a 7/32" allen key wrench until firmly tight.
- Position cover plate (13) over the bearing flanges (19) aligning the cover plate (13) bolt holes with those of the bearing flanges (19). Hold cover plate (13) on outer edge with fingers. **NOTE:** Ensure that the three tapped holes in the coverplate (13) are near the 1:o'clock, 5:o'clock and 9:o'clock positions.
 - Position travel indicator dial (15) onto cover plate (13) properly oriented.
 - Position clear plastic dial lens (14) over indicator dial (15), aligning bolt holes of lens (14), dial (15) and cover plate (13).
 - Secure lens (14), dial (15), cover plate (13) and bearing flanges (19) to arm housing (4) by engaging the three socket

head cap screws (31) using a 3/16" allen key wrench and tighten firmly; do not over-tighten and crack plastic lens (14). **NOTE:** It may be necessary to rotate the actuator manual handwheel operator (58) downwards, or alternately supply a small level of air pressure (5-7 psig (0.35-0.50 Barg)) to assist in aligning bolt holes for cap screws (31). Do not tighten one single cap screw (31) until all cap screws (31) are partially thread-engaged.

- Units (AA, BA) with Models 9540R or 991 or PS2 positioners: Reference the IOM-9540R or 991 or PS2 IOMs for proper instructions on reinstallation of positioner ((PA)) assembly to shaft-end.

SECTION VI

VI. CALIBRATION

A. General:

- This section covers calibration of the actuator assembly (AA) to a Ranger QCT, Premier EZO, or Premier Unlined body assembly (BA).
- Positioner, if installed, requires reference to the specific positioner model IOM for proper calibration procedure.
- All indicated Item Numbers that are with respect to this Model 48 actuator assembly (AA) are in parenthesis but are not underscored; i.e. (20). Item Numbers that relate to the body assemblies (BA) are in parenthesis and are underscored; i.e. (7). Item Numbers that relate to the positioners ((PA)) are in a double set of

parenthesis and are underscored; i.e. ((3)).


- This Section assumes that the actuator assembly (AA) and body assembly (BA) have been interconnected together as recorded in Section V.
- This Section assumes that the calibration is performed with the valve unit removed from its normal pipeline location, and is in a repair shop located on a suitable work bench. Actuator stem/push rod subassembly (8, 9, 10, 43, 43, 43, 44, 54) should be oriented vertically.
- Premier EZO (lined) body assembly (BA) MUST be properly clamped between two ANSI 150# RF weld neck flanges. NOTE: Flanges MUST be of weld neck type! Clamping of liner (Premier (10)) will prevent false movement of liner (Premier (10)) within body (1).

7. In this Section reference will be made to three phrases –
 - a. “lower value of benchset range”,
 - b. “higher” value of benchset range”,
 - c. benchset range.

The meaning of these phrases is summarized in the following table.

Benchset Range *	Lower Value of Benchset Range	Higher Value of Benchset Range
5-15 psig (.34-1.03 Barg)	5 psig (0.34 Barg)	15 psig (1.03 Barg)

* Identified on nameplate (21) as “Bench” or “Input Range”.

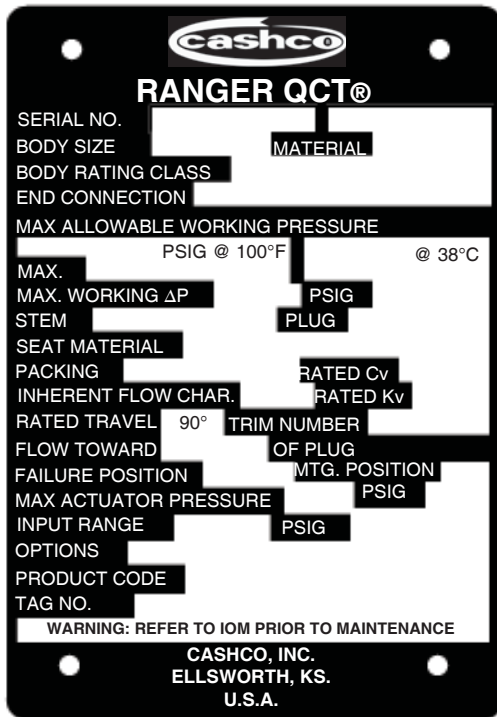

WARNING

Do not pressurize actuator assembly (AA) beyond the “MAX ACTUATOR PRESSURE” level/value indicated on the unit’s nameplate (21). Failure to heed may cause catastrophic failure of upper casing (1) leading to flying parts.

B. Actuator Stem/Push Rod Adjustment:

1. Actuator stem/push rod linkage (8, 9, 10, 43, 43, 44, 54) when properly adjusted will-
 - a. Provide the proper benchset range.
 - b. Provide 90° rotation.
 - c. Provide proper valve stem (Ranger (Z), Premier (3.2)) “windup”.
2. Ensure that manual handwheel operator (MHWO) has handwheel (58.1) backed fully out by rotating CCW (viewed from above handwheel (58.1)).
3. Remove cover plate (20) by removing four screws (36).
4. Remove travel indicator dial (15), dial lens (14), coverplate (13), bearing flanges (19) and bearing (18) by removing three cap screws (31) using a 3/16" allen key wrench.
5. Units with ATO-FC (Reverse) Action:
 - a. Disconnect the lower L.H. rod end (9) from engagement with the lever arms (5) by removing shoulder bolt (40) and lock nut (46). It will be necessary to remove stem (Ranger (Z), Premier (3.2)) “windup” as described in Section V.B.4.
 - b. Swing the lever arms (5) down against the travel stop screw (35); this “opens” valve plug (6)/disc (3.1).
 - c. Loosen lower upstop jam nut (43) from securing upstop washer (54); back nut (43) to the root of its threads on push rod (10).
 - d. The upper R.H. rod end (8), lower L.H. rod end (9), and push rod (10) act together as a turnbuckle; the upper end is standard right-hand threaded while the lower end is left-hand threaded. To ensure maximum and equal engagement of rod ends (8,9) to the push rod (10), it is recommended that the linkage (8,9,10) be fully engaged and then readjusted as a safety precaution.

CAUTION

Unequal engagement adjustment of rod ends (8,9) and push rod (10) can cause failure of a rod end (8,9)-to-push rod (10) connection.

- a. If this occurs during bench maintenance, the parts (8,9,10) could snap apart and cause personal injury.
- b. If this occurs during installed operation,

control function would be lost.

- e. Loosen lower L.H. rod end (9) jam nut (44) by rotating CW (viewed from above); this nut (44) is “left-handed”. Back nut (44) to the root of its threads on push rod (10).
- f. Using a suitable tool to prevent lower L.H. rod end (9) from rotating, rotate push rod (10) CCW (viewed from above) until upper end of push rod (10) is fully engaged with upper R.H. rod end (8). **NOTE: If lower L.H. rod end (9) reaches full engagement with lower push rod (10) end first, remove tool securing against rotation, and allow lower L.H. rod end (9) to rotate with push rod (10).** Once upper end of push rod (10) is fully engaged with upper R.H. rod end (8), rotate lower L.H. rod end (9) CW (viewed from above) until it is fully engaged.
- g. Provide a temporary air supply with an inline adjustable airset to the actuator upper casing (1) connection.
- h. Reference the nameplate (21) attached to the cover plate (20) that is fastened to the arm housing (4). Determine the bench setting from the nameplate (21).
- i. Pressurize the actuator (AA) to the lower value of the benchset range pressure indicated on the nameplate (21).
- j. While holding lower L.H. rod end (9) out of way, lift lever arms (5) up as far as possible (this will close plug (Ranger (5))/disc (Premier (3.1))).
- k. Rotate lower L.H. rod end (9) as required to orient the holes of the rod end (9) and the lever arms (5) in the same plane. Swing lower L.H. rod end (9) between the lever arms (5).
- l. Rotate the push rod (10) CW (viewed from above) lowering the lower L.H. rod end (9) until it’s hole is centered with the lever arm (5) holes. Center lever arms (5) within arm housing’s (4) transverse axis; i.e. center over travel stop screw (35).
- m. Reinstall the shoulder bolt (40) through the lever arm (5) and lower L.H. rod end (9) holes. Finger-tighten lock nut (46) onto shoulder bolt (40). Using a 1/4" allen key wrench to secure the head of shoulder bolt (40), torque wrench-tighten nut (46) to 15-20 ft-lbs (20-27 N-m).
- n. Tighten lower L.H. jam nut (44) down until locked against lower L.H. rod end (9); nut (44) is “left-handed”.
- o. Add approximately 6 psig (0.4 Barg) to the actuator’s (AA) lower value of benchset range. This will extend the actuator stem/push rod sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) downwards to allow loosening double jam nuts (43) on top side of uptravel stop washer (54).
- p. Release air pressure down to the lower value of benchset range.
- q. Rotate lower jam nut (43) to raise uptravel stop washers (54) until the gap clearance between the lower casing (2) and the top side of the washer (54) is 1/8"±1/16" (3mm±1.5mm).
- r. Repressurize actuator (AA) to level as indicated in Article 5.o. above. Tighten the lower of the two upper jam nuts (43) until it is tight, and secures the uptravel stop washer (54). Tighten the upper of the two upper jam nuts (43) down to secure the double jam nut (43) locking effect. Retighten lower jam nut (43) on underneath side of washer (54).
- s. Release all air pressure from actuator upper casing (1). Repressurize slowly to confirm that as the pressure reaches the lower value of the benchset range (see Article 5.i. previous), the actuator stem/push rod sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) begins to move. If movement is prematurely occurring (i.e. movement at less than the lower benchset range value), the length of the actuator stem sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) must be shortened. Repeat procedure from Article 5.a. through to this Article. If movement is late (i.e. movement at more than the lower benchset range value), the length of the actuator stem sub-assembly (8,9,10,43,43,43,44,54) must be lengthened (i.e. increased). Repeat procedure from Article 5.a. through to this Article. It is recommended that adjustment of actuator stem sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) be made in one revolution of push rod (10) increments. Repeat as necessary.
- t. Slowly increase air pressure in upper casing (1) until reaching the higher value of the benchset range; i.e. pressurize only until plug (Ranger (5))/disc (Premier (3.1)) is in the full open position.
- u. Release all air pressure in actuator upper casing (1). Repeat Article 5.t above and this article, cycling valve unit (AA, BA) closed-open-closed-open-closed several times.
- v. With valve plug (Ranger (5)) / disc (Premier (3.1)) in “full closed” position, reinstall bearing (18), bearing flanges (19), coverplate (13), dial lens (14) and


dial (15) with three cap screws (31).
NOTE: Position dial (15) such that travel indicator (16) shows "0°" travel before fully tightening screws (31).

- w. Completion to this point completes the benchset range adjustment. Proceed to Subsection VI.C. to adjust 90° travel stop.
- 6. Units with ATC-FO (Direct) Action:
 - a. Disconnect the lower L.H. rod end (9) from engagement with the lever arms (5) by removing shoulder bolt (40) and lock nut (46).
 - b. Swing the lever arms (5) down and as close as possible to the travel stop screw (35); this "closes" valve plug (6) / disc (3.1). Ensure that the "closed" position is reached by observing actual plug (6) / disc (3.1) position.
 - c. Loosen lower upstop jam nut (43) from securing upstop washer (54); back nut (43) to the root of its threads on push rod (10).
 - d. The upper R.H. rod end (8), lower L.H. rod end (9), and push rod (10) act together as a turnbuckle; the upper end is standard right-hand threaded while the lower end is left-hand threaded. To ensure maximum and equal engagement of rod ends (8,9) to the push rod (10), it is recommended that the linkage (8,9,10) be fully engaged and then readjusted as a safety precaution.

L.H. rod end (9) to rotate with push rod (10). Once upper end of push rod (10) is fully engaged with upper R.H. rod end (8), rotate lower L.H. rod end (9) CW (viewed from above) until it is fully engaged.

- g. Provide a temporary air supply with an inline adjustable airset to the actuator upper casing (1) connection.
- h. Reference the nameplate (21) attached to the cover plate (20) that is fastened to the arm housing (4). Determine the bench setting from the nameplate (21).
- i. Rotate lower L.H. rod end (9) until the rod end (9) and the lever arm's (5) holes are in the same plane.
- j. Loosen jam nut (45) and rotate downtravel stop screw (35) out by rotating CCW (viewed from below screw's (35) head) until just barely engaged in arm housing (4).
- k. Pressurize actuator (AA) to the higher value of the benchset range pressure indicated on the nameplate (21), while "guiding" the lower L.H. rod end (9) hub to its proper position between the lever arms (5).
- l. Pressurize actuator (AA) to a level as indicated by "C" pressure in table that follows according to the formula: "A" + "B" = "C".

Benchset Range	Higher Value of Benchset Range - "A"	Adder Value - "B"	Loading Pressure - "C"
_____ psig	_____ psig	2 psig	_____ psig
_____ Barg	_____ Barg	.14 Barg	_____ Barg

 **CAUTION**

Unequal engagement adjustment of rod ends (8,9) and push rod (10) can cause failure of a rod end (8,9)-to-push rod (10) connection.

- a. **If this occurs during bench maintenance, the parts (8,9,10) could snap apart and cause personal injury.**
- b. **If this occurs during installed operation, control function would be lost.**

- e. Loosen lower L.H. rod end (9) jam nut (44) by rotating CW (viewed from above); this nut (44) is "left-handed". Back nut (44) to the root of its threads on push rod (10).
- f. Using a suitable tool to prevent lower L.H. rod end (9) from rotating, rotate push rod (10) CCW (viewed from above) until upper end of push rod (10) is fully engaged with upper R.H. rod end (8). **NOTE:** If lower L.H. rod end (9) reaches full engagement with lower push rod (10) end first, remove tool securing against rotation, and allow lower

- m. Adjust the push rod (10) by rotating CW (viewed from above) until the holes of the lever arms (5) and the lower L.H. rod end (9) are centered and the valve is in the "closed" position.
- n. Reinstall the shoulder bolt (40) through the lever arm (5) and lower L.H. rod end (9) holes. Finger-tighten lock nut (46) onto shoulder bolt (40). Using a 1/4" allen key wrench to secure the head of shoulder bolt (40), torque wrench-tighten nut (46) to 15-20 ft-lbs (20-27 N-m).
- o. Loosen double jam nuts (43,43) on top side of uptravel stop washer (54).
- p. With valve in "closed" position, reinstall bearing (18), bearing flanges (19), coverplate (13), dial lens (14) and dial (15) with three cap screws (31). **NOTE:** Position dial (15) such that travel indicator

- (16) shows “0°” travel (no “bright orange” showing from indicator (16)) before fully tightening screws (31).
- q. Fully release air pressure in actuator (AA). Observe position of valve on travel indicator (16). Travel should be short of “full open”; i.e. 90° rotation.
 1. Travel short of 90°. Adjust the push rod (10) by rotating CCW (viewed from above) until the travel reaches 90° as shown by travel indicator (16).
 2. Travel beyond 90°. Adjust the push rod (10) by rotating CW (viewed from above) until the travel is reduced to 90° as shown by the travel indicator (16).
 - r. Rotate lower jam nut (43) to raise uptravel stop washers (54) until the gap clearance between the lower casing (2) and the top side of the washer (54) is $1/8" \pm 1/16"$ ($3\text{mm} \pm 1.5\text{mm}$).
 - s. Repressurize actuator (AA) to upper value of benchset range. Tighten the lower of the two upper jam nuts (43) until it is tight, and secure the uptravel stop washer (54). Tighten the upper of the two upper jam nuts (43) down to secure the double jam nut (43) locking effect. Retighten lower jam nut (43) on underneath side of washer (54).
 - t. Tighten lower L.H. jam nut (44) down until locked against lower L.H. rod end (9); nut (44) is “left-handed”.
 - u. For Premier EZO and Premier Unlined ONLY. Reference VI.C.2. for procedure to adjust downtravel stop screw (35).
 - v. Release all air pressure in actuator upper casing (1). Repeat loading-unloading to cycle the valve unit (AA, BA). Repeat adjustments as necessary.
 - w. Completion to this point completes the benchset range adjustment. Proceed to the next subsection (VI.C.) to adjust 90° travel stop, if necessary.
 - b. Rotate downtravel stop screw (35) CCW (viewed from below screw (35)) until 90° rotation is reached on the travel indicator (16).
 - c. Retighten jam nut (45).
 2. Travel beyond 90°. Hub of lower L.H. rod end (9) may or may not be touching on downtravel stop screw’s (35) upper end.
 - a. Loosen jam nut (45) about four revolutions.
 - b. Very slowly release air pressure into actuator (AA) until travel indicator (16) is showing at 90°.
 - c. Rotate downtravel stop screw (35) CW (viewed from below screw (35)) until the screw’s (35) upper edge touches the hub of lower L.H. rod end (9).
 - d. Retighten jam nut (45).

2. Units with ATC-FO (Direct) Action:

- a. Loosen jam nut (45).
- b. Rotate downtravel stop screw (35) CW (viewed from below screw (35)).
- c. Pressurize actuator (AA) slowly until the travel indicator (16) indicates that travel is at 0°; the valve should be in the “fully closed” position.
- d. Adjust gap between downtravel stop screw (35) and hub of lower L.H. rod end (9) as indicated in table that follows.
- e. Retighten jam nut (45).

Product Model	Gap Between L.H. Rod End (9) and Downtravel Stop Screw (35)
Ranger QCT	$1/8" \pm 1/16"$ ($3.0\text{ mm} \pm 1.5\text{ mm}$)
Premier EZO	$1/16" \pm 1/16"$ ($1.5\text{ mm} \pm 1.5\text{ mm}$)
Premier Unlined	No gap; i.e. touching

C. 90° Rotation Adjustment:

1. Units with ATO-FC (Reverse) Action:

- a. Pressurize actuator (AA) to the higher value of benchset range. This pressure should cause 90° rotation as shown by travel indicator (16).
 1. Travel short of 90°. Hub of lower L.H. rod end (9) may be touching on downtravel stop screw’s (35) upper end.
 - a. Loosen jam nut (45).

SECTION VII

VII. TROUBLE SHOOTING GUIDE

Reference the IOM of the valve body this actuator is unitized with for additional information on Trouble Shooting.

1. Air leakage.

Possible Causes	Remedies
A. Leakage at diaphragm-to-upper casing flange.	A1. Overpressure. Check source of air supply and determine if pressure is greater than indicated in Table 1; reset airset pressure as required. A2. Tighten casing flange bolting (27, 28, 41 & 42)
B. Leakage at handwheel gland-to-upper case.	B. Faulty O-ring (62); replace O-ring.
C. Leakage at manual handwheel threads.	C. Faulty seal (61); replace thread seal.
D. Leakage around stem on side where yoke bolts to arm housing.	D1. Failure of diaphragm (6); replace diaphragm. D2. Faulty seal (56); replace seal.

SECTION VIII

VIII. ORDERING INFORMATION

NEW REPLACEMENT UNIT vs PARTS "KIT" FOR FIELD REPAIR

To obtain a quotation or place an order, please retrieve the Serial Number and Product Code that was stamped on the metal name plate and attached to the unit. This information can also be found on the Bill of Material ("BOM"), a parts list that was provided when unit was originally shipped. (Serial Number typically 6 digits). Product Code typical format as follows: (last digit is alpha character that reflects revision level for the product).

□□□□ - □□□□ 7 - □□□□□□□□□□

NEW REPLACEMENT UNIT:

Contact your local Cashco, Inc., Sales Representative with the Serial Number and Product code. With this information they can provide a quotation for a new unit including a complete description, price and availability.

PARTS "KIT" for FIELD REPAIR:

Contact your local Cashco, Inc., Sales Representative with the Serial Number and Product code. Identify the parts and the quantity required to repair the unit from the "BOM" sheet that was provided when unit was originally shipped.

CAUTION


Do not attempt to alter the original construction of any unit without assistance and approval from the factory. All purposed changes will require a new name plate with appropriate ratings and new product code to accommodate the recommended part(s) changes.

NOTE: *Those part numbers that have a quantity indicated under "Spare Parts" in column "A" reflect minimum parts required for inspection and rebuild, - "Soft Goods Kit". Those in column "B" include minimum trim replacement parts needed plus those "Soft Goods" parts from column "A".*


If the "BOM" is not available, refer to the cross-sectional drawings included in this manual for part identification and selection.

A Local Sales Representative will provide quotation for appropriate Kit Number, Price and Availability.


The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such product at any time without notice.
Cashco, Inc. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Cashco, Inc. product remains solely with the purchaser.

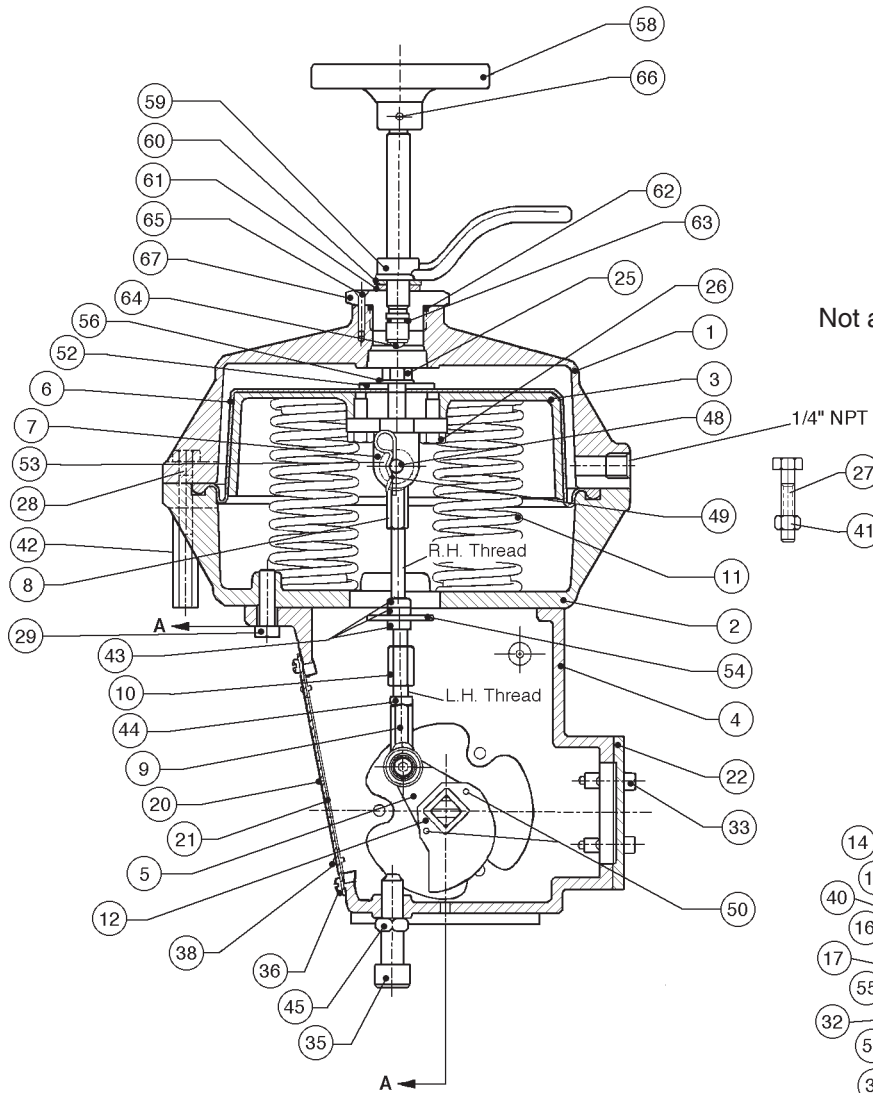


BASIC 48 ACTUATOR
Shown Air to Open

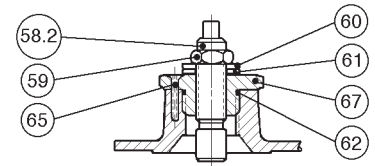

ADJUSTING SCREW ASSEMBLY
Not available on Air to Close-Fail Open Rangers

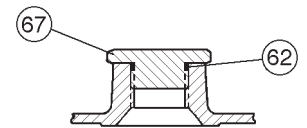


ACTUATOR PLUG
Available on Premier Butterfly Valves ONLY

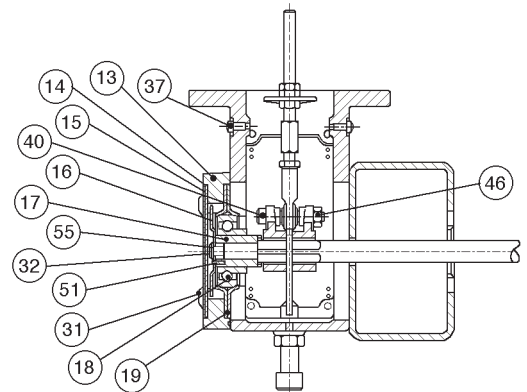


SECTION "A-A"


ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
1.	Upper Case	22.	Housing Cover	49.	Hairpin
2.	Lower Case	25.	Pivot Screw	50.	Spring Pin
3.	Piston	26.	Hex. Head Cap Screw	51.	Spring Pin
4.	Arm Housing	27.	Hex. Head Cap Screw	52.	Diaphragm Washer
5.	Arm	28.	Hex. Head Cap Screw	53.	Washer
6.	Diaphragm	29.	Hex. Head Cap Screw	54.	Stop Washer
7.	Clevis	31.	Button Head Cap Screw	55.	Internal Lock Tooth Washer
8.	Rod End (R.H.)	32.	Button Head cap Screw	56.	Seal
9.	Rod End (L.H.)	33.	Socket Head Cap Screw	58.	Handwheel Subassembly or Adjusting Screw
10.	Push Rod	35.	Socket Head Stop Screw	59.	Locking Lever or Nut
11.	Spring	36.	Fillister Head Machine Screw	60.	Washer
12.	Cam	37.	Fillister Head Machine Screw	61.	Thread Seal
13.	Cover Plate	38.	Drive Screw	62.	O-Ring (Gland to Upper Case)
14.	Dial Lens	40.	Bolt Shoulder	63.	O-Ring (Handwheel to Gland)
15.	Travel Indicator Dial	41.	Nut	64.	Ball
16.	Travel Indicator	42.	Extension Nut	65.	Self-Tapping Screw
17.	Indicator Spacer	43.	Jam Nut	66.	Pin (Spring)
18.	Ball Bearing	44.	Jan Nut (L.H.)	67.	Handwheel Gland or Actuator Plug
19.	Bearing Flange	45.	Jam Nut		
20.	Cover Plate	46.	Lock Nut		
21.	Name Plate	48.	Clevis Pin		

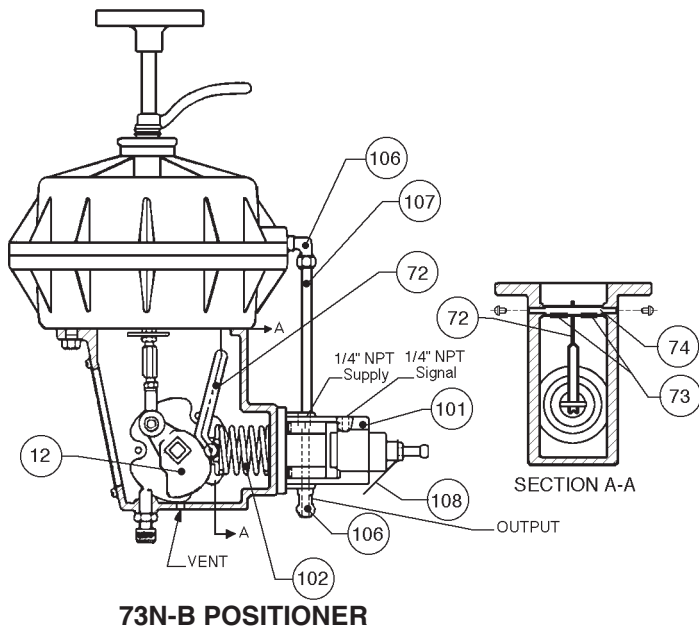


73N-B POSITIONER

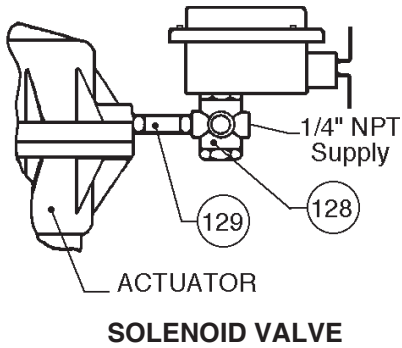

SOLENOID VALVE

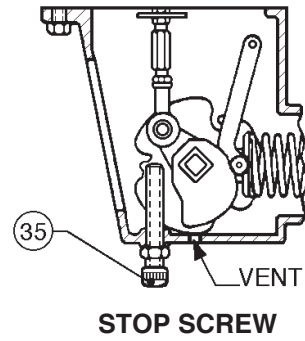

STOP SCREW

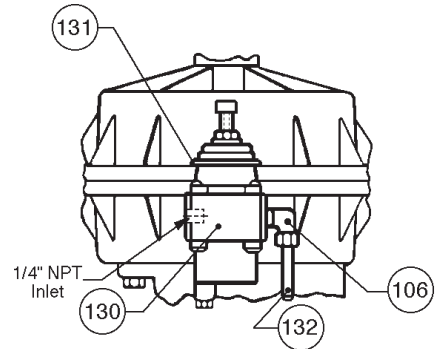

AIR SUPPLY REGULATOR

73N-B POSITIONER

ITEM NO.	DESCRIPTION
72	Feedback Linkage Subassembly
73	Feedback Linkage Spacer
74	Feedback Linkage Pivot Shaft
101	Positioner
102	Range Spring
106	Tube Fittings (Elbow)
107	Output Tube
108	Name Plate

SOLENOID VALVE

ITEM NO.	DESCRIPTION
128	Solenoid Valve
129	Nipple

AIR SUPPLY REGULATOR

ITEM NO.	DESCRIPTION
130	Air Supply Regulator
131	Mounting Bracket
132	Supply Tube

GAUGES (Not Shown)

ITEM NO.	DESCRIPTION
135	Signal Gauge
137	Output Gauge
138	Branch Tee
139	Reducing Bushing

MODEL 148

SPRING/DIAPHRAGM ROTARY ACTUATOR

SECTION I

I. DESCRIPTION AND SCOPE

Models 148D and 148R are multi-spring, single acting, spring opposed, rotary actuators used with Cashco rotary control valves. Regardless of final installed failure action, the actuator is always pressurized on “top” of the traveling diaphragm plate.

Cashco has adopted a convention as follows in identifying its rotary actuators:

- “D” = Direct Action = ATC-FO Action
- “R” = Reverse Action = ATO-FC Action

Model 148 actuator is field reversible by arrangement of actuator with respect to valve stem and with respect to valve plug/disc orientation. Some disassembly is required, but no new parts are required.

Reference the technical bulletin of the valve body these actuators are unitized with for operating/ installation/selection specifications; i.e. available bench settings, strokes, etc.


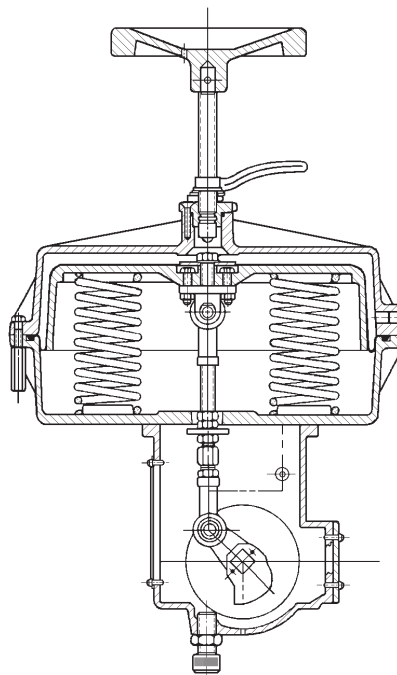


Figure 1
Model 148 Actuator

II. MODEL NUMBERING

SECTION II

The basic Model Number identifies the actuator size and action. To identify a unique Model Number, another series of 2-character modifiers is added to the basic number. This number will identify which basic valve body the actuator may be used on and which set of range springs is utilized. See Table 1.

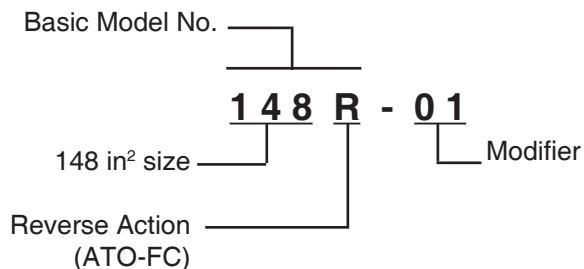

Valve Product	Modifier Series No.
Ranger QCT	-00 through -09
Premier EZO	-00 through -09
Premier Unlined	-00 through -09

**TABLE 1
ACTUATOR MODEL NO. vs. VALVE BODY MODEL
(Model 48 included for clarity)**

Full Actuator Model No.		Available Bench Settings		Air Supply Pressure		Unitized Products*
Basic Actuator Model No.	Modifier Number	psig	(Barg)	psig	(Barg)	
48R or 48D	-01	5-15	(.34-1.03)	20	(1.4)	1"-2" (DN25-50) Ranger QCT 3"-4" (DN80-100) Premier EZO or Premier Unlined
148R or 148D	-01	5-13	(.34-0.90)	20	(1.4)	3"-4" (DN80-100) Ranger QCT 6" (DN150) Premier EZO or Premier Unlined
148R or 148D	-02	10-26	(.69-1.79)	36	(2.5)	4"-8" (DN100-200) Ranger QCT, 10" (DN250) Premier EZO
148R or 148D	-03	7.5- 19.5	(.52-1.34)	27	(1.9)	8" (DN200) Premier EZO, 8"-12" (DN200-300) Premier Unlined

* Metric body size in parenthesis.

SECTION III

III. INSTALLATION

A. Orientation:

1. Recommended actuator major axis orientation with any model of Cashco rotary control valve is upwards with the valve in a horizontal pipe and the valve stem also horizontal; i.e. position "A" for ATO-FC, or position "B" for ATC-FO.
2. Both Ranger QCT and Premier EZO/Unlined control valve products incorporate an extended

valve body bonnet and a mounting yoke to allow the actuator to be far enough away from the valve body or mounting flanges to incorporate a minimum of 2" (50 mm) thickness of insulation. It should not be necessary to install thermal insulation to any portion of Model 148 actuator. **The maximum ambient temperature for installation is 180°F (83°C); the minimum ambient temperature is -20°F (-29°C).**

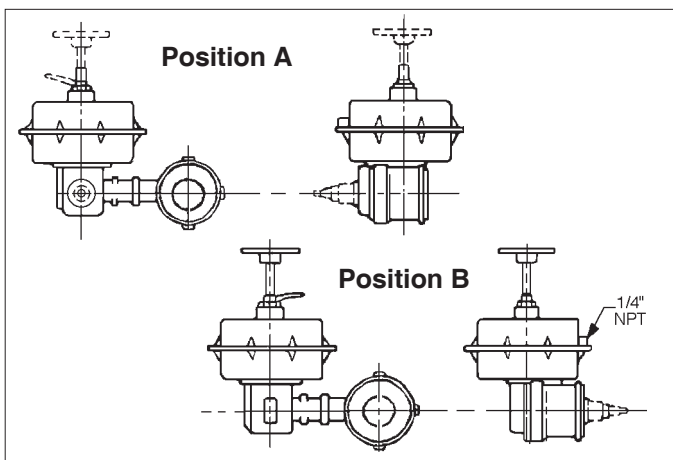


FIGURE 2: Mounting position of Ranger QCT to Model 148 Actuator with Model 73N-B P/P Positioner.

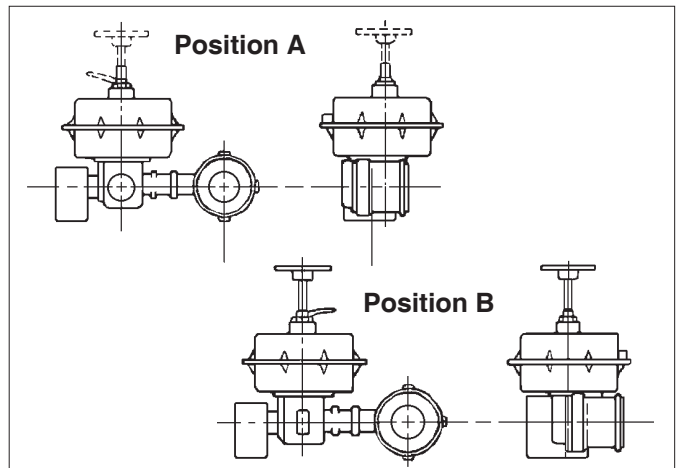


FIGURE 3: Mounting position of Ranger QCT to Model 148 Actuator with Models 9540R P/P or Smart Positioner's PS2 and 991.

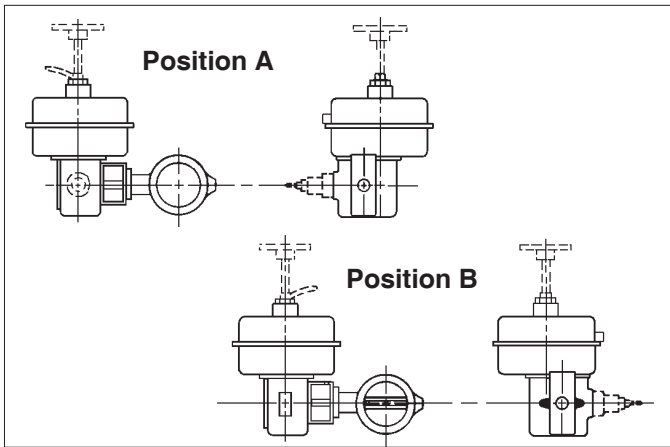


FIGURE 4: Mounting position of Premier EZO or Premier Unlined to Model 148 Actuator with Model 73N-B P/P Positioner.

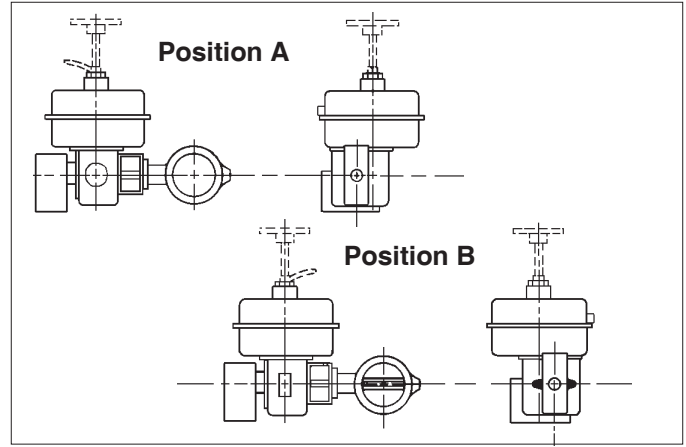


FIGURE 5: Mounting position of Premier EZO or Premier Unlined to Model 148 Actuator with Models 9540R P/P or Smart Positioner's PS2 and 991.

3. A 1/4"–NPT female connection for pneumatic LOAD is located on the side of the actuator's upper diaphragm casing near the casing flange joint. Reference specific Ranger-TB or Premier-TB for location of the connection.
4. Reference the valve body instructions — IOM-Ranger, IOM-Premier for additional instructions on installing unit in the process piping.

B. Air Supply:

1. Recommendation is that a desiccant dried, instrument quality air supply be used. Such a supply is recommended for outdoor installations, and is required in areas of freezing weather conditions.

2. If air supply contains moisture and/or lubricating oil, the air should be filtered with a coalescing type of filter prior to use in stroking the actuator.
3. Connection for the air loading pressure is 1/4" female NPT. A suitable pipe thread sealant is recommended to be used when installing the pipe or tube fitting. Exhibit care to prevent the sealant from getting inside the tube/pipe.
4. If an alternate gaseous fluid is used as a source of loading pressure (i.e. natural gas, nitrogen, etc.), this gas MUST NOT BE CORROSIVE to the aluminum casing material.

SECTION IV

IV. OPERATION

A. General:

1. Actuators supplied with 5-13 psig (0.34-0.90 Barg) benchset range are designed to operate with or without a positioner. A 3-15 psig (0.21-1.03 Barg) instrument output signal would be required to operate without a positioner.
2. On larger valve body sizes the benchset range is essentially 1.5–2.0 times that of the 5-13 psig (0.34-0.90 Barg); i.e. 7.5-19.5 psig (0.52-1.34 Barg) or 10-26 psig (0.69-1.79 Barg). Either a signal booster or a positioner will be required for full rotation (0°–90°) by the actuator.
3. If an "installed characteristic" other than the "inherent characteristic" is desired, a positioner plus a "characterization cam" is required. The inherent characteristic of Ranger QCT control valves is linear; for Premiers the inherent characteristic is equal percent.
4. See Tables 2 through 4 for available actuator models with benchset ranges per valve type and body size. (**Note:** Model 48 actuators included for clarity.) Proper **MAXIMUM** air supply pressures are also indicated.

**TABLE 2
RANGER QCT
ACTUATOR BENCHSET RANGES**

Valve Body Size		Actuator Model No.*	Failure Action	Benchset Range		Supply Pressure		Qty of Range Springs
in.	(DN)			psig	(Barg)	psig	(Barg)	
1", 1-1/2" & 2"	(25, 40 & 50)	48R-01	ATO-FC	5-15	(.34-1.03)	20	(1.4)	6
		48D-01	ATC-FO					
3" & 4"	(80 & 100)	148R-01	ATO-FC	5-13	(.34-.90)	20	(1.4)	4
		148D-01	ATC-FO					
4", 6" & 8"	(100, 150, & 200)	148R-02	ATO-FC	10-26	(.69-1.79)	36	(2.5)	8
		148D-02	ATC-FO					

*Model 48 included for clarity

**TABLE 3
PREMIER EZO
ACTUATOR BENCHSET RANGES**

Valve Body Size		Actuator Model No.*	Failure Action	Benchset Range		Supply Pressure		Qty of Range Springs
in.	(DN)			psig	(Barg)	psig	(Barg)	
3" & 4"	(80 & 100)	48R-01	ATO-FC	5-15	(.34-1.03)	20	(1.4)	6
		48D-01	ATC-FO					
6"	(150)	148R-01	ATO-FC	5-13	(.34-.90)	20	(1.4)	4
		148D-01	ATC-FO					
8"	(200)	148R-03	ATO-FC	7.5-19.5	(.52-1.34)	27	(1.9)	6
		148D-03	ATC-FO					
10"	(250)	148R-02	ATO-FC	10-26	(.69-1.79)	30	(2.1)	8
		148D-02	ATC-FO					

*Model 48 included for clarity

**TABLE 4
PREMIER UNLINED
ACTUATOR BENCHSET RANGES**

Valve Body Size		Actuator Model No.*	Failure Action	Benchset Range		Supply Pressure		Qty of Range Springs
in.	(DN)			psig	(Barg)	psig	(Barg)	
3" & 4"	(80 & 100)	48R-01	ATO-FC	5-15	(.34-1.03)	20	(1.4)	6
		48D-01	ATC-FO					
6"	(150)	148R-01	ATO-FC	5-13	(.34-.90)	20	(1.4)	4
		148D-01	ATC-FO					
8" & 10"	(200 & 250)	148R-03	ATO-FC	7.5-19.5	(.52-1.34)	27	(1.9)	6
		148D-03	ATC-FO					

*Model 48 included for clarity

SECTION V

V. MAINTENANCE

A. General:

1. Hereafter, all maintenance, disassembly, etc., is assumed to be done in an indoor shop.
2. Most actuators are a sub-assembly that is unitized with a body sub-assembly. Reference should be made to the IOM for the correct body utilized.
3. Where the body is not being disassembled, special care **MUST** be exhibited to prevent valve stem rotation during any disassembly or reassembly for all types of valves. Following this procedure will ensure not damaging seating surfaces.
4. Remove all instrument tubing and interconnected electrical wiring. Label "ends" to ensure proper reconnection.
5. All indicated Item Numbers that are with respect to IOM-Ranger, IOM-Premier EZO or IOM-Premier Unlined will be in parenthesis and underscored; i.e. (20); the same is true for Model 73N-B P/P positioner parts.
6. All Item Numbers that are with respect to this IOM-148 are not underscored; i.e. (19).
7. Item Numbers that relate to the Models 9540 or Smart positioners ((PA)) are in a double set of parenthesis and are underscored; i.e. ((3)).

B. Separation of Body Assembly (BA) from Actuator Assembly (AA):

1. Place completely joined valve assembly (AA) (BA) upon a flat work surface with sufficient room to move the individual sub-assemblies (AA) (BA) around. Place matchmarks on valve yoke (12), dust cover plate (23), arm housing (4) and actuator lower casing (2) to use as references at re-assembly.
2. Remove cover plate (20) away from arm housing (4) by removing four machine screws (36).

3A. Units with Model 73N-B P/P Positioner or No Positioner, and No Travel Limit Switch:

- a. Remove the two cap screws (31) securing the travel indicator dial lens (14) and travel indicator dial (15) using a 3/16" allen key wrench. Using a sharp pointed tool, hook under the edge of lens (14) and indicator dial (15) to remove.
- b. Remove cap screw (32) and lock tooth washer (55) securing the bright orange-colored travel indicator (16) to the upper

end of valve stem (Ranger (Z)), (Premier (3.2)) using a 7/32" allen key wrench. Remove travel indicator (16) off of protruding locator pin (51).

- c. If equipped with a Model 73N-B P/P positioner, remove the four cap screws (33) that secure the positioner assembly (PA) to the arm housing (4) using a 3/16" allen key wrench. Remove positioner assembly (PA) and feedback range spring (102). Loop a 6" piece of fine wire around the feedback linkage subassembly (72). Place one screw (33) back into a tapped opening. Pull wire taut and wrap around protruding screw (33) to keep the linkage (72) from interfering with further disassembly.

3B. Units with End-of-Shaft Model 9540R Positioners:

- a. Remove clear indicator cover ((22)) by removing two cap screws ((A3)).
- b. Remove red plastic pointer ((34)) by pulling outwards from hub of post-end screw ((23)).
- c. Make a matchmark on the characterization cam ((24)) at the point where the cam follower ((31)) touches. Using a wrench remove post-end screw ((23)) that secures characterization cam ((24)). Pull feedback lever ((13)) downwards; remove cam ((24)) and adhered to lock toothed washer ((28)) and shouldered washer ((27)).
- d. Remove the positioner unit ((I/P)) ((P/P)) from the baseplate ((26)) by removing cap screws ((11)) with lock washers ((12)) from side and back of baseplate ((26)).
- e. Remove the four cap screws ((78)) securing the bracket ((76)), baseplate ((26)) assembly and coverplate (13) to the arm housing (4).

3C. Units with End-of-Shaft Model 991 or PS2 I/P Positioners:

- a. Remove cap screws (31) securing the positioner mounting bracket ((9)) to coverplate (13).
- b. Set positioner / bracket assembly off to the side.
- c. Remove set screw ((16)) and washer ((17)) from end of the valve stem (Ranger (7) or (Premier (3.2)) securing carrier linkage ((3)) to stem.
- d. Remove linkage ((3)) from end of stem.

4. For ATO-FC valve action, it is necessary to remove “stem windup” - use either a. or b.
 - a. Rotate manual handwheel operator (MHWO) handwheel (58.1) approximately 1-3 revolutions CW (viewed from above handwheel) until interconnecting arm and stem linkage (5, 10) of actuator “relax”.
 - b. Pressurize actuator casing (1) only until the interconnecting arm and stem linkage (5,10) “relax”. DO NOT OVER-PRESSURIZE.

NOTE: Do not remove the drive coupling ((32)) unless required.

5. Using a 7/16" allen key wrench, remove the four sockethead cap screws (34) that secure the cover plate ((13)) (13) to the arm housing (4). Remove the cover plate ((13)) (13) by pulling outwards.
6. Remove ball bearing (18) over shaft-end (Ranger (7)), (Premier (3.2)).
7. Remove lock nut (46) that secures shoulder bolt pin (40) through lever arms (5). Remove shoulder bolt pin (40).
8. Units with Model 73N-B P/P Positioner or No Positioner. Remove indicator spacer (17) by sliding over end of shaft (Ranger (7)), (Premier (3.2)).
9. Grasp lever arms and rotate stem (Ranger (7)), (Premier (3.2)) as required to pull down and away from the lower rod end-L.H. (9) to allow clearance to remove arms (5). Slide subassembly consisting of both arms (5), spacer (12) or characterization cam (Model 73N-B(12)), and two spring pins (50) outwards and away from the arm housing (4) and over shaft-end (Ranger (7)), (Premier (3.2)).
10. While securely holding the actuator assembly (AA) with an overhead sling support, and the body assembly (BA) to prevent movement, remove the four bolts (24) that secure the body yoke (12) to the actuator arm housing (4). Slide the actuator assembly (AA) over the stem-end (Ranger (7)), (Premier (3.2)). Lay body assembly (BA) aside.

C. Changing Actuator Mounting Position (With No Change in Failsafe Action).


1. Determine the desired mounting position of actuator assembly (AA) with respect to valve body assembly (BA) from Figures 6-9, following pages.

2. The valve body/bonnet (1) to valve body yoke (12) can be rotated in four 90° increments around the centerline of the valve shaft (Ranger (7)) (Premier (3.2)).
3. Separate the actuator assembly (AA) from the body assembly (BA) as described in this Section, V.B.1. through V.B.10.
4. Determine if it is necessary to interchange packing studs (21) on Ranger or Premier Unlined, and yoke (12) attachment studs (20) on Ranger or Premier Unlined per following:

Rotary Valve	Degrees Rotation Position Change	Packing Studs Yoke Attach Studs Switch of Position
Ranger	90°, 270°	Required
Premier Unlined	180°	Not Required
Premier EZO	90°, 180°, 270°	Not Required


5. If required, remove both packing stud nuts (22) on Ranger or Premier Unlined, and any external live-loaded packing components (Ranger (27) (28) (29)), and set both aside carefully to prevent an “inadvertent mixing” of the component’s “stack-up”.
6. Place matchmarks between yoke (12) and valve bonnet/body (1). While holding yoke (12) with hand, remove yoke attachment stud nuts (22)(Ranger and Premier Unlined qty = 2) (Premier EZO qty = 4). Move loose yoke (12) over end of stem (Ranger (7)) (Premier (3.2)) and set aside.
7. If necessary, remove all studs (20) (21) from Ranger or Premier Unlined body assembly (BA) and relocate/interchange as required.
8. Reposition yoke (12) back onto body bonnet (1), shifted/rotated the number of degrees required (i.e. 90°, 180° or 270°), using the matchmarks to guide to correct position. Secure yoke (12) to body bonnet (1) by engaging two yoke attachment nuts (22) on Ranger and Premier Unlined, and four nuts (22) on Premier EZO. Torque per following:
 3" & 4" Rangers — 35-40 ft-lbs (47-54 N-m)
 All Others — 75-80 ft-lbs (101-108 N-m).
9. Reposition packing flange (Ranger (14)) (Premier Unlined (5)) over packing studs (21) for Ranger and Premier Unlined. Reinstall live-loaded packing components (Ranger (27) (28) (29) 2 sets). Reengage both packing stud nuts (22) for Ranger and Premier Unlined. Set torque level on packing stud nuts as indicated in IOM-Ranger QCT, IOM-Premier EZO, or IOM-Premier Unlined body assembly (BA) instructions.

**FIGURE 6:
ORIENTATION – RANGER QCT ACTUATOR MOUNTING POSITIONS
WITH MODEL 73 P/P POSITIONER**

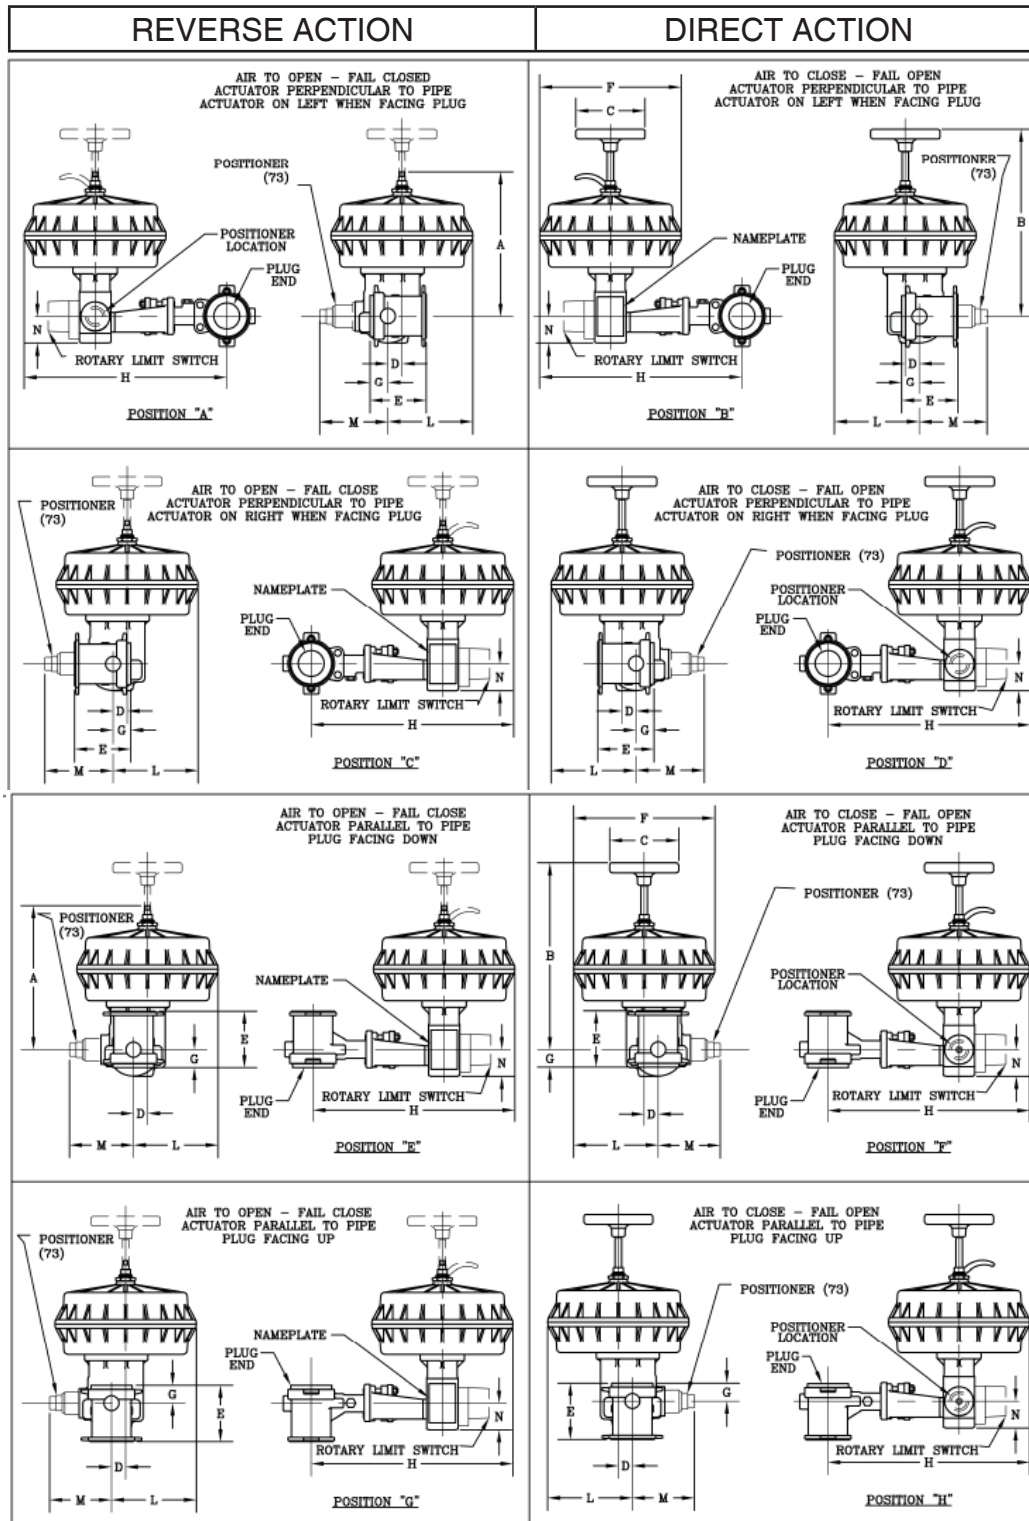

NOTES: 1. Flangeless valve design indicated; integral flanged units follow same orientation.
2. Dimension tables are included in the Ranger-TB.


**FIGURE 7:
ORIENTATION – RANGER QCT/PREMIER ACTUATOR MOUNTING POSITIONS
WITH MODELS 9540R P/P or 991 or PS2 I/P POSITIONERS**

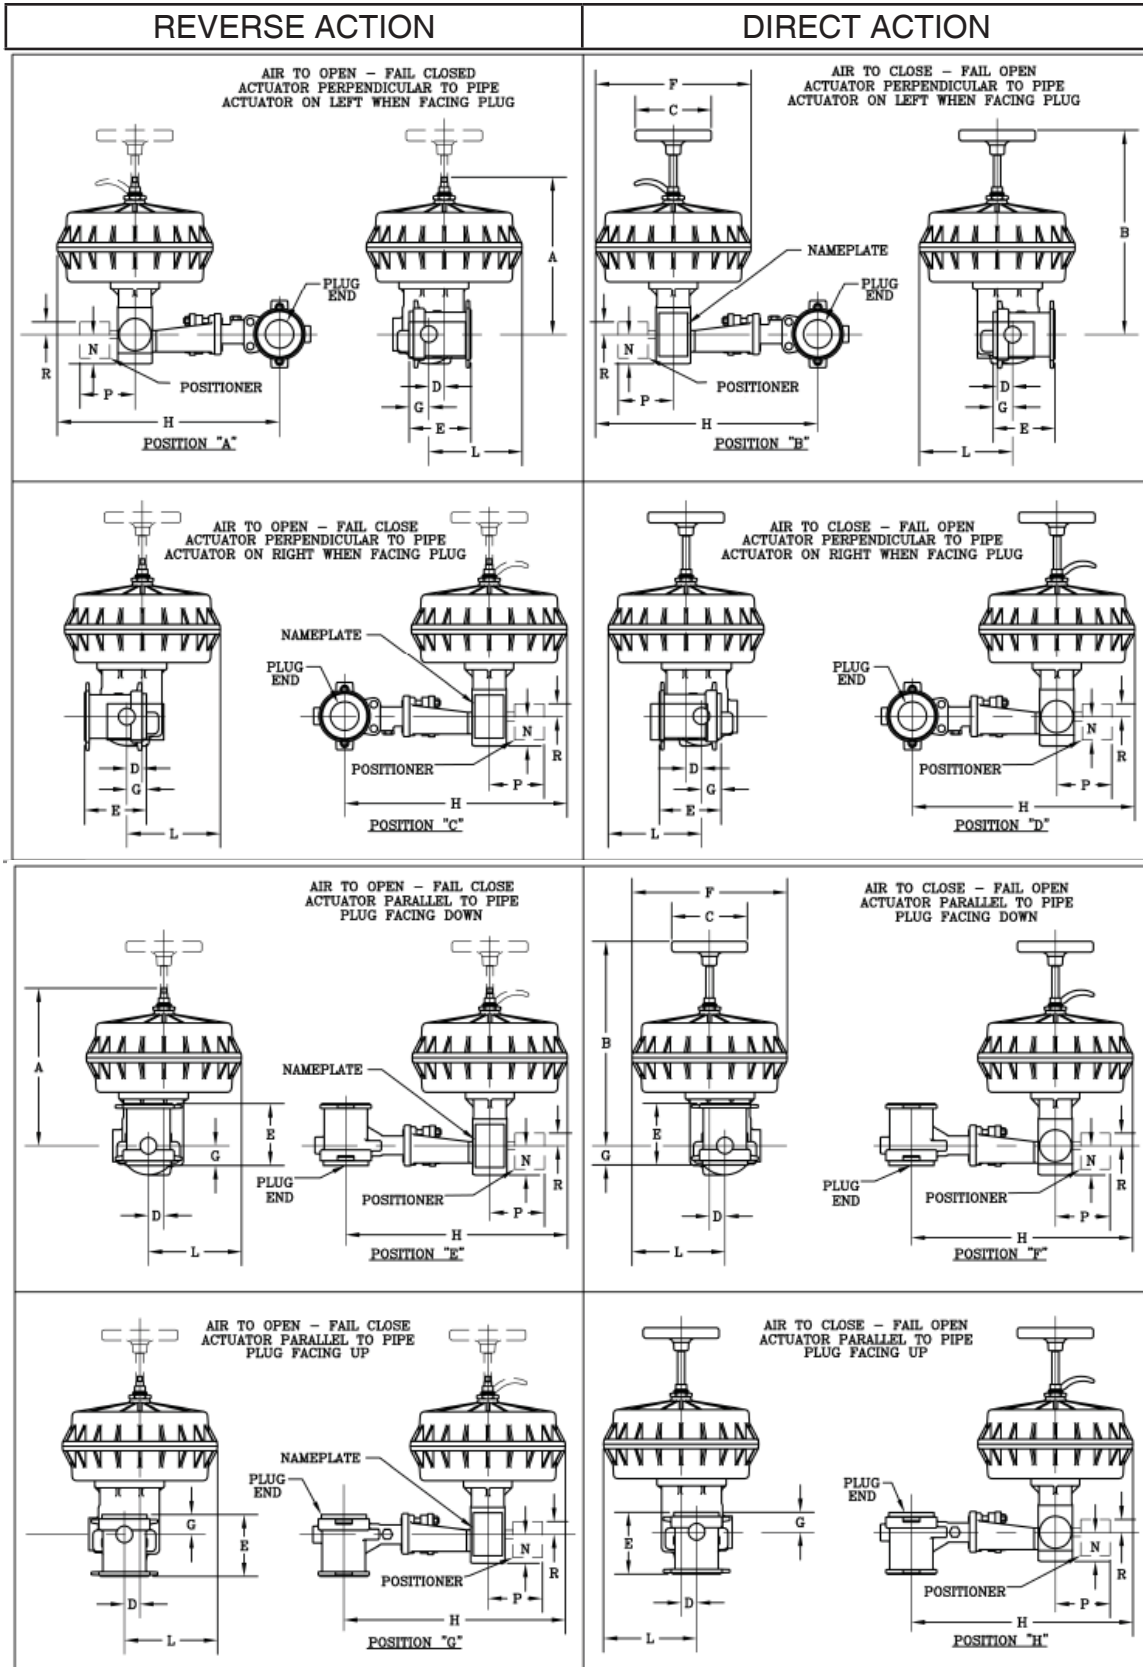

NOTES: 1. Flangeless valve design indicated; integral flanged units follow same orientation.
2. Dimension tables are printed in the Ranger-TB.


**FIGURE 8
PREMIER ACTUATOR MOUNTING POSITIONS – 73**

Position "A" is standard for fail closed action. Position "B" is standard for fail open action.
Position "C" and "D" covers vertical piping.

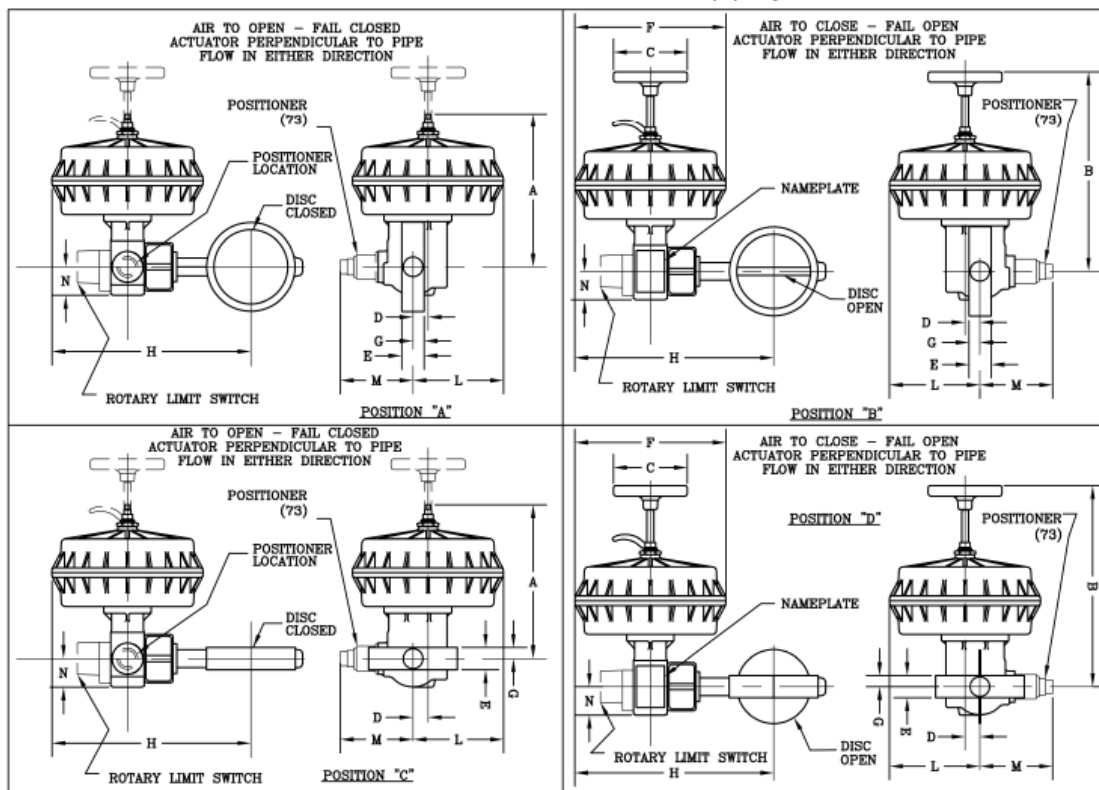

**FIGURE 9
PREMIER ACTUATOR MOUNTING POSITIONS – 9540R/991/PS2**

Position "A" is standard for fail closed action. Position "B" is standard for fail open action.
Position "C" and "D" covers vertical piping.

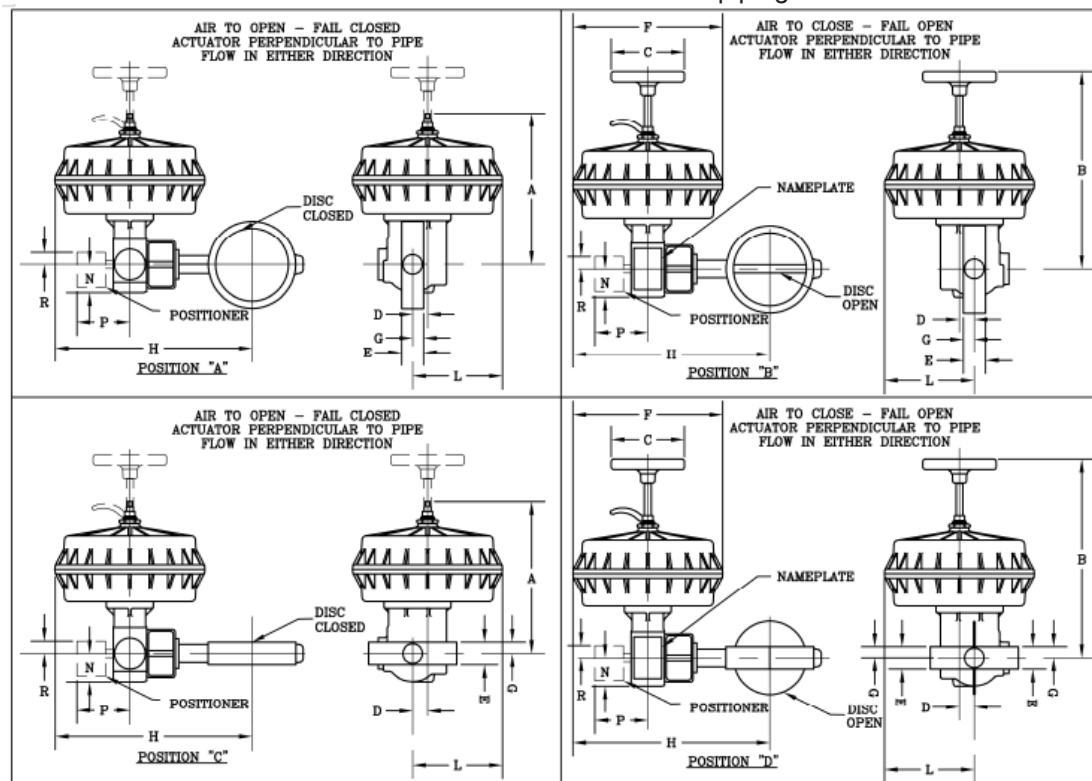

Note: All basic valve dimensions are printed in the Premier-TB

10. Reorient body assembly (BA) with respect to the actuator assembly (AA). Rejoin the body assembly (BA) to the actuator assembly (AA) as described in this section, V.I. Ensure proper plug (Ranger (6)) or disc (Premier (3.1)) position prior to reinstalling lever arms (5). Ensure that the lever arms (5) are “centered” within the arm housing (4), and with respect to the actuator stem linkage (8) (9) (10) (43) (44).
11. Recalibrate the unit (AA) (BA) and its positioner ((PA)).

D. Changing Failsafe Action:

1. Model 148 actuator (AA) is field-reversible for failsafe action with no additional parts required.
2. It is possible that both of the following can occur together for the degree of disassembly undertaken:
 - a. Failsafe action reversed.
 - b. Change in actuator mounting position.

NOTE: This section will be limited to the procedures for 2.a. above. If 2.b. is also desired, then it will be necessary to reference Subsection C. herein for the added procedural steps as required.

This subsection will thus be limited as indicated as follows (reference Figures 10– 11 herein for beginning and end graphic orientations).

Product	Begin		End	
	Position	Action	Position	Action
Ranger QCT	“A”	ATO-FC	“B”	ATC-FO
	“C”	ATO-FC	“D”	ATC-FO
	“E”	ATO-FC	“F”	ATC-FO
	“G”	ATO-FC	“H”	ATC-FO
	“B”	ATC-FO	“A”	ATO-FC
	“D”	ATC-FO	“C”	ATO-FC
	“F”	ATC-FO	“E”	ATO-FC
	“H”	ATC-FO	“G”	ATO-FC
Premier EZO or Premier Unlined	“A”	ATO-FC	“B”	ATC-FO
	“C”	ATO-FC	“D”	ATC-FO
	“B”	ATC-FO	“A”	ATO-FC
	“D”	ATC-FO	“C”	ATO-FC

3. To reverse actuator (AA) failsafe action basically requires:
 - a. Moving lever arms (5) from left side of valve’s stem (Ranger (7)) (Premier (3.2)) to right side, or vice versa. This is accomplished by removing actuator assembly (AA) from body assembly (BA) and rotating actuator (AA) 180° about the actuator’s stem linkage (8) (9) (10) (43) (44).
 - b. Rotating plug (Ranger (6)) or disc (Premier (3.1)) by 90°; i.e. from “closed” position to “open” position, or vice versa.
 - c. Reconnecting actuator (AA) to body (BA) with lever arms (5) also rotated 180°.

NOTE: Valve stem always goes CW to “close”, viewed from stem-end.

4. Separate the actuator assembly (AA) from the body assembly (BA) as described in this Section, V.B.1. through V.B.10.
5. Rotate plug (Ranger (6)) or disc (Premier (3.1)) position 90° to new failsafe position.
6. Slide actuator assembly (AA) that has been rotated 180° back over the stem-end (Ranger (7)) (Premier (3.2)). Align bolt holes between arm housing (4) and valve yoke (12).
7. Reengage bolting (24) securing arm housing (4) to yoke (12). Torque bolting (24) to 30-35 ft-lbs (40-47 N-m).
8. Ensure that the reinstalled lever arms (5) are also rotated 180° in the same reference as the actuator assembly (AA) was rotated. **(NOTE: The repositioned arms (5) will appear to have only changed relative position by 90° in another plane.)** Ensure the lever arms assembly (5) is “centered” within the arm housing (4), and with respect to the actuator stem (8) (9) (10) (43) (44).
9. Rejoin the body assembly (BA) to the actuator assembly (AA) as described in this Section, V.I.

E. Diaphragm Replacement:

1. Place unit assembly (AA) (BA) onto a flat work bench with actuator upper casing (1) on top side; i.e. handwheel (58), if supplied, on top side. Place a matchmark between actuator casings (1) (2).
2. Ensure that all air pressure is released from actuator assembly (AA) casing (1).
3. Ensure that manual handwheel (58) operator is fully rotated upwards by loosening locking lever (59) and rotating CCW (viewed from top side) as far as possible.

WARNING

SPRING UNDER COMPRESSION. Prior to removing flange bolting (27, 28, 41, 42) relieve range spring (11) compression by rotating the handwheel or adjusting screw assembly (58) CCW (viewed from above handwheel (58) until all spring compression is relieved. Failure to do so may result in flying parts that could cause personal injury.

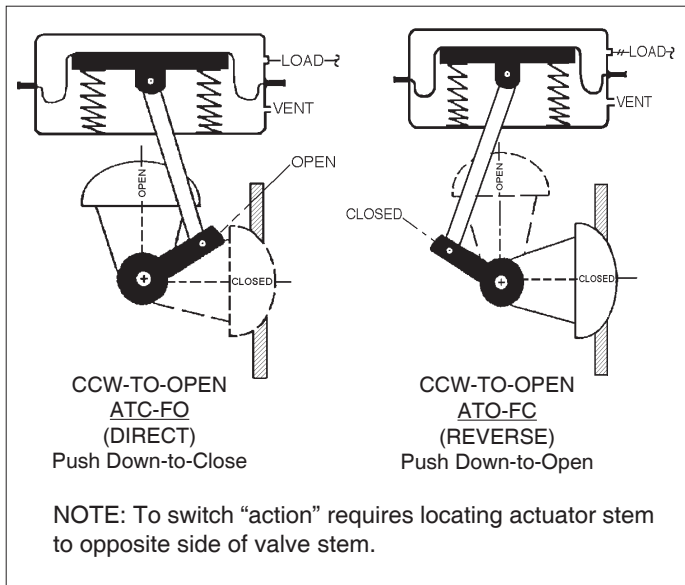


Figure 10

Ranger Plug vs. Lever Arm vs. Actuator Orientation

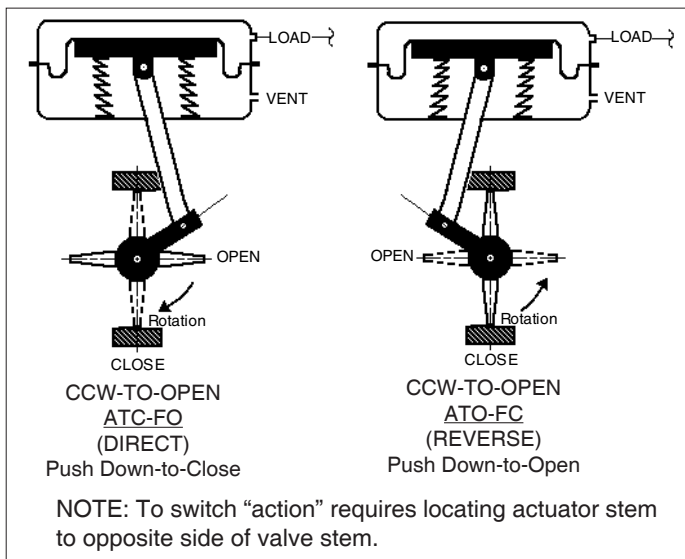


Figure 11

Premier Plug vs. Lever Arm vs. Actuator Orientation

4. Loosen all casing (1,2) flange bolting (27, 28, 41, 42) two revolutions. Pry apart the casings (1,2) if "stuck" together.
5. In one revolution increments loosen all opposing nuts (41, 42) until the short bolting (27, 41) disengages and can be removed. Continue loosening extension nuts (42) in the alternating, one revolution pattern ensuring that the casings (1, 2) are being "pushed apart", until the extension bolting (28, 42) is disengaged and removed.
6. Lift the upper casing (1) upwards and away from the lower casing (2) and set upper case (1) aside.

7. Remove pivot screw (25) by rotating CCW (viewed from above), and seal (56).
8. Pry diaphragm washer (52) loose. Clean washer (52) of any rubberized sealant.
9. Prior to diaphragm (6) removal, inspect to see where a diaphragm (6) leak may have been caused by wearing against the upper case (1) at any point. Inspect the upper case (1). **NOTE:** The diaphragm (6) is a rolling diaphragm and should NOT touch the upper case (1) at any point of the piston's (3) upwards/downwards travel. If there is side movement of the piston (3), further disassembly for inspection of range springs (11) is mandatory. If there is topside wear, uptravel stop washer (54) is not properly adjusted.
10. Remove diaphragm (6) and discard.
11. Clean surface of piston (3) of any foreign material that could cause a premature failure of diaphragm (6) if covered. Turn diaphragm (6) "inside-out". Place diaphragm (6) onto piston (3) centered over the center bolt hole in piston (3); ensure that the smooth black surface of diaphragm (6) is on the "pressurized air-side".
12. Place silicone sealant, Dow-Corning "Silastic" #732 RTV or equal, around the diaphragm's (6) center bolt hole opening. Lay diaphragm washer (52) onto sealant and centered over bolt hole. Replace seal (56) on top of washer (52).
13. Place a tool around the skirt circumference of the piston (3) to secure during tightening; use tape or similar material to prevent this tool from leaving sharp edges that could damage the new diaphragm (6). Place Loctite #242, or equal, thread sealant onto the threads of pivot screw (25); engage and tighten screw (25) to 15-20 ft-lbs (21-27 N-m) torque. **NOTE:** Piston (3) must be held from rotating to prevent the multiple nested range springs (11) from tilting away from a common vertical centerline between hubs of lower case (2), piston (3) and range spring (11).
14. Fold the diaphragm (6) skirt from its inside-out orientation, down and around the piston's (3) skirt. Using a rounded-end tool, push the diaphragm (6) down between the lower casing (2) sidewall and the piston's (3) skirt, forming a "valley". Work diaphragm (6) to ensure that all folds or "puckers" are taken away. Press the diaphragm's (6) lower/outer beaded edge into the groove. Again, smooth out all folds or puckers in diaphragm (6).

15. Place a light coating of graphite powder lubricant, Dow-Corning "Molycote" (dry molybdenum disulfide) or equal, on the skirted areas of diaphragm (6), and into the "valley". This lubricant will prevent the diaphragm (6) from "sticking together" or abrading itself during piston (3) travel.
16. If actuator (AA) is supplied with a manual handwheel operator (MHWO), place a heavy-duty wheel bearing grease, Lubriplate No. 130-AA, or equal, into the v-notch in the head of the pivot screw (25).
17. Inspect working of manual handwheel operator (MHWO) located within the upper casing (1) for signs of wear. Go to Subsection F. for maintenance of manual handwheel operator (MHWO).
18. Place properly oriented upper casing (1) down onto the lower casing (2) with matchmarks aligned and all casing flange bolt holes centered. **NOTE:** *The casing flanges (1) (2) will not touch together.*



WARNING

1. **Elongated extension bolting (28) (42) is a safety feature to allow relaxation of range springs (11) to the piston's (3) mechanical uptravel stop at disassembly.**
2. **Extension bolting (28) (42) should ONLY be replaced with factory replacements; DO NOT substitute conventional bolting.**
3. **Extension bolting (28) (42) MUST be located 180° opposite of each other in the flange bolting array. Failure to heed could cause personal injury at a later disassembly.**

19. Insert both extension bolts (28) through two upper casing (1) bolt holes that are located 180° across from each other; these bolts should extend through the lower casing (2) flange enough to engage its companion extension nut (42). Place a friction-reducing thread lubricant on the lower exposed threads of the extension bolts (28).
20. Place the same friction-reducing thread lubricant into the threaded portion of both extension nuts (42). **NOTE:** *Only one end of extension nut (42) is threaded. It is not possible to engage the extension bolting (28) (42) with the extension nut (42) upside down; the threads of the nut (42) will not engage.* Engage both extension nuts (42) until they draw tight to the lower casing (2) flange's underneath side.

Place one short bolt (27) through a bolt hole of upper flange (1) to serve as an indicator. In one-revolution increments and an alternating cross-pattern, draw the casing (1) (2) flanges towards each other. When there is at least one-half of the indicator short bolt (27) threads exposed through the lower casing (2) flange, engage nut (41) until the short bolting (27) (41) is finger-tight.

21. Place all short bolts (27) through the remaining upper casing (1) flange bolt holes, and engage each ones nut (41) until the short bolting (27) (41) is finger-tight.
22. In an alternating cross-pattern, tighten all flange bolting (27) (28) (41) (42) in one-revolution increments. When all bolting (27) (28) (41) (42) is hand-wrench tight, torque to levels indicated below:

Item Nos.	Description	Torque Req'd	
		ft-lbs.	N-m
27, 41	Short Bolting	15-18	20-24
28, 42	Extension Bolting	8-12	11-16

23. Connect a temporary instrument air source directly to the 1/4" FPT connection in the upper casing (1). Pressurize to the "Air Supply Pressure" level as indicated in Table 2-4 of Section IV.A.4. for the corresponding actual benchset range of the actuator being serviced, and test for leakage at upper casing (1) to lower casing (2) joint. Also test for leakage at manual handwheel operator (MHWO), rotating handwheel (58) in and out several times during the test.
24. Release all air pressure into actuator upper casing (1); remove air source from 1/4" FPT connection.

F. Manual Handwheel Operator:

1. Reference Item Number drawing at end of IOM for details of the manual handwheel operator (MHWO) sub-assembly.
2. Place unit (AA) (BA) on a flat work surface with the handwheel (58) on topside.
3. Ensure all air pressure has been released from actuator casing (1). Ensure handwheel (58) is fully "backed-out" by rotating CCW (viewed from above); i.e. is as "high" as possible.
4. Remove slotted-head screw (65) securing handwheel gland (67) to upper casing (1).
5. Place a smooth-jawed wrench onto handwheel


- gland (67) and rotate CCW (viewed from above) to removal of the manual handwheel operator sub-assembly (MHWO).
6. Place the sub-assembly (MHWO) into a vise, grasping with leaded jaws on the coarse-screwed handwheel stem (58.2) near the base of the handwheel (58.1), oriented to allow driving-out the rolled pin (66) securing the handwheel (58.1) to the handwheel stem (58.2).
 7. Drive pin (66) out using a suitable punch and locking pliers. Set pin (66) aside for reuse. Remove handwheel (58.1) from stem (58.2).
 8. Rotate locking lever (59) CCW (viewed from handwheel-end) to removal.
 9. Slide washer (60) and threadseal washer (61) off handwheel stem-end (58.2). Discard threadseal washer (61).
 10. Remove remaining engaged parts (67) (58.2) from vise. Reorient horizontally in vise along flats of handwheel gland (67).
 11. Place stick punch in drive-pin hole and rotate handwheel stem (58.2) CW (viewed from handwheel (58.1) end) back into the handwheel gland (67). When stem (58.2) protrudes far enough through gland (67), relocate locking pliers to opposite end and rotate stem (58.2) until stem (58.2) fully disengages.
 12. Remove O-ring (62) from handwheel gland (67).
 13. Remove O-ring (63) from handwheel stem (58.2).
 14. Place parts (58.2) (59) (60) (64) (67) into a suitable solvent and clean as much as possible, remove parts and allow to dry.
 15. Inspect handwheel stem (58.2) with embedded ball (64) for wear on ball (64). If ball (64) is worn, or threads of stem (58.2) are damaged, replace handwheel sub-assembly (58); i.e. parts (58.1) (58.2) and (64).
 16. If handwheel gland (67) shows signs of wear in female threads (i.e. loose gauging), replace handwheel gland (67) and self-tapping slotted-head screw (65). **NOTE:** A replacement handwheel gland (67) will require drilling a new 5/32" x 1-1/16" (4mm x 25.5mm) deep hole into the lip of the upper casing (1).
 17. Install new O-ring (63) onto handwheel stem (58.2) and new O-ring (62) onto handwheel gland (67).
 18. Place a thin coat of lithium grease on the handwheel stem O-ring (63) and the immediate surrounding area of the handwheel stem (58.2).
 19. Engage the handwheel stem (58.2) into the gland's (67) underneath side. When the handwheel (58.1) end of the stem (58.2) protrudes through the gland's (67) upper side, place a new threadseal washer (61) over the stem's (58.2) upper end. Continue engaging stem (58.2) until the O-ring (63) is pulled into the gland (67).
 20. Install washer (60) and locking lever (59) onto stem (58.2).
 21. Place handwheel stem (58.2) into a soft-jawed vise. Position handwheel (58.1) onto stem (58.2) with holes for pin (66) aligned. Insert pin (66) and drive through stem (58.2) and handwheel (58.1) far side. Remove handwheel assembly (MHWO) from vise.
 22. Place heavy duty wheel bearing grease as specified previously onto the stem-end ball (64). Engage the gland (67) into the upper casing (1) female opening. Align tapped opening for self-tapping slotted-head screw (65).
 23. Install slotted-head screw (65) fully.
- G. Adjusting Screw Assembly and Actuator Plug Maintenance:**
1. Reference Item Number drawing at end of the IOM.
 2. Determine the portion of the text of Subsection F. above that would apply to the adjusting screw assembly (ASA) counterpart of the manual handwheel operator (MHWO) assembly, and complete maintenance in a similar procedure. **NOTE:** *Adjusting screw assembly (ASA) is ONLY applied to reverse-action, ATO-FC Ranger QCT units (AA) (BA).*
 3. Determine the portions of the text of Subsection F. previous that would apply to the actuator plug (67) counterpart of the manual handwheel operator (MHWO) assembly, and complete maintenance in a similar procedure. **NOTE:** *Actuator plug (67) may be applied on all Premier units (AA) (BA) and ONLY direct-action, ATC-FO Ranger QCT units (AA) (BA).*
- H. Replacement of Range Springs:**
1. Replacement of actuator assembly (AA) range

springs (11) requires what is essentially a complete actuator (AA) disassembly. It is recommended that the range spring (11) replacement should include:

- a. diaphragm (6) replacement
- b. O-ring(s) (62) (63) replacement
- c. threadseal (61) replacement.

2. Separate the actuator assembly (AA) from the body assembly (BA) as described in this Section, V.B.1 through V.B.10.

3. Push piston (3) downwards by:
 - a. manual handwheel operator (MHWO) being rotated CW (viewed from above handwheel (58.1)) approximately one-half of full travel.
 - b. pressurize actuator to approximately one-half of the stated benchset range; i.e. for 6-26 psig (0.41-1.79 Barg) pressurize to approximately 16 psig (1.1 Barg).


WARNING

Do NOT stick hand or fingers into the arm housing (4) when the actuator is pressurized. ONLY USE TOOLS WITHIN ARM HOUSING (4).

4. Place a wrench on the hex surface of the actuator's stem/pushrod (10). Rotate the push rod (10) CCW (viewed from lower L.H. rod end (9)); keep track of number of revolutions to disengage from upper R.H. rod end (8) in box below.

Number of revolutions of push rod (10) required to disengage from upper R.H. rod end (8). _____

5. Allow piston (3) to travel upwards by:
 - a. manual handwheel operator (MHWO) being rotated CCW (viewed from above handwheel (58.1)) fully out/up.
 - b. releasing air pressure as applied per 3.b. above; remove the air supply from actuator upper casing (1).

6. Orient actuator assembly (AA) with upper casing (1) on top side. Disassemble the actuator assembly (AA) to the point of diaphragm (6) replacement as described in this Section V.E.1 through V.E.10.

7. Place a matchmark at flange of lower casing (2) and correspondingly on piston (3). Lift off piston (3) in a vertical direction to prevent tipping range springs (11) over. Set piston (3) on work surface upside down.

8. Remove all range springs (11) and set in a row side-by-side. Inspect for any difference in the spring (11) height or verticality. Replace any abnormal spring(s) (11). Replace any springs (11) that show cracks, nicks, damaged epoxy coating, corrosion, etc. Inspect springs (11) using data in table below as the "normal":

Part Number	Benchset Range		Qty. of Springs	Free Height* in.	Coating Color
	psig	(Barg)			
830-H2-5-R9066-95	5-13	(0.34-0.90)	4	7.75	Black
	7.5-19.5	(0.52-1.34)	6		
	10-26	(0.69-1.79)	8		
* Acceptable $\pm 1/8"$ (± 3 mm)					

9. Inspect clevis (7), upper R.H. rod end (8), clevis pin (48) and retaining ring (49) for signs of looseness and/or wear; replace any worn parts. Check bolting (26) (47) for looseness; tighten as necessary to 15-18 ft-lbs (20-23 N-m).

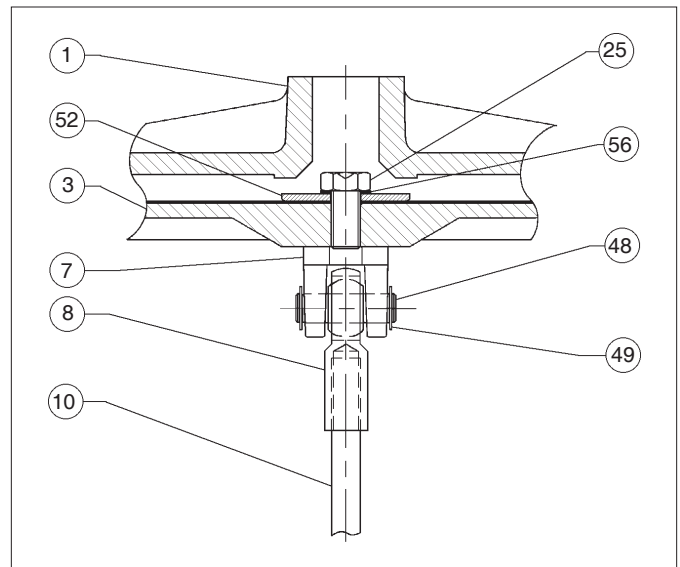
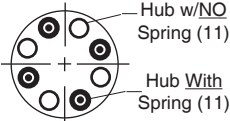
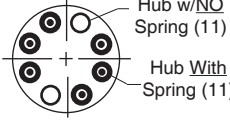
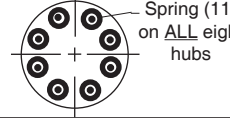


Figure 12

Piston & Clevis Close-up

10. Place range springs (11) back onto hubs of lower casing (2) per following table:

NOTE: Every spring (11) has another spring (11) 180° across/opposite.

Benchset Range		Quantity of Springs	Array
psig	(Barg)		
5-13	(0.34-0.90)	4	
7.5-19.5	(0.52-1.34)	6	
10-26	(0.69-1.79)	8	

11. Aligning matchmarks of Article 7. above, reposition piston (3) back onto top side of range spring (11) array. Using a mirror tool and flashlight, look through the rectangular opening in the lower casing (2) from within the arm housing (4) to ensure that the piston (3) hubs are centered within the ID of the range spring (11) coil. It may be necessary to use a tool to move the upper end of the range spring (11) as necessary to be "captured" by a piston (3) hub. Each spring (11) **MUST** be captured by a hub on top and bottom ends.
12. Reinstall a new diaphragm (6) and reassemble the upper casing (1) as described in this Section, V.E.11 through V.E.23.
13. Using air pressure of V.E.23., pressurize the actuator upper casing (1) to the upper value of the stated benchset range plus 2 psi (0.14 Bar); i.e. for 10-26 psig (0.69-1.79 Barg) benchset range, pressurize to 26+2 = 28 psig (1.79+0.14 = 1.93 Barg). This pressure level should cause the piston's (3) lower skirt-edge to bottom out on the lower casing (2).
14. Using only tools (i.e. no fingers within arm housing (4)) to grasp the actuator stem/push rod (10), insert push rod (10) with interconnected parts (9) (43) (43) (44) (54) into arm housing (4) and engage into dangling upper R.H. rod end (8) by rotating CW (viewed from lower L.H. rod end (9)). Count number of revolutions of push rod (10) engagement to match those recorded in Article 4., previous, at removal.
15. Release all air pressure into actuator upper casing (1); remove air source from 1/4" FPT connection.
16. Join the actuator assembly (AA) to the body assembly (BA) as described in this Section, V.I.

I. Joining of Body Assembly (BA) to Actuator Assembly (AA):

1. Determine proper orientation of actuator (AA)-to-body (BA) for the following considerations:
 - failsafe action
 - installed piping orientation.

Reference Sub-sections V.C. and V.D. to see schematics of orientations available.

2. Position body assembly (BA) on a flat work surface. Orient such that the actuator assembly (AA) can be oriented with the top of the actuator upper casing (1) on topside; i.e. manual handwheel operator sub-assembly (MHWO) stem (58.2) vertically oriented, if supplied.
3. Place stem spacer ring (24) with its set screw (39) located to not be protruding into the spacer ring's (24) internal diameter, over the end of the valve's stem (Ranger (Z), Premier (3.2)) and beyond the circumferential groove of the upper round portion of the valve's stem (Ranger (Z), Premier (3.2)).
4. Place round dust cover plate (23) over valve stem's (Ranger (Z), Premier (3.2)) end and onto the round part of the stem (Ranger (Z), Premier (3.2)).
5. Place "C-type" snap retainer ring (57) into a tool designed to use with snap rings. Spread ring (57) apart and locate over valve's stem (Ranger (Z), Premier (3.2)) end and move to circumferential groove in round portion of stem (Ranger (Z), Premier (3.2)) and release ring (57) into groove.
6. Push dust cover plate (23) up against the retainer ring (57) and hold. Push stem spacer (24) up against dust cover plate (23) and hold. Using a 3/32" allen key wrench, tighten set screw (39) firmly to secure plate (23) and spacer (24) to stem (Ranger (Z), Premier (3.2)).
7. Using an overhead hoist, lift the actuator assembly (AA) (with position indicator apparatus (13,14,15,16,17,31,31,34), lever arm apparatus (5,5,12,40,46,50,50), end-of-shaft bearing (18) and cover plate (20) removed) properly oriented and shift laterally over the protruding stem (Ranger (Z), Premier (3.2)) and the attached dust cover plate (23). Bring the round opening of the arm housing (4) into position against the mounting yoke (12). Raise/lower/tip/rotate the actuator assembly (AA) to align at least one bolt hole of the yoke

- (12) with one bolt hole in the arm housing (4). Insert one cap screw (24) from behind the yoke's (12) bolt hole and engage with the tapped opening in the arm housing (4); finger tighten cap screw (24).
8. Reposition actuator assembly (AA) as required to align the three remaining bolt holes securing yoke (12) with arm housing (4). Insert the three cap screws (24) and finger-tighten.
 9. Use cardboard, or some tool that can provide approximately 1/32" (0.80 mm) thickness, and wedge three such spacers between the circumferential edge of dust cover plate (23) and the round opening in the arm housing (4).
 10. Wrench-tighten in one-half revolution increments and alternating cross-pattern the four cap screws (24) securing actuator assembly (AA) to body assembly (BA). Final tightening should be by torque wrench to 30-35 ft-lbs (40-47 N-m).
 - 11A. For units (AA, BA) with Model 73N-B P/P positioner:
 - a. Secure characterization cam (12) properly oriented over the two rolled spring pins (50) stuck into the inner lever arm (5).
 - b. Place the outer lever arm (5) over the two spring pins (50) with the bolt holes aligning. Press the apparatus (5,50,50,5) together.
 - 11B. For Units (AA, BA) with no positioner, Model 9540R P/P positioner or 991 or PS2 I/P positioner:
 - a. Similar to 11A. above, except a spacer washer (12) replaces the cam (12) of a Model 73N-B P/P positioner.
 12. Position valve plug (Ranger (6))/ disc (Premier (3.1) in the proper "Full Closed" or "Full Open" position. **NOT FOLLOWING THIS ARTICLE WILL CAUSE MECHANICAL DAMAGE TO THE UNIT'S (AA, BA) MECHANISM!** See Figure 13.
 13. Place properly oriented lever arm apparatus (5,50,12,50,5) over shaft's (Ranger (7), Premier (3.2)) square end and push into place while holding lower L.H. rod end (9) "swung" aside so as to not interfere. **NOTE: For units (AA, BA) with 73N-B P/P positioner, it will be necessary to "swing" the feedback linkage subassembly ((72)) out of the way as the lever arm apparatus (5,50,12,50,5) is pushed into place.** Center-align lever arm apparatus (5,50,12,50,5) transversely within the arm housing (4), directly over stop screw (35).
 - 14A. For units (AA, BA) with Model 73N-B P/P positioner: Place indicator spacer (17) over end of shaft (Ranger (7), Premier (3.2)) properly oriented for travel indicator (16) to be "located" by spring pin (51). See Fig. 13.
 - 14B. For units (AA, BA) with Model 9540R P/P positioner or 991 oR PS2 I/P positioner: Reference the IOM-9540R or 991 or PS2 for proper instructions on reinstallation of indicator spacer (17) and drive coupling ((32)).
 15. Align the bolt holes in lever arms (5) and lower L.H. rod end (9). **NOTE: For units (AA, BA) with ATO-FC action it will be necessary to offset "stem windup" by –**
 - a. Rotating manual handwheel operator (MHWO) handwheel (58.1) approximately 1-3 revolutions CW (viewed from above handwheel) until the bolt holes of lever arms (5) and lower L.H. rod end (9) are aligned.
 - b. Pressurize actuator casing (1) only until the bolt holes of the lever arms (5) and the lower L.H. rod end (9) align.
 16. Insert shoulder bolt (40) through the round opening of the arm housing (4) and into the bolt holes of lever arms (5) and lower L.H. rod end (9).
 17. Ensure that lever arm apparatus (5,50,12,50,5) is transversely centered within the arm housing (4). Engage lock nut (46) together with shoulder bolt. Wrench-tighten to a torque of 15-20 ft-lbs (20-27 N-m).
 18. Place ball bearing (18) into cover plate (13). Place cover plate (13) into arm housing (4) in correct orientation. There should be a problem with the cover plate (13) not aligning properly. Slowly remove the "stem windup" introduced in Article 15 above by reversing the loading forces from the manual handwheel operator (MHWO) or the air pressure to actuator upper casing (1). Removal of the forces will allow the cover plate (13) bolt holes to align with those of the arm housing (4), and allow the cover plate (13) to properly shoulder into the arm housing (4).
 19. Secure cover plate (13) to arm housing by engaging the four cap screws (34) into the arm housing (4); finger-tighten. In a crossing pattern wrench-tighten the four cap screws (34) in 1/4 revolution increments using a 7/32" allen key wrench until firmly tight. **NOTE: Ensure that cover plate (13) is shouldered properly into position on back side.**

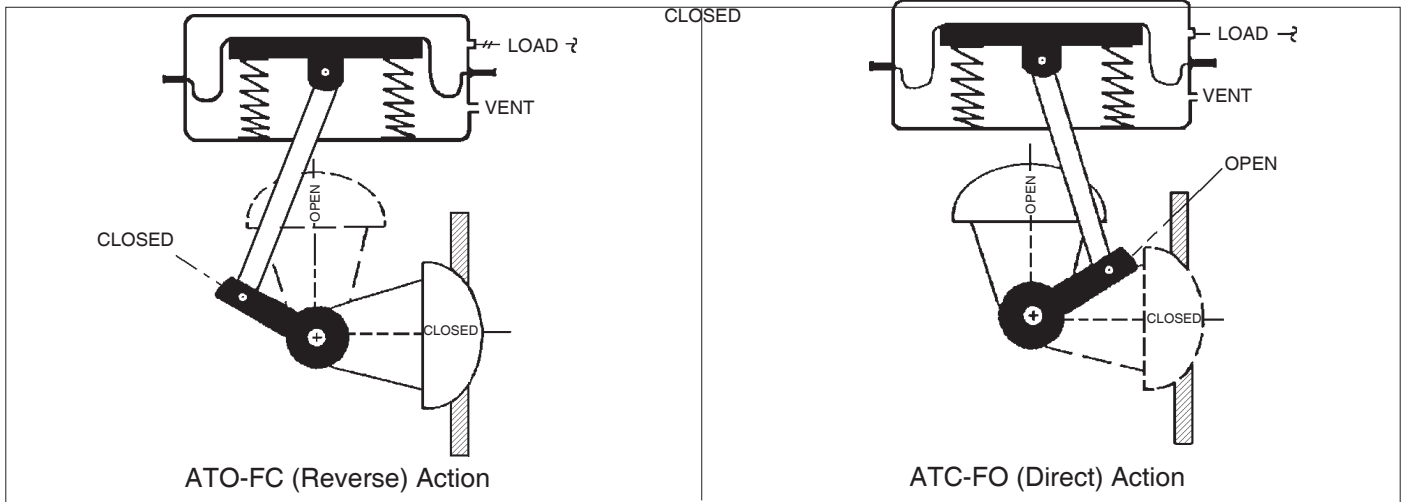


Figure 13:

20A. Units (AA, BA) with Model 73N-B or without positioner:

- a. Insert rolled spring pin (51) into indicator spacer (17). Pin (51) will protrude approximately 1/16" (1.5 mm).
- b. Position travel indicator (16) onto end of shaft (Ranger (Z), Premier (3.2)) impaling over protruding spring pin (51) and aligning with shaft-end tapped opening with hole in travel indicator (16). Align lock-tooth washer (55) on spacer (17) and secure travel indicator (16) to shaft (Ranger (Z), Premier (3.2)) with cap screw (32) using a 7/32" allen key wrench until firmly tight.
- c. Position travel indicator dial (15) onto cover plate (13) properly oriented.
- d. Position clear plastic dial lens (14) over

indicator dial (15), aligning bolt holes of lens (14), dial (15) and cover plate (13).

- e. Secure lens (14) and dial (15) to cover plate (13) by engaging the two socket head cap screws (31) using a 3/16" allen key wrench and tighten firmly; do not over-tighten and crack plastic lens (14).

20B. Units (AA, BA) with Models 9540R or 991 or PS2 positioners: Reference the IOM-9540R or 991 or PS2 for proper instructions on reinstallation of positioner ((PA)) assembly to shaft-end.

SECTION VI

VI. CALIBRATION

A. General:

1. This section covers calibration of the actuator assembly (AA) to a Ranger QCT, Premier EZO, or Premier Unlined body assembly (BA).
2. Positioner, if installed, requires reference to the specific positioner model IOM for proper calibration procedure.
3. All indicated Item Numbers that are with respect to this Model 148 actuator assembly (AA) are in parenthesis but are not underscored; i.e. (20). Item Numbers that relate to the body assemblies (BA) are in parenthesis and are underscored; i.e. (7). Item Numbers that relate to the positioners ((PA)) are in a double set of parenthesis and are underscored; i.e. ((3)).
4. This Section assumes that the actuator assembly (AA) and body assembly (BA) have been interconnected together as recorded in Section V.
5. This Section assumes that the calibration is performed with the valve unit removed from its normal pipeline location, and is in a repair shop located on a suitable work bench. Actuator stem/push rod subassembly (8, 9, 10, 43, 43, 43, 44, 54) should be oriented vertically.
6. Premier EZO (lined) body assembly (BA) **MUST** be properly clamped between two ANSI 150# RF weld neck flanges. **NOTE: Flanges MUST be of weld neck type! Clamping of liner (Premier (10)) will prevent false movement of liner (Premier (10)) within body (1).**
7. In this Section reference will be made to three phrases –
 - a. “lower value of benchset range”,
 - b. “higher” value of benchset range”,
 - c. benchset range.

The meaning of these phrases is summarized in the following table.

Benchset Range*		Lower Value of Benchset Range		Higher Value of Benchset Range	
psig	(Barg)	psig	(Barg)	psig	(Barg)
5-13	(.34-.90)	5	(0.34)	13	(0.90)
7.5-19.5	(.52-1.34)	7.5	(0.52)	19.5	(1.34)
10-26	(.69-1.79)	10	(0.69)	26	(1.79)

*Identified on nameplate (21) as “Bench” or “Input Range”.



WARNING

Do not pressurize actuator assembly (AA) beyond the “MAX ACTUATOR PRESSURE” level/value indicated on the unit’s nameplate (21). Failure to heed may cause catastrophic failure of upper casing (1) leading to flying parts.

B. Actuator Stem/Push Rod Adjustment:

1. Actuator stem/push rod linkage (8, 9, 10, 43, 43, 43, 44, 54) when properly adjusted will –
 - a. Provide the proper benchset range.
 - b. Provide 90° rotation.
 - c. Provide proper valve stem (Ranger (7), Premier (3.2)) “windup”.
2. Ensure that manual handwheel operator (MHWO) has handwheel (58.1) backed fully out by rotating CCW (viewed from above handwheel (58.1)).
3. Remove cover plate (20) by removing four screws (36).
4. Remove travel indicator dial (15) and dial lens (14) by removing the two socket head cap screws (31) securing to cover plate (13) using a 3/16" allen key wrench.
5. Units with ATO-FC (Reverse) Action:
 - a. Disconnect the lower L.H. rod end (9) from engagement with the lever arms (5) by removing shoulder bolt (40) and lock nut (46). It will be necessary to remove stem (Ranger (7), Premier (3.2)) “windup” as described in Section V.B.4.
 - b. Swing the lever arms (5) down against the travel stop screw (35); this “opens” valve plug (6)/disc (3.1).
 - c. Loosen lower upstop jam nut (43) from securing upstop washer (54); back nut (43) to the root of its threads on push rod (10).
 - d. The upper R.H. rod end (8), lower L.H. rod end (9), and push rod (10) act together as a turnbuckle; the upper end is standard right-hand threaded while the lower end is left-hand threaded. To ensure maximum and equal engagement of rod ends (8,9) to the push rod (10), it is recommended that the linkage (8,9,10) be fully engaged and then readjusted as a safety precaution.

CAUTION


Unequal engagement adjustment of rod ends (8,9) and push rod (10) can cause failure of a rod end (8,9)-to-push rod (10) connection.

- a. If this occurs during bench maintenance, the parts (8,9,10) could snap apart and cause personal injury.
- b. If this occurs during installed operation, control function would be lost.

- e. Loosen lower L.H. rod end (9) jam nut (44) by rotating CW (viewed from above); this nut (44) is “left-handed”. Back nut (44) to the root of its threads on push rod (10).
- f. Using a suitable tool to prevent lower L.H. rod end (9) from rotating, rotate push rod (10) CCW (viewed from above) until upper end of push rod (10) is fully engaged with upper R.H. rod end (8). **NOTE: If lower L.H. rod end (9) reaches full engagement with lower push rod (10) end first, remove tool securing against rotation, and allow lower L.H. rod end (9) to rotate with push rod (10).** Once upper end of push rod (10) is fully engaged with upper R.H. rod end (8), rotate lower L.H. rod end (9) CW (viewed from above) until it is fully engaged.
- g. Provide a temporary air supply with an inline adjustable airset to the actuator upper casing (1) connection.
- h. Reference the nameplate (21) attached to the cover plate (20) that is fastened to the arm housing (4). Determine the bench setting from the nameplate (21).
- i. Pressurize the actuator (AA) to the lower value of the benchset range pressure indicated on the nameplate (21).
- j. While holding lower L.H. rod end (9) out of way, lift lever arms (5) up as far as possible (this will close plug (Ranger (5))/disc (Premier (3.1))).
- k. Rotate lower L.H. rod end (9) as required to orient the holes of the rod end (9) and the lever arms (5) in the same plane. Swing lower L.H. rod end (9) between the lever arms (5).
- l. Rotate the push rod (10) CW (viewed from above) lowering the lower L.H. rod end (9) until it's hole is centered with the lever arm (5) holes. Center lever arms (5) within arm housing's (4) transverse axis; i.e. center over travel stop screw (35).
- m. Reinstall the shoulder bolt (40) through the lever arm (5) and lower L.H. rod end (9) holes. Finger-tighten lock nut (46) onto shoulder bolt (40). Using a 1/4" allen key wrench to secure the head of shoulder

bolt (40), torque wrench-tighten nut (46) to 15-20 ft-lbs (20-27 N-m).

- n. Tighten lower L.H. jam nut (44) down until locked against lower L.H. rod end (9); nut (44) is “left-handed”.
- o. Add approximately 6 psig (0.4 Barg) to the actuator's (AA) lower value of benchset range. This will extend the actuator stem/push rod sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) downwards to allow loosening double jam nuts (43) on top side of uptravel stop washer (54).

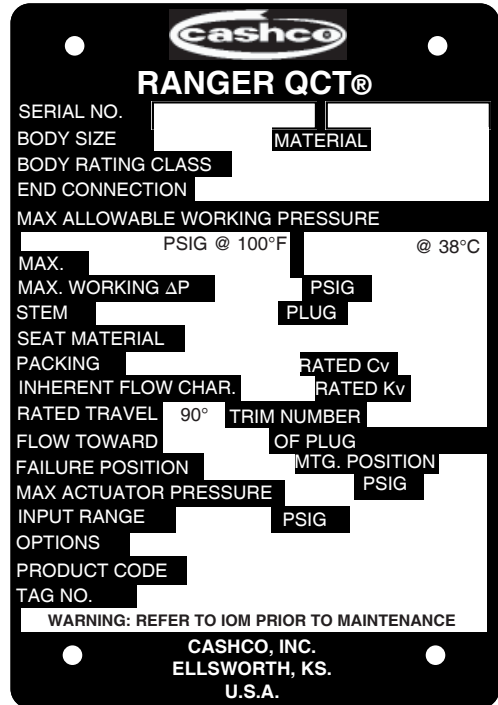

CASHCO
RANGER QCT®

SERIAL NO. [REDACTED]
BODY SIZE [REDACTED] MATERIAL [REDACTED]
BODY RATING CLASS [REDACTED]
END CONNECTION [REDACTED]
MAX ALLOWABLE WORKING PRESSURE
[REDACTED] PSIG @ 100°F [REDACTED] @ 38°C
MAX. WORKING ΔP [REDACTED] PSIG
STEM [REDACTED] PLUG [REDACTED]
SEAT MATERIAL [REDACTED]
PACKING [REDACTED] RATED Cv [REDACTED]
INHERENT FLOW CHAR. [REDACTED] RATED Kv [REDACTED]
RATED TRAVEL 90° [REDACTED] TRIM NUMBER [REDACTED]
FLOW TOWARD [REDACTED] OF PLUG [REDACTED]
FAILURE POSITION [REDACTED] MTG. POSITION [REDACTED]
MAX ACTUATOR PRESSURE [REDACTED] PSIG
INPUT RANGE [REDACTED] PSIG
OPTIONS [REDACTED]
PRODUCT CODE [REDACTED]
TAG NO. [REDACTED]
WARNING: REFER TO IOM PRIOR TO MAINTENANCE
CASHCO, INC.
ELLSWORTH, KS.
U.S.A.

- p. Release air pressure down to the lower value of benchset range.
- q. Rotate lower jam nut (43) to raise uptravel stop washers (54) until the gap clearance between the lower casing (2) and the top side of the washer (54) is 1/8"±1/16" (3mm±1.5mm).
- r. Repressurize actuator (AA) to level as indicated in Article 5.o. above. Tighten the lower of the two upper jam nuts (43) until it is tight, and secures the uptravel stop washer (54). Tighten the upper of the two upper jam nuts (43) down to secure the double jam nut (43) locking effect. Retighten lower jam nut (43) on underneath side of washer (54).
- s. Release all air pressure from actuator upper casing (1). Repressurize slowly to confirm that as the pressure reaches the lower valve of the benchset range (see Article 5.i. previous), the actuator stem/push rod sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) begins to move. If movement is prematurely occurring (i.e. movement at less than the lower benchset range

value), the length of the actuator stem sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) must be shortened. Repeat procedure from Article 5.a. through to this Article. If movement is late (i.e. movement at more than the lower benchset range value), the length of the actuator stem sub-assembly (8,9,10,43,43,43,44,54) must be lengthened (i.e. increased). Repeat procedure from Article 5.a. through to this Article. It is recommended that adjustment of actuator stem sub-assembly (8, 9, 10, 43, 43, 43, 44, 54) be made in one revolution of push rod (10) increments. Repeat as necessary.

- t. Slowly increase air pressure in upper casing (1) until reaching the higher value of the benchset range; i.e. pressurize only until plug (Ranger (5))/disc (Premier (3.1)) is in the full open position.
 - u. Release all air pressure in actuator upper casing (1). Repeat Article 5.t above and this article, cycling valve unit (AA, BA) closed-open-closed-open-closed several times.
 - v. With valve plug (Ranger (5))/disc (Premier (3.1)) in “full closed” position, reinstall travel indicator dial (15) and dial lens (14), securing with two socket head screws (31). Position dial (15) such that travel indicator (16) shows “0°” travel before fully tightening screws (31).
 - w. Completion to this point completes the benchset range adjustment. Proceed to Subsection VI.C. to adjust 90° travel stop.
6. Units with ATC-FO (Direct) Action:
- a. Disconnect the lower L.H. rod end (9) from engagement with the lever arms (5) by removing shoulder bolt (40) and lock nut (46).
 - b. Swing the lever arms (5) down and as close as possible to the travel stop screw (35); this “closes” valve plug (6) / disc (3.1). Ensure that the “closed” position is reached by observing actual plug (6) / disc (3.1) position.
 - c. Loosen lower upstop jam nut (43) from securing upstop washer (54); back nut (43) to the root of its threads on push rod (10).
 - d. The upper R.H. rod end (8), lower L.H. rod end (9), and push rod (10) act together as a turnbuckle; the upper end is standard right-hand threaded while the lower end is left-hand threaded. To ensure maximum and equal engagement of rod ends (8,9) to the push rod (10), it is recommended that

the linkage (8,9,10) be fully engaged and then readjusted as a safety precaution.



CAUTION

Unequal engagement adjustment of rod ends (8,9) and push rod (10) can cause failure of a rod end (8,9)-to-push rod (10) connection.

- a. **If this occurs during bench maintenance, the parts (8,9,10) could snap apart and cause personal injury.**
- b. **If this occurs during installed operation, control function would be lost.**

- e. Loosen lower L.H. rod end (9) jam nut (44) by rotating CW (viewed from above); this nut (44) is “left-handed”. Back nut (44) to the root of its threads on push rod (10).
- f. Using a suitable tool to prevent lower L.H. rod end (9) from rotating, rotate push rod (10) CCW (viewed from above) until upper end of push rod (10) is fully engaged with upper R.H. rod end (8). **NOTE: If lower L.H. rod end (9) reaches full engagement with lower push rod (10) end first, remove tool securing against rotation, and allow lower L.H. rod end (9) to rotate with push rod (10).** Once upper end of push rod (10) is fully engaged with upper R.H. rod end (8), rotate lower L.H. rod end (9) CW (viewed from above) until it is fully engaged.
- g. Provide a temporary air supply with an inline adjustable airset to the actuator upper casing (1) connection.
- h. Reference the nameplate (21) attached to the cover plate (20) that is fastened to the arm housing (4). Determine the bench setting from the nameplate (21).
- i. Rotate lower L.H. rod end (9) until the rod end (9) and the lever arm’s (5) holes are in the same plane.
- j. Loosen jam nut (45) and rotate downtravel stop screw (35) out by rotating CCW (viewed from below screw’s (35) head) until just barely engaged in arm housing (4).
- k. Pressurize actuator (AA) to the higher value of the benchset range pressure indicated on the nameplate (21), while “guiding” the lower L.H. rod end (9) hub to its proper position between the lever arms (5).
- l. Pressurize actuator (AA) to a level as indicated by “C” pressure in table below according to the formula: “A” + “B” = “C”.

Benchset Range	Higher Value of Benchset Range - "A"	Adder Value - "B"	Loading Pressure - "C"
_ psig	_ psig	2 psig	_ psig
_ Barg	_ Barg	.14 Barg	_Barg

- m. Adjust the push rod (10) by rotating CW (viewed from above) until the holes of the lever arms (5) and the lower L.H. rod end (9) are centered and the valve is in the "closed" position.
- n. Reinstall the shoulder bolt (40) through the lever arm (5) and lower L.H. rod end (9) holes. Finger-tighten lock nut (46) onto shoulder bolt (40). Using a 1/4" allen key wrench to secure the head of shoulder bolt (40), torque wrench-tighten nut (46) to 15-20 ft-lbs (20-27 N-m).
- o. Loosen double jam nuts (43,43) on top side of uptravel stop washer (54).
- p. With valve in "closed" position, reinstall travel indicator dial (15) and dial lens (14), securing with two socket head screws (31). Position dial (15) such that travel indicator (16) shows "0°" travel (no "bright orange" showing from indicator (16)) before fully tightening screws (31).
- q. Fully release air pressure in actuator (AA). Observe position of valve on travel indicator (16). Travel should be short of "full open"; i.e. 90° rotation.
 - 1. Travel short of 90°. Adjust the push rod (10) by rotating CCW (viewed from above) until the travel reaches 90° as shown by travel indicator (16).
 - 2. Travel beyond 90°. Adjust the push rod (10) by rotating CW (viewed from above) until the travel is reduced to 90° as shown by the travel indicator (16).
- r. Rotate lower jam nut (43) to raise uptravel stop washers (54) until the gap clearance between the lower casing (2) and the top side of the washer (54) is 1/8"±1/16" (3mm±1.5mm).
- s. Re-pressurize actuator (AA) to upper value of benchset range. Tighten the lower of the two upper jam nuts (43) until it is tight, and secure the uptravel stop washer (54). Tighten the upper of the two upper jam nuts (43) down to secure the double jam nut (43) locking effect. Retighten lower jam nut (43) on underneath side of washer (54).
- t. Tighten lower L.H. jam nut (44) down until locked against lower L.H. rod end

(9); nut (44) is "left-handed".

- u. For Premier EZO and Premier Unlined ONLY. Reference VI.C.2. for procedure to adjust downtravel stop screw (35).
- v. Release all air pressure in actuator upper casing (1). Repeat loading-unloading to cycle the valve unit (AA, BA). Repeat adjustments as necessary.
- w. Completion to this point completes the benchset range adjustment. Proceed to the next subsection (VI.C.) to adjust 90° travel stop, if necessary.

C. 90° Rotation Adjustment:

1. Units with ATO-FC (Reverse) Action:

- a. Pressurize actuator (AA) to the higher value of benchset range. This pressure should cause 90° rotation as shown by travel indicator (16).
 - 1. Travel short of 90°. Hub of lower L.H. rod end (9) may be touching on downtravel stop screw's (35) upper end.
 - a. Loosen jam nut (45).
 - b. Rotate downtravel stop screw (35) CCW (viewed from below screw (35)) until 90° rotation is reached on the travel indicator (16).
 - c. Retighten jam nut (45).
 - 2. Travel beyond 90°. Hub of lower L.H. rod end (9) may or may not be touching on downtravel stop screw's (35) upper end.
 - a. Loosen jam nut (45) about four revolutions.
 - b. Very slowly release air pressure into actuator (AA) until travel indicator (16) is showing at 90°.
 - c. Rotate downtravel stop screw (35) CW (viewed from below screw (35)) until the screw's (35) upper edge touches the hub of lower L.H. rod end (9).
 - d. Retighten jam nut (45).

2. Units with ATC-FO (Direct) Action:

- a. Loosen jam nut (45).
- b. Rotate downtravel stop screw (35) CW (viewed from below screw (35)).
- c. Pressurize actuator (AA) slowly until the travel indicator (16) indicates that travel is at 0°; the valve should be in the "fully closed" position.
- d. Adjust gap between downtravel stop screw (35) and hub of lower L.H. rod end (9) as indicated in following table.
- e. Retighten jam nut (45).

Product Model	Gap Between L.H. Rod End (9) and Downtravel Stop Screw (35)
Ranger QCT	1/8" ± 1/16" (3.0 mm ± 1.5 mm)
Premier EZO	1/16" ± 1/16" (1.5 mm ± 1.5 mm)
Premier Unlined	No gap; i.e. touching

SECTION VII

VII. TROUBLE SHOOTING GUIDE

Reference the IOM of the valve body which this actuator is unitized with for additional information on Trouble Shooting.

1. Air leakage.

Possible Causes	Remedies
A. Leakage at diaphragm-to-upper casing flange.	A1. Overpressure. Check source of air supply and determine if pressure is greater than indicated in Table 1; reset airtset pressure as required. A2. Tighten casing flange bolting (27, 28, 41 & 42).
B. Leakage at handwheel gland-to-upper case.	B. Faulty O-ring (62); replace O-ring.
C. Leakage at manual handwheel threads.	C. Faulty thread seal (61); replace thread seal.
D. Leakage around stem on side where yoke bolts to arm housing.	D1. Failure of diaphragm (6); replace diaphragm. D2. Faulty seal (56); replace seal.

SECTION VIII

VIII. ORDERING INFORMATION

NEW REPLACEMENT UNIT vs PARTS "KIT" FOR FIELD REPAIR

To obtain a quotation or place an order, please retrieve the Serial Number and Product Code that was stamped on the metal name plate and attached to the unit. This information can also be found on the Bill of Material ("BOM"), a parts list that was provided when unit was originally shipped. (Serial Number typically 6 digits). Product Code typical format as follows: (last digit is alpha character that reflects revision level for the product).

□□□□ - □□□□ 7 - □□□□□□□□□□

PARTS "KIT" for FIELD REPAIR:

Contact your local Cashco, Inc., Sales Representative with the Serial Number and Product code. Identify the parts and the quantity required to repair the unit from the "BOM" sheet that was provided when unit was originally shipped.

NOTE: Those part numbers that have a quantity indicated under "Spare Parts" in column "A" reflect minimum parts required for inspection and rebuild, - "Soft Goods Kit". Those in column "B" include minimum trim replacement parts needed plus those "Soft Goods" parts from column "A".

If the "BOM" is not available, refer to the cross-sectional drawings included in this manual for part identification and selection.

A Local Sales Representative will provide quotation for appropriate Kit Number, Price and Availability.

NEW REPLACEMENT UNIT:



Contact your local Cashco, Inc., Sales Representative with the Serial Number and Product code. With this information they can provide a quotation for a new unit including a complete description, price and availability.



CAUTION

Do not attempt to alter the original construction of any unit without assistance and approval from the factory. All purposed changes will require a new name plate with appropriate ratings and new product code to accommodate the recommended part(s) changes.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such product at any time without notice. Cashco, Inc. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Cashco, Inc. product remains solely with the purchaser.

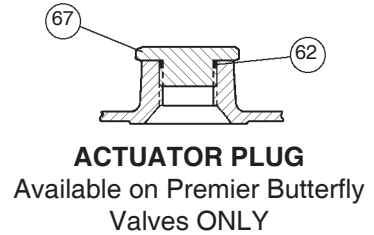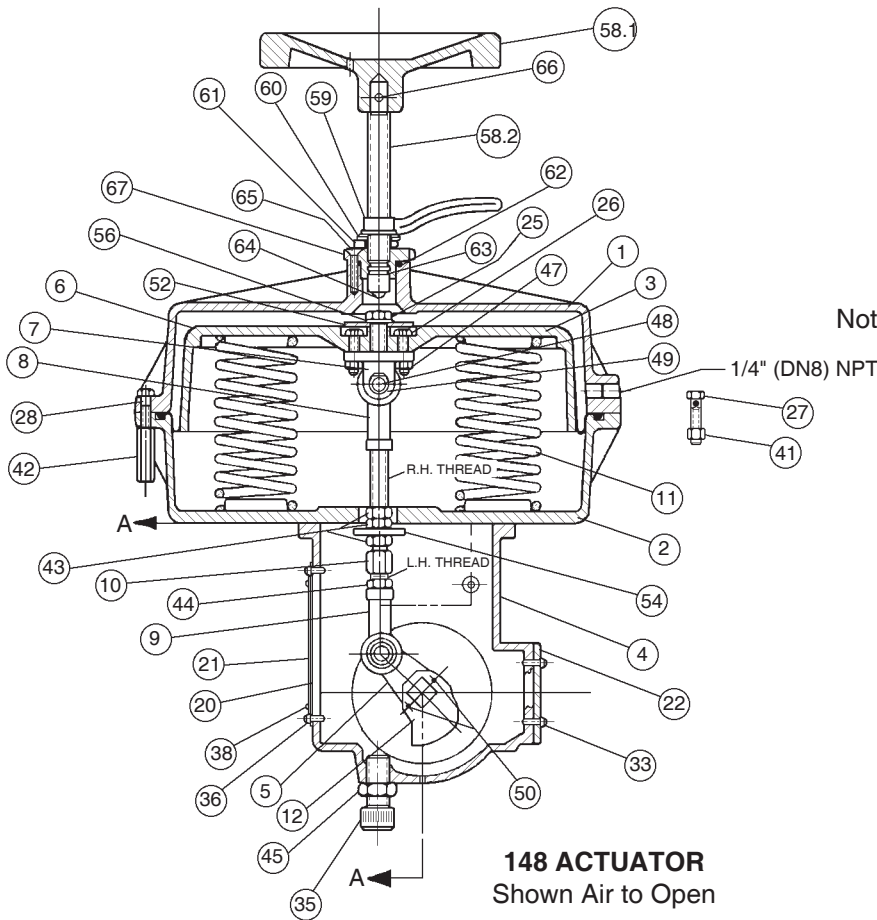


148 ACTUATOR
Shown Air to Open


ITEM NO. DESCRIPTION

- 1. Upper Case
- 2. Lower Case
- 3. Piston
- 4. Arm Housing
- 5. Arm
- 6. Diaphragm
- 7. Clevis
- 8. Rod End (R.H.)
- 9. Rod End (L.H.)
- 10. Push Rod
- 11. Spring
- 12. Cam
- 13. Cover Plate
- 14. Dial Lens
- 15. Travel Indicator Dial
- 16. Travel Indicator
- 17. Indicator Spacer
- 18. Ball Bearing
- 20. Cover Plate
- 21. Name Plate
- 22. Housing Cover
- 23. Dust Cover Plate
- 24. Stem Spacer
- 25. Pivot Screw
- 26. Hex. Head Cap Screw
- 27. Hex. Head Cap Screw
- 28. Hex. Head Cap Screw
- 29. Hex. Head Cap Screw
- 31. Button Head Cap Screw
- 32. Button Head Cap Screw
- 33. Socket Head Cap Screw
- 34. Button Head Cap Screw
- 35. Socket Head Stop Screw
- 36. Fillister Head Machine Screw
- 37. Fillister Head Machine Screw



ITEM NO. DESCRIPTION

- 38. Drive Screw
- 39. Set Screw
- 40. Bolt Shoulder
- 41. Nut
- 42. Extension Nut
- 43. Jam Nut
- 44. Jam Nut (L.H.)
- 45. Jam Nut
- 46. Lock Nut
- 47. Nut
- 48. Clevis Pin
- 49. Retaining Ring
- 50. Spring Pin
- 51. Spring Pin
- 52. Diaphragm Washer
- 54. Stop Washer
- 55. Internal Lock Tooth Washer
- 56. Seal
- 57. Retaining Ring
- 58. Handwheel Subassembly or Adjusting Screw
- 59. Locking Lever or Nut
- 60. Washer
- 61. Thread Seal
- 62. O-Ring (Gland to Upper Case)
- 63. O-Ring (Handwheel to Gland)
- 64. Ball
- 65. Self-Tapping Screw
- 66. Pin (Spring)
- 67. Handwheel Gland or Actuator Plug

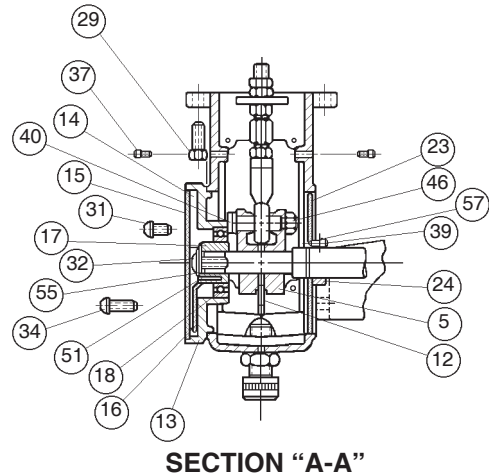


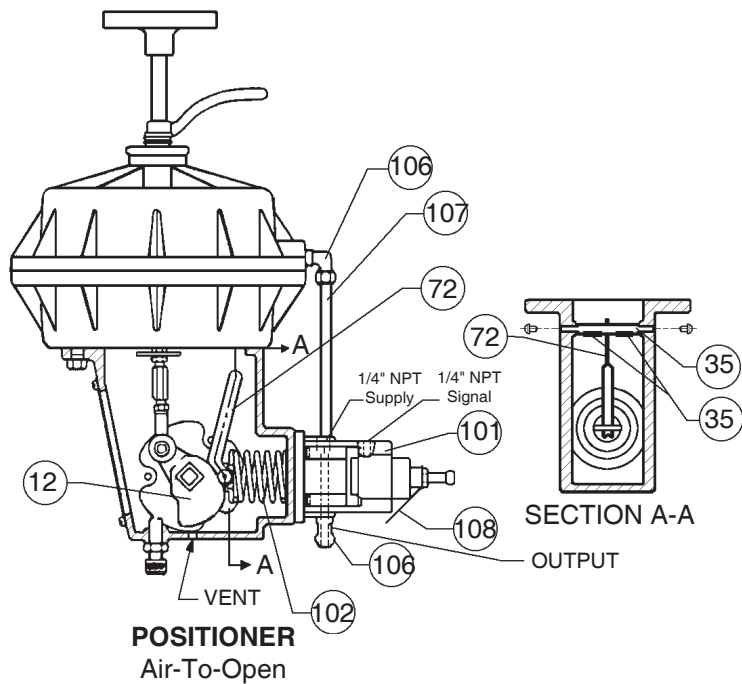


POSITIONER
Air-To-Open

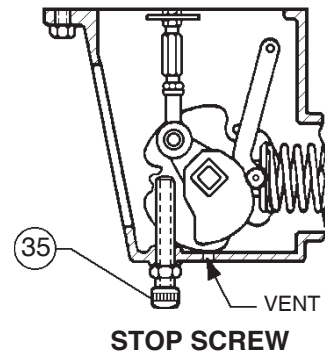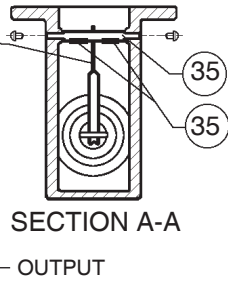

STOP SCREW

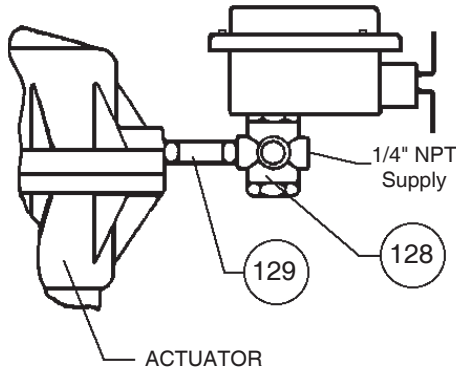

SOLENOID VALVE

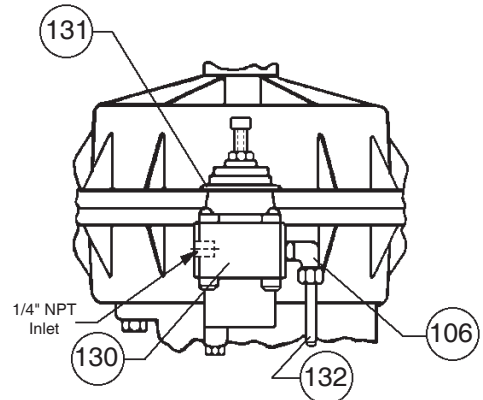

AIR SUPPLY REGULATOR

73N-B POSITIONER	
ITEM NO.	DESCRIPTION
72	Feedback Linkage Subassembly
73	Feedback Linkage Spacer
74	Feedback Linkage Pivot Shaft
101	Positioner
102	Range Spring
106	Tube Fitting (Elbow)
107	Output Tube
108	Name Plate

SOLENOID VALVE	
ITEM NO.	DESCRIPTION
128	Solenoid Valve
129	Nipple

AIR SUPPLY REGULATOR	
ITEM NO.	DESCRIPTION
130	Air Supply Regulator
131	Mounting Bracket
132	Supply Tube

GAUGES (Not Shown)	
ITEM NO.	DESCRIPTION
135	Signal Gauge
137	Output Gauge
138	Branch Tee
139	Reducing Bushing

Алматы (7273)495-231
 Ангарск (395)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Оренбург (3532)37-68-04
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Серанск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-78-97
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47